

Assembly Directions for Porch Rocker

#PR2545



HARDWARE PACKAGE

 
- 18 3" Screws
- 4 4" Socket Wafer Lags
- 1 $\frac{5}{32}$ x 1" Allen Drive Bit

TOOLS NEEDED

- Cordless Drill/Screwdriver
- #2 Square Drive bit

PACKAGE CONTENTS

- 2 Arm Assemblies
- 2 Runners
- 1 Back
- 1 Seat
- 1 Hardware Package
- 1 Long Footrest
- 1 Short Footrest
- 1 Top Back Support



Use to measure bolts

Attach the rocker runners to legs by inserting bottom of leg into pre-drilled mortise in runner. Then fasten the leg to the runner by screwing in (2) 4" socket wafer lags into the pre-drilled holes in bottom side of runner.

STEP#1



(A) Place the rocker seat in mortise in back leg and mortise in front leg and fasten in place with (4) 3" screws. ***PLEASE NOTE PLACE WIDE END OF SEAT IN FRONT***

STEP#2



(B) Place the rocker back into the mortises located on the back leg of rocker and fasten in place with (2) 3" screws.

(A) Place top back support into mortise in back leg and fasten in place with (1) 3" screw.

STEP#3



(B) Place the long footrest in mortise in the front leg and the short footrest in mortise in back leg and fasten each footrest to leg with (1) 3" screw.

Attach the remaining unfastened parts by repeating STEP#2 & STEP #3.

STEP#4

Your Rocker is Complete!

