

MAD Adirondack Chair
(280)



SEASIDE CASUAL




ASSEMBLY INSTRUCTIONS

1

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.
Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.

Tools Required: 4mm Allen Wrench (included); #2 Phillips Head Screwdriver; #3 Phillips Head Screwdriver.

Back Assembly

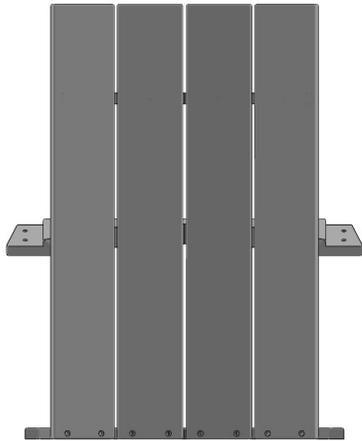


x 1

Seat Assembly




x 1

Front Leg Assemblies



x 1

Right & Left Arm Assemblies

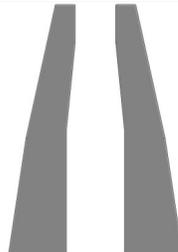

x 1

4mm Allen Wrench

Actual Size




Part Code: 4MMALLEN

x 1

50mm Connector Bolt

Actual Size



Part Code: 316-1/4-20-50B

x 8

1-3/4" Phillips Head Screw

Actual Size




Part Code: 316-8X1-3/4PFDS

x 6

1" Phillips Pan Head Screw


Actual Size




Part Code: 316-1/4-20-1PPMS

x 4


WARRANTY QUESTIONS OR COMMENTS PLEASE CALL TOLL FREE AT 1-800-809-3114

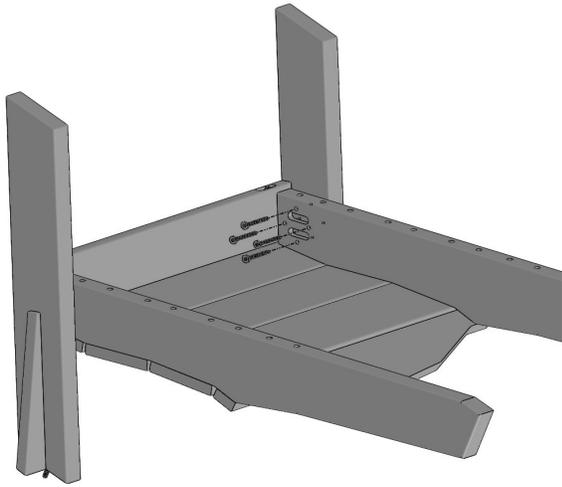2**ATTACH LEGS TO SEAT ASSEMBLY**


Align Front Leg Assemblies with Seat Assembly. Secure using (8) 50 mm Connector Bolts thru threaded inserts in Legs using a 4mm Allen wrench.

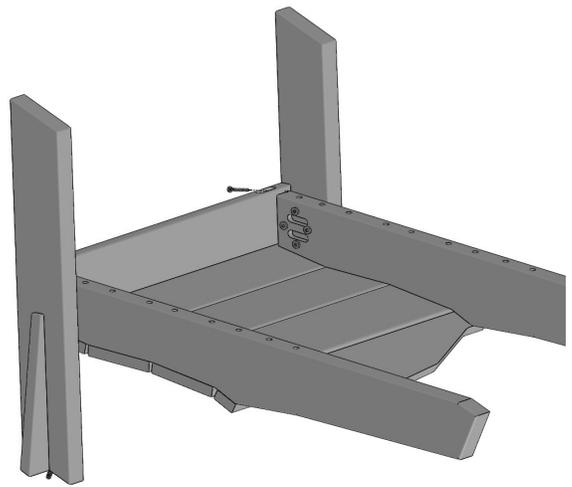3**ATTACH SEAT APRON TO LEGS**

Attach front apron of Seat Assembly to Front Legs with (2) 1-3/4" Phillips Head Screws as shown using a #2 Phillips head screwdriver.

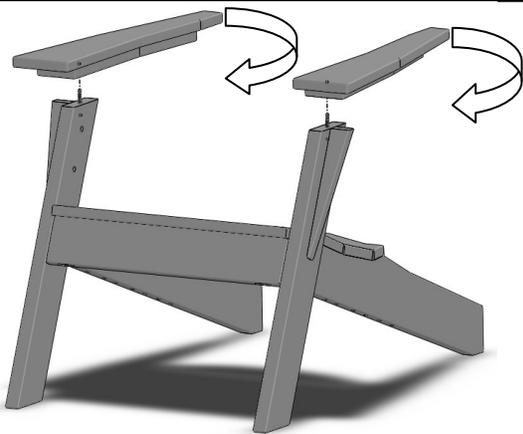4**ATTACH ARMS TO FRONT LEGS**

Align threaded insert in front of Arm Assemblies with hanger bolt in front legs. Spin clockwise until aligned and tight.

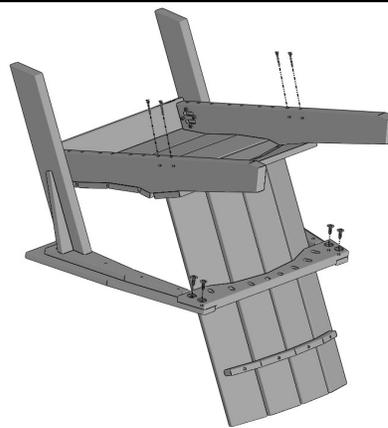5**ATTACH BACK ASSEMBLY**

Align Back Assembly as shown. Secure using (4) 1" Phillips Pan Head Screws from upper yoke into Arms using a #3 Phillips head screwdriver, and (4) 1-3/4" Phillips Head Screws from seat support into lower yoke using a #2 Phillips head screwdriver.