




Hardware  
6 - 2" Screws  
12 - 1 1/2" Screws

Tools Required



#2 Square Drive Bit  
(Not Included)




Cordless Drill  
(Not Included)



Back Cross Pc. x1

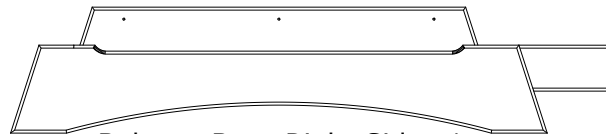


Balcony Base Right Side x1

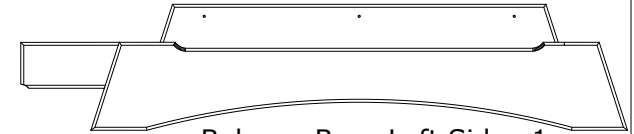


Balcony Base Left Side x1


Footrest x1





1. Attach Back Cross Pc. to  
Balcony Base using  
6 - 1 1/2" Screws in predrilled  
Pocket Holes.

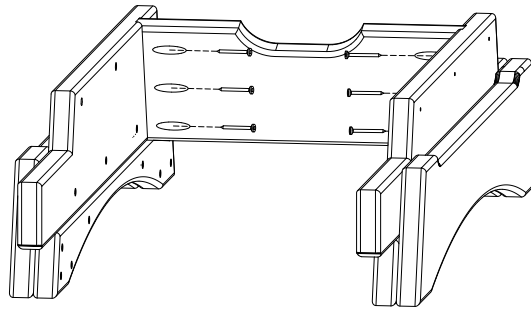


2. Attach Footrest to  
Balcony Base using 6 - 2" Screws  
in predrilled Holes.

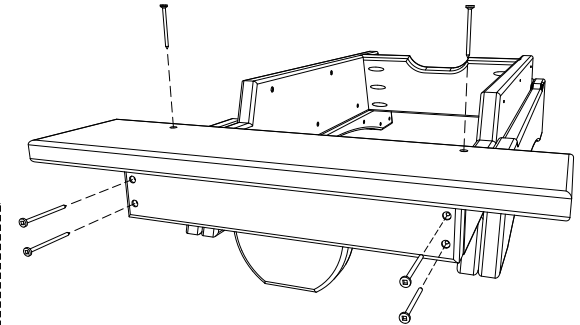

3. Position Glider on Balcony Base,  
Attach Balcony Base using 3 - 1 1/2"  
Screws per side in predrilled Holes.

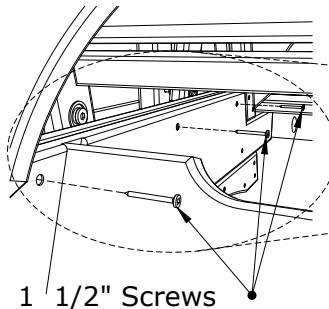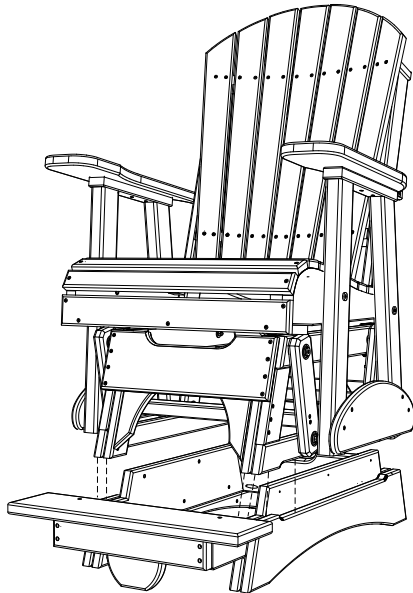

1 1/2" Screws

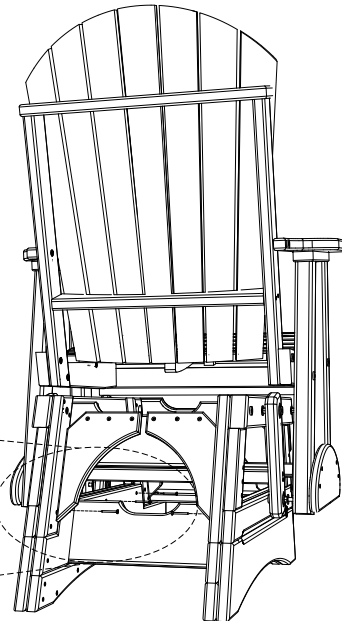

2 Balcony Base Assembly Instructions

11/25/ 2024

R.M.