

CAFÉ FUSION DINING CHAIR

316 (Bar Height Frame)

318 (Dining Height Frame)




319 (Slats)




COASTLINE CASUAL
11 Industrial Drive
Coventry, Rhode Island 02816

ASSEMBLY INSTRUCTIONS

1 PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING. Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.

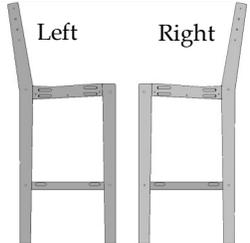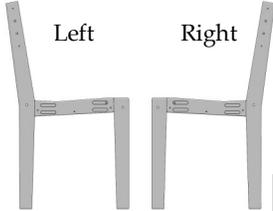
316		318		319	
Left & Right Sides  <p>Left Right</p> <p>x 1ea</p>	Stretchers & Aprons Front Apron & Rear Lower  X 2 Rear Apron  X 1 Foot Rest  X 1	Left & Right Sides  <p>Left Right</p> <p>x 1ea</p>	Aprons Front  Rear  <p>x 1ea</p>	Seat Assembly  <p>x 1</p>	Back Slats  <p>x 2</p>
5/16" Nylon Dowel  <p>Part Code: NYLON-5/16X1-1/8D</p> <p>x 4</p>	80mm Hex Lag (Actual Size)  <p>316 x 8 318 x 4</p> <p>Part Code: 316-1/4-10-80HL</p>	5/8" tap® (Actual Size)  <p>316 x 8 318 x 8</p> <p>Part Code: TAP-5/8</p>	4mm Allen Wrench (Actual Size)  <p>Part Code: 4MMALLEN</p> <p>x 1</p>		
	1-3/4 Phillips Head Screw (Actual Size)  <p>316 x 18 318 x 14</p> <p>Part Code: 316-8x1-3/4PFDS</p>	3/8" tap® (Actual Size)  <p>x 4</p> <p>Part Code: TAP-3/8</p>			

2 ATTACH APRONS TO SIDE ASSEMBLIES

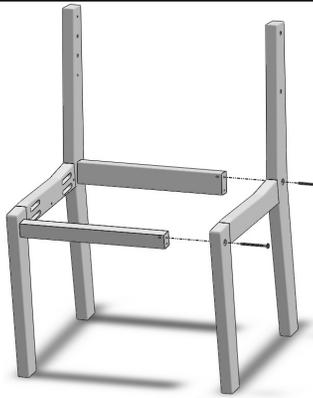


Attach front and rear aprons to Side Assemblies as shown, with the pockets of the aprons facing down using (4) 80mm Hex Lags through counter-bored holes in Legs.

3 ATTACH BACK SLATS TO REAR LEGS

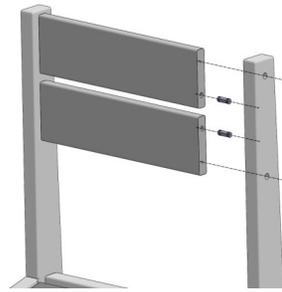


Tap 5/16" dowels into large holes in back slats. Align with large holes in rear legs. Secure with 1-3/4" Phillips head screws through 3/8" counter-bore in Rear Legs into pilot holes in back slats.

4 SEAT TO SIDE ASSEMBLIES

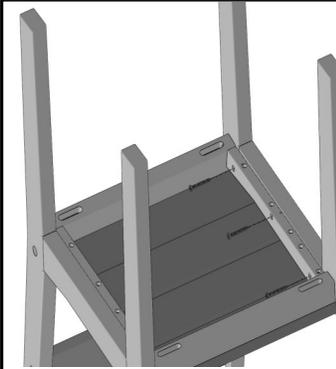


Align seat assembly with frame. Secure using 1-3/4" Phillips head screws through countersink holes on inside of seat assembly into pilot holes in side assemblies.

5 SECURE APRONS TO LEGS

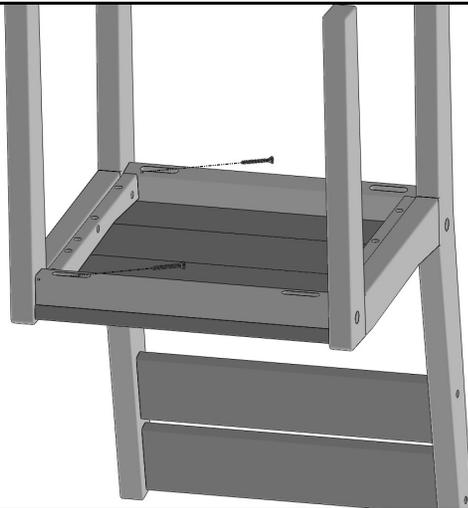

At this time make sure lags from step 2 are tight. Rotate rear apron to align with angle on seat support, and make sure front apron is parallel with front leg. Secure aprons with 1-3/4" Phillips head screws through the pockets on underside of aprons into legs.

6 ATTACH FOOTREST AND LOWER REAR STRETCHER (316 ONLY)

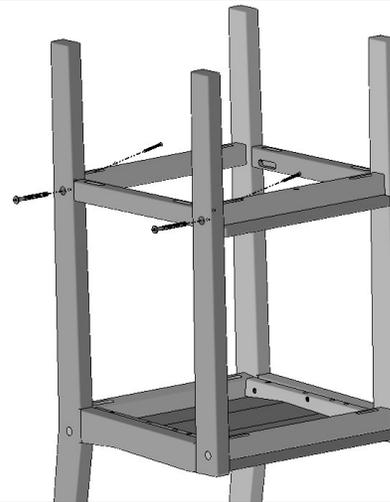

Attach Foot Rest and Rear Stretcher as shown, with pockets of Stretchers facing down, using (4) 80mm Hex Lags through counter-bored holes in Legs. Align straight, then secure using (4) 1-3/4" screws through pockets on underside of Foot Rest and Rear Stretcher.

7 PLUG ALL HOLES WITH PROVIDED 5/8" AND 3/8" taps™