

CAFE FUSION DINING TABLE

322 (Dining Base)

325 (Bar Base)

323 (Round Top)

324 (Square Top)

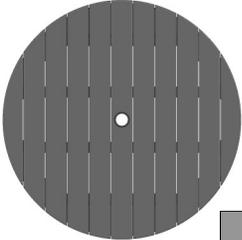
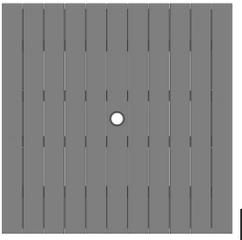
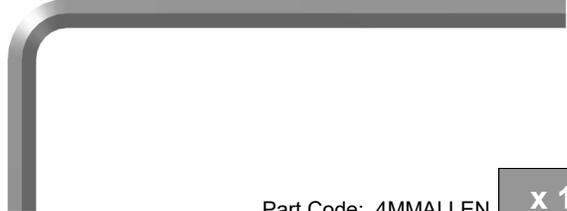
COASTLINE CASUAL
11 Industrial Drive
Coventry, Rhode Island 02816



ASSEMBLY INSTRUCTIONS

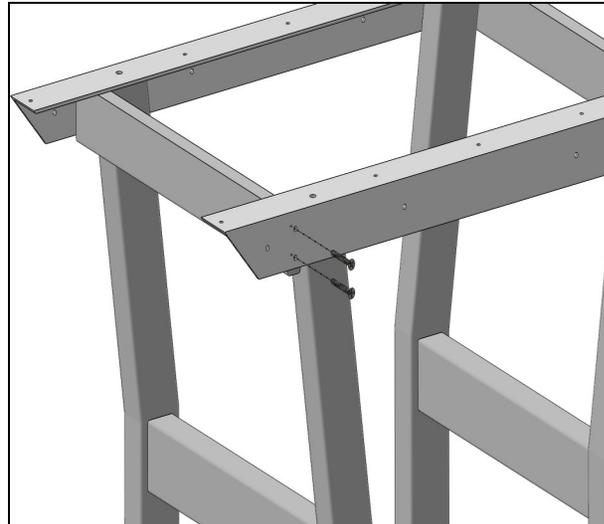
1 PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING. Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.

Required Tools: Phillips Head Screwdriver (not included) 4mm Allen Key (included)

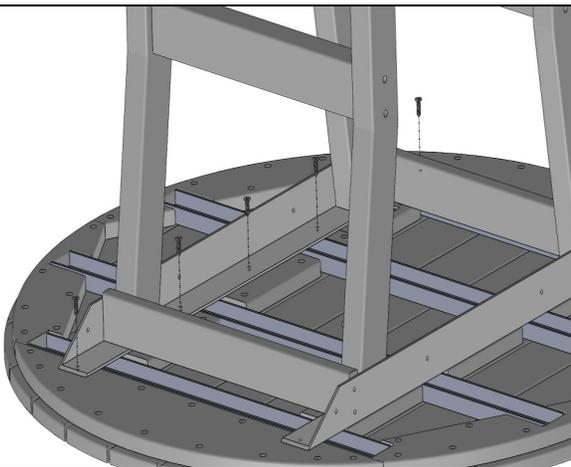
<p>323</p> <p>Table Top</p>  <p>x 1</p>	<p>324</p> <p>Table Top</p>  <p>x 1</p>	<p>80mm Hex Lag (Actual Size)</p>  <p>Part Code: 316-1/4-10-80HL x 16</p>	<p>3/4" Pan Head (Actual Size)</p>  <p>Part Code: 316-8x3/4PTS x 18</p>
<p>322 & 325</p>		<p>1-3/4 Phillips Head Screw (Actual Size)</p>  <p>Part Code: 316-8x1-3/4PFDS x 8</p>	<p>5/8" tap® (Actual Size)</p>  <p>Part Code: TAP-5/8 x 16</p>
<p>Leg Assemblies</p>  <p>x 2</p>	<p>Stretchers</p>  <p>322 x 2 325 x 4</p>	<p>Aprons</p>  <p>x 2 ea</p>	<p>4mm Allen Wrench (Actual Size)</p>  <p>Part Code: 4MMALLEN x 1</p>

2**ATTACH STRETCHERS TO LEG ASSEMBLIES**

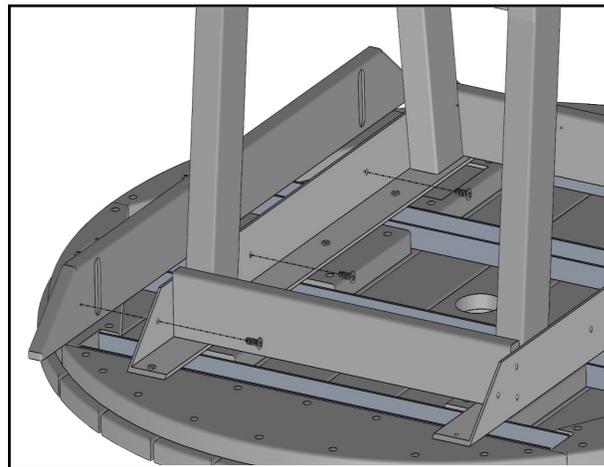
Attach Stretchers to legs through counter-bored holes in legs into pilot holes in stretchers using 80mm hex lags.

3**ATTACH SHORT APRONS**

Attach short aprons to aluminum using 1-3/4" phillips head deck screws through holes in aluminum into pilot holes in short aprons.

4**ATTACH BASE TO TABLE TOP**

Align aluminum from base assembly with cleats on table top assembly. Secure using 3/4" pan head screws through holes in aluminum.

5**ATTACH LONG APRONS**

Align pockets in long aprons with protruding screw heads from step 3. Secure using 3/4" pan head screws.

6**PLUG ALL HOLES WITH PROVIDED 5/8" taps®**