






**Hardware**  
 16 - 2 1/2" Screws  
 16 - 2" Screws  
 100 - 1 1/2" Screws  
 2 - 2-1/4" T Bolts


#2 Square Drive Bit  
 (Not Included)




Cordless Drill  
 (Not Included)

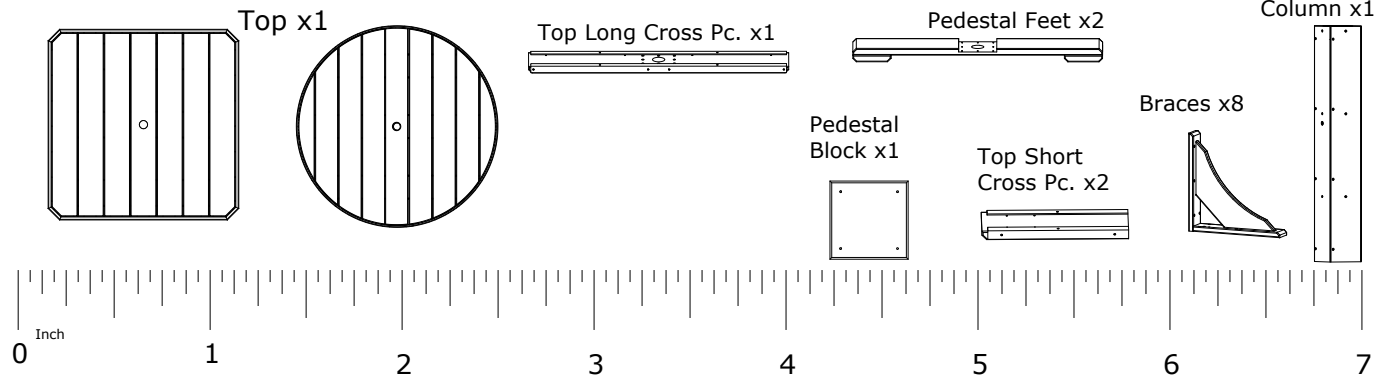


1. Position Pedestal Column with Umbrella hole facing down on Counter and Bar Height Tables. Attach Pedestal Feet to Pedestal Column using 8 - 2 1/2" Screws in predrilled holes.

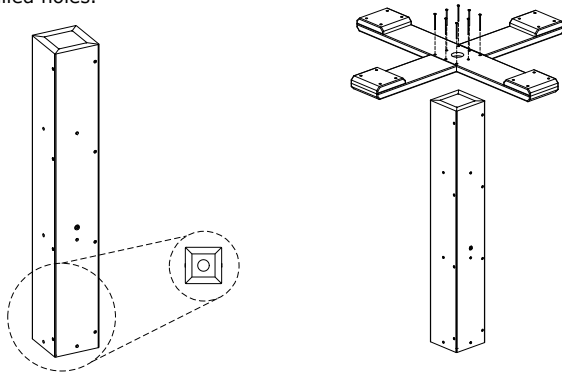


2. Align Pedestal Block in center of Pedestal Feet. Attach Pedestal Block using 4 - 1 1/2" Screws.

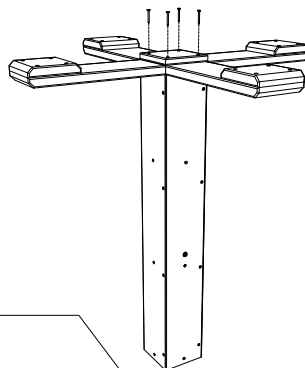

3. Attach Brace's to Pedestal Column using 12 - 1 1/2" Screws per Brace in predrilled holes.

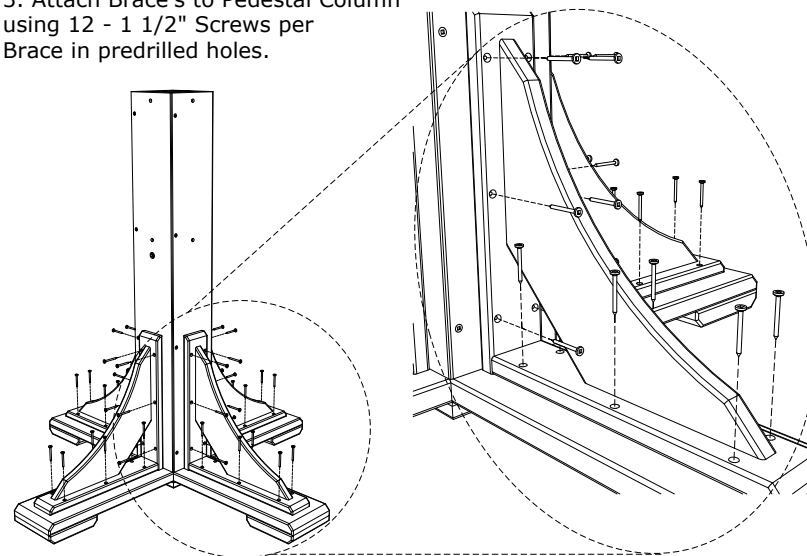

4. Attach Brace's to top of Pedestal Column using 6 - 1 1/2" Screws per Brace, Be sure to center Brace on Column & keep top side flush with Pedestal Column.

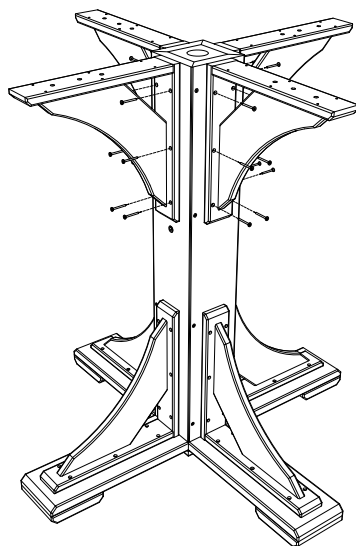

4' Round and 41" Square Poly Table Assembly  
 Instructions


02/13/ 2025

R.M.




5. Align Top Long Cross Piece with Pedestal Column & Braces, Note Umbrella hole must align with hole in Pedestal Column, Attach using 8 - 2 1/2" Screws for Pedestal Column & 12 - 1 1/2" Screws for Braces. Be sure to match all Numbers.


1 1/2" Screws

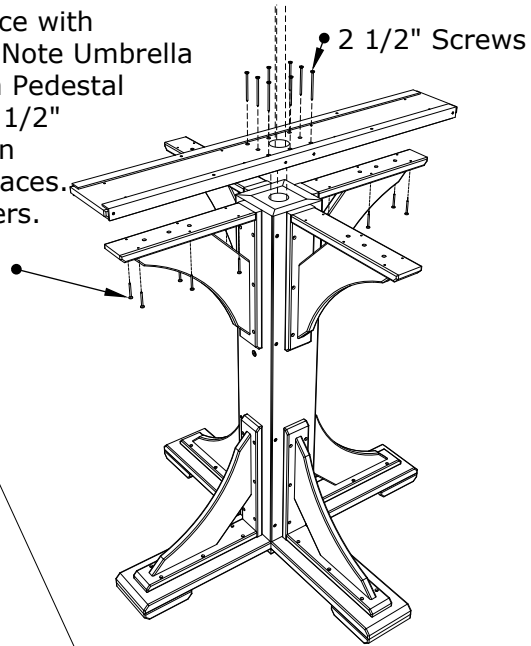


6. Align Top Short Crosspieces with Braces keeping back end flush with Top Long Crosspiece Attach using 12 - 1 1/2" Screws. Make sure that Aluminum is on top side.

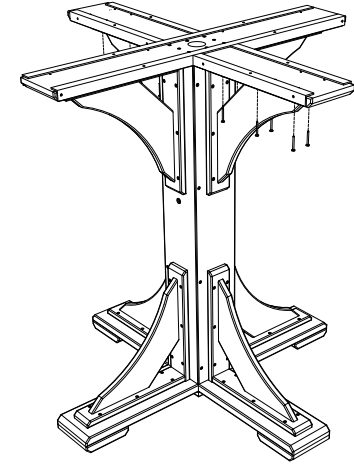

7. Set Top on Pedestal Aligning Crosspieces and Umbrella Holes as shown. Attach Top using 16 - 2" Screws in predrilled holes. Be sure to match all Letters.

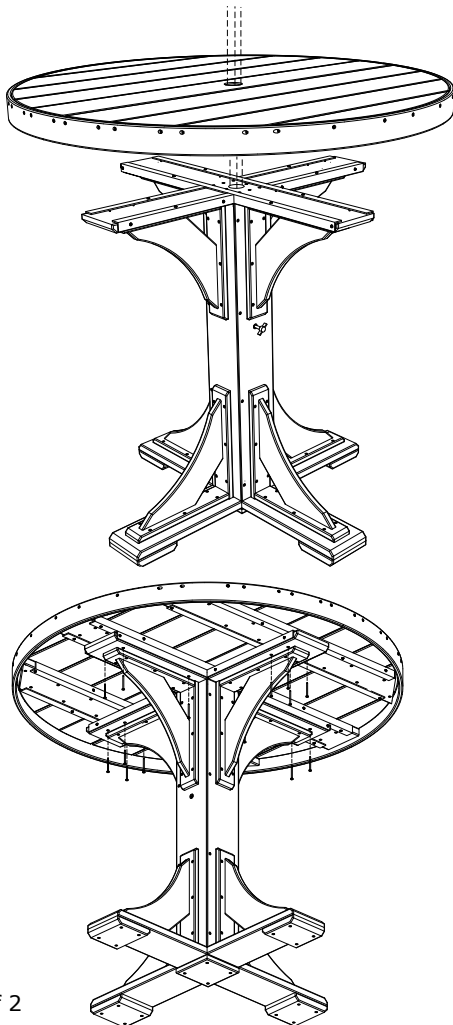

8. Tighten T Bolts to add stability to Umbrella.

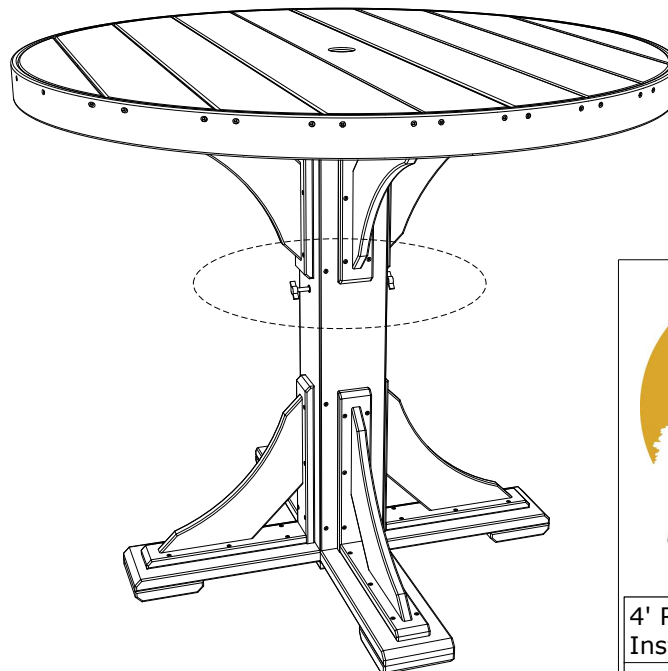

4' Round and 41" Square Poly Table Assembly Instructions

02/13/ 2025

R.M.