



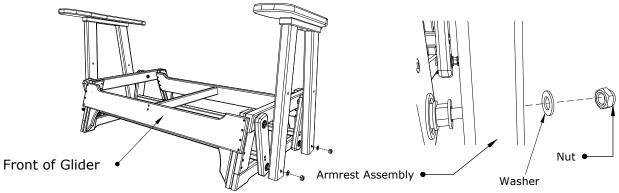

4. Attach Armrests to Glider Base using 2-Washers & 2-Nuts per side, be sure to match all letters. "Assembly order is Armrest Assembly-Washer-Nut"




6. Attach Back Assembly to Seat Assembly using 4 -2" Wafer Bolts, be sure to Match all letters, tighten Wafer Bolts with included Hex Key.

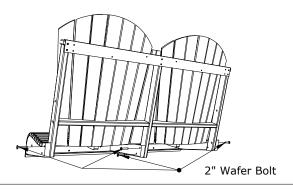


7. Attach Back-Seat Assembly to Armrests using

2" Wafer Bolt 2 1/2" Wafer Bolt

1 - 3 1/2" Wafer Bolt 1 - 2 1/2" Wafer Bolt & 1 - 2" Wafer Bolt per side, be sure to match all letters, tighten Wafer Bolts with included Hex Key.

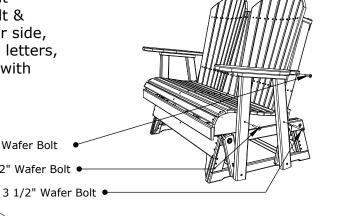

8. Attach Lintels to Armrest Assemblies using 4 - 2" Screws per side, be sure to match all letters.

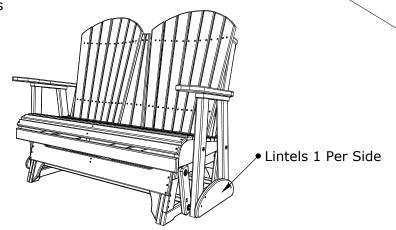



4' Adirondack Poly Glider Assembly Instructions

11/13/ 2024

R.M.