





Tools Required

#2 Square Drive Bit
(Not Included)




Cordless Drill
(Not Included)

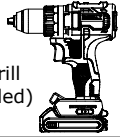


Hardware
6 - 2" Screws
12 - 1 1/2" Screws




Balcony Base Right Side x1

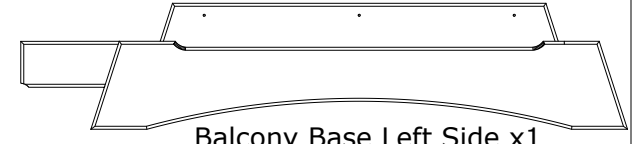

Balcony Base Left Side x1



Back Cross Pc. x1





Footrest x1



1. Attach Back Cross Pc. to
Balcony Base using
6 - 1 1/2" Screws in predrilled
Pocket Holes.

2. Attach Footrest to
Balcony Base using 6 - 2" Screws
in predrilled Holes.

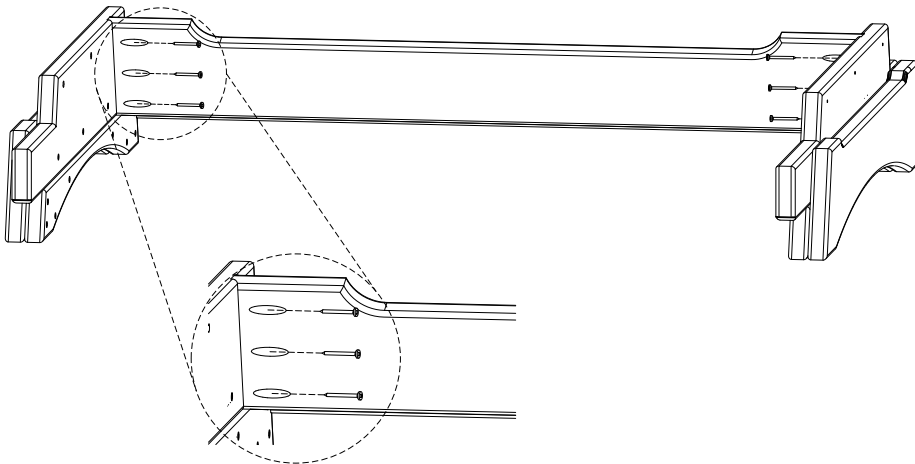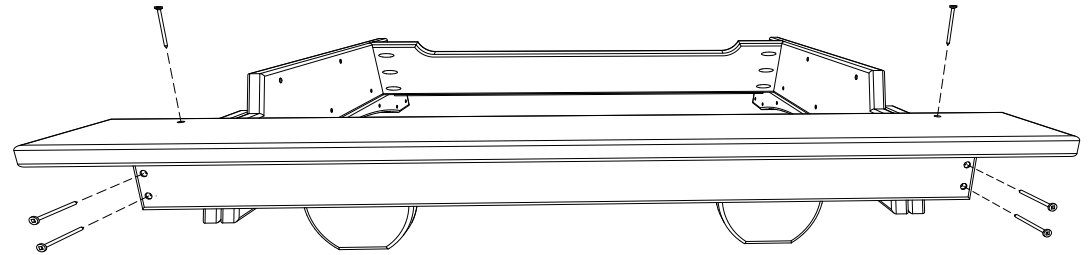




4 Balcony Base Assembly Instructions

11/25/ 2024

R.M.



3. Position Glider on Balcony Base,
Attach Balcony Base using 3 - 1 1/2"
Screws per side in predrilled Holes.

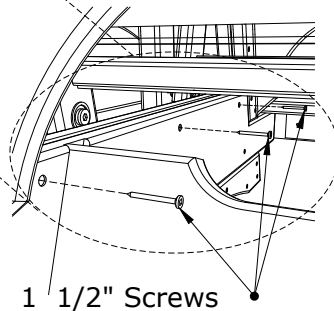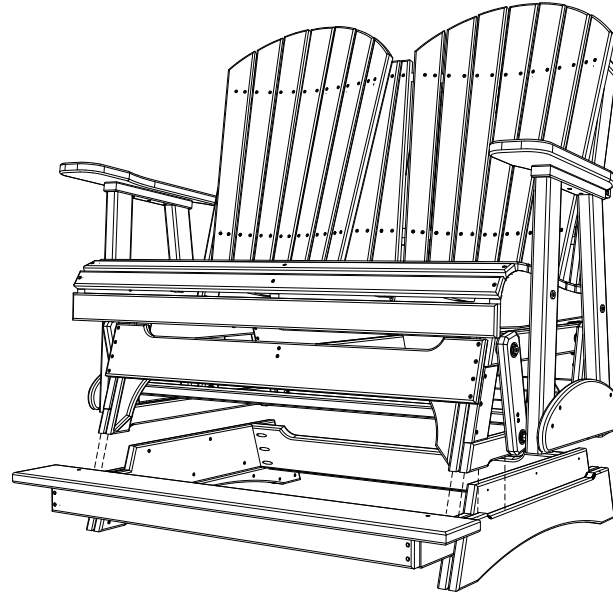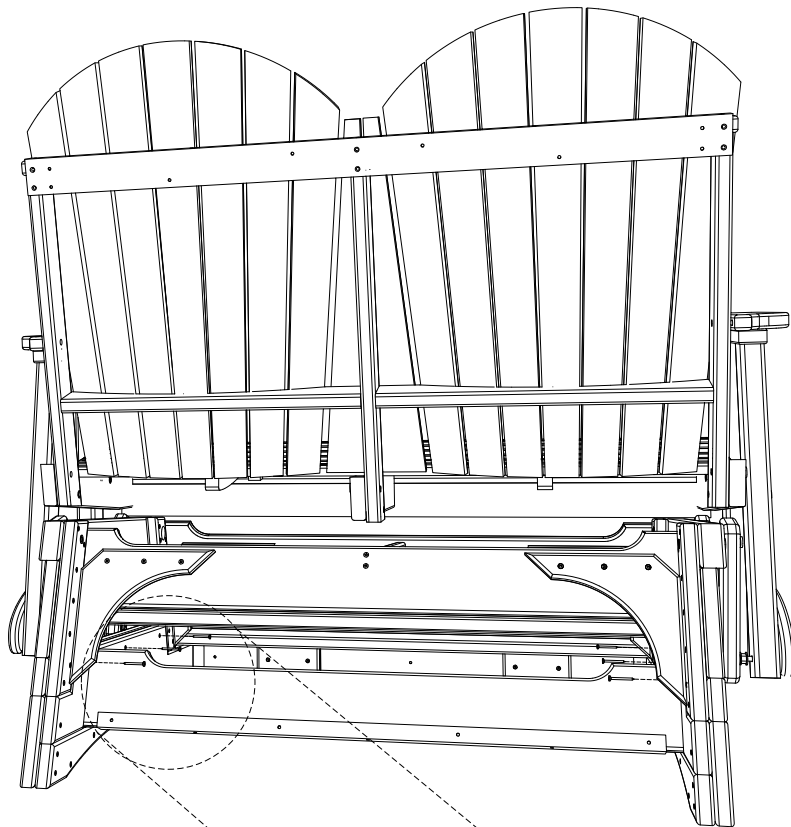

1 1/2" Screws

