



#### Tools Required


5/32 Hex Key (Included)




1/2" Wrench (Not Included)




#2 Square Drive Bit (Not Included)

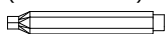


Cordless Drill (Not Included)

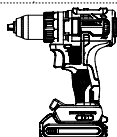


- Hardware**
- 2 - 5/16" x 3 1/2" Stainless Wafer Bolts
  - 8 - 5/16" x 2" Stainless Wafer Bolts
  - 6 - Nuts
  - 10 Washers
  - 4 - 2" Screws
  - 4 - 1 1/2" Screws
  - 1 - Set Swing Chains
  - 1 - 5/32 Hex Key

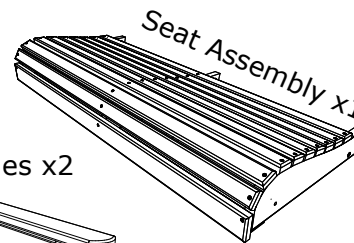


Back Assembly x1

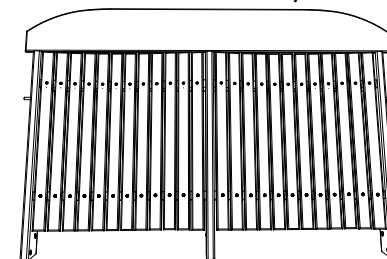


Armrest Assemblies x2

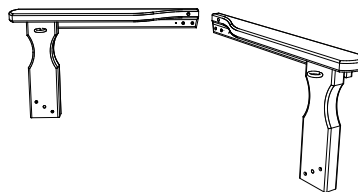



**1. Attach Back Assembly to Seat Assembly** using 6 - 2" Wafer Bolts, be sure to match all letters, tighten Wafer Bolts with included Hex Key.

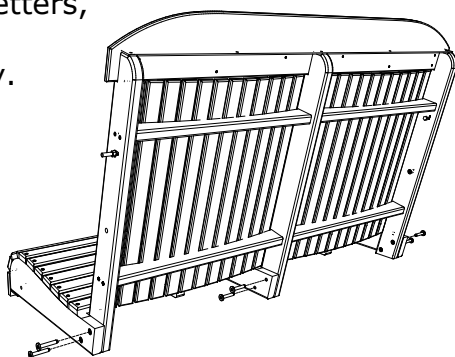

**2. Attach Armrest's** using 1 - 2" Wafer Bolt 1 - 3 1/2" Wafer Bolt 1 - Washer 1 - Nut 2 - 2" Screws & 2 - 1 1/2" Screws per side, be sure to match all letters, tighten Wafer Bolt with included Hex Key.

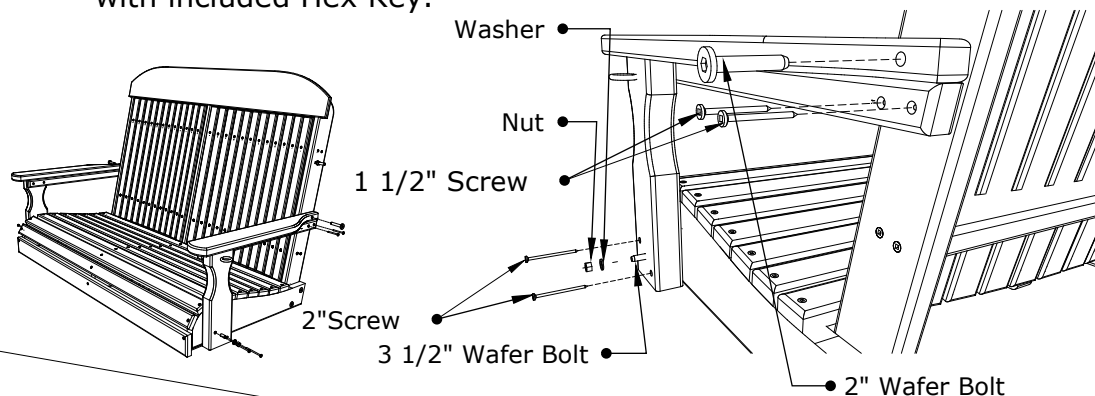

**3. Attach short end of Chain** to back of Armrest assemblies & other end through screw eye to bottom of front upright using 4 Washers & 2 nuts per side.

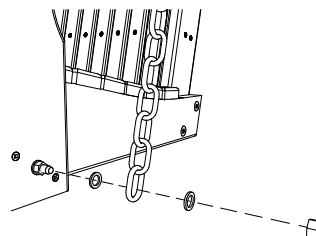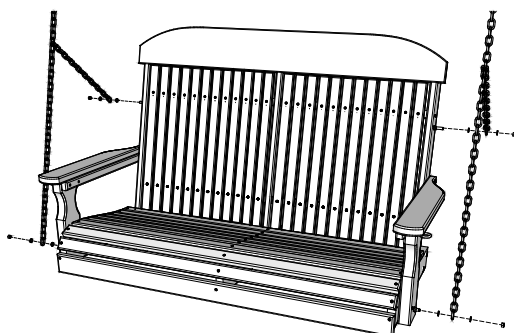

4' Classic Poly Swing Assembly Instructions

11/13/ 2024

R.M.