





Tools Required

#2 Square Drive Bit
(Not Included)




5/32 Hex Key (Included)

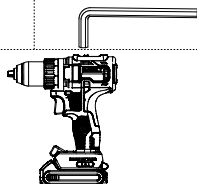


Cordless Drill
(Not Included)


- Hardware**
 2 - 3 1/2" Stainless Wafer Bolt
 2 - 2 1/2" Stainless Wafer Bolt
 6 - 2" Stainless Wafer Bolt
 4 - 2" Screws
 1 - 5/32 Hex Key

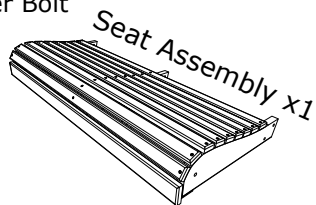


Back Assembly x1

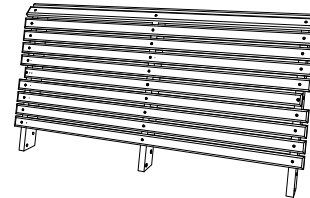

Armrest Assemblies x2

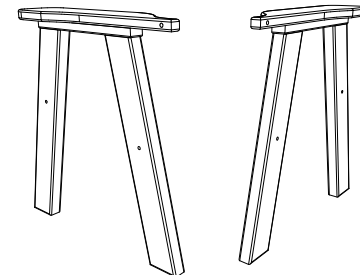

1. Assemble Back Assembly to Seat Assembly
 using 4 - 2" Wafer Bolts,
 Tighten Wafer Bolts with included
 Hex Key. Be sure to
 match all letters.

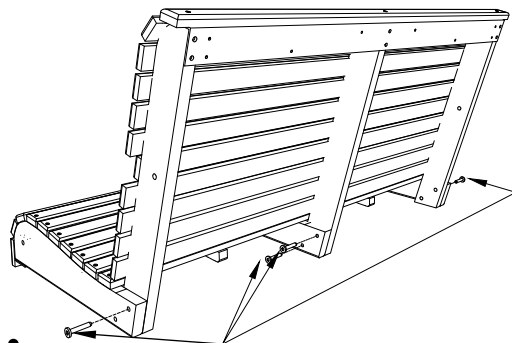

2" Stainless Wafer Bolt

2. Assemble Armrest Assemblies using 1 - 3 1/2"
 Wafer Bolt, 1 - 2 1/2" Wafer Bolt
 1 - 2" Wafer Bolt per side,
 Tighten Wafer Bolts with included
 Hex Key. Be sure to match all letters.




2 1/2" Stainless Wafer Bolt

2" Stainless Wafer Bolt

3 1/2" Stainless Wafer Bolt

3. Install 2 - 2" Screws
 per side from inside of
 seat in predrilled holes.

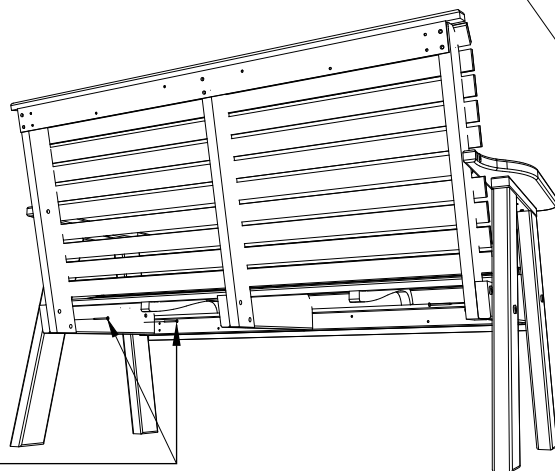

2" Screw



4' Plain Poly Bench Assembly Instructions

11/13/ 2024

R.M.