






#2 Square Drive Bit  
(Not Included)




Cordless Drill  
(Not Included)



Hardware  
36 - 2 1/2" Screws  
24 - 2" Screws  
152 - 1 1/2" Screws  
2 - 5/16" x 2-1/4" T Bolt

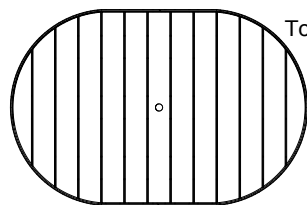


Top x1

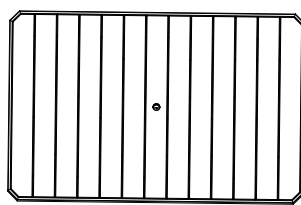


Pedestal  
Column x2



Pedestal Foot Long x1




Pedestal  
Block x2




Stabilizer  
Block x1

Braces x12



Pedestal Foot Short x2




Top Long Cross Pc. x2




Top Short  
Cross Pc. x2




1. Attach Pedestal Feet Long and Pedestal Feet Short to Pedestal Column using 8 - 2 1/2" Screws per Pedestal Column in predrilled holes. Be sure to match all Numbers.

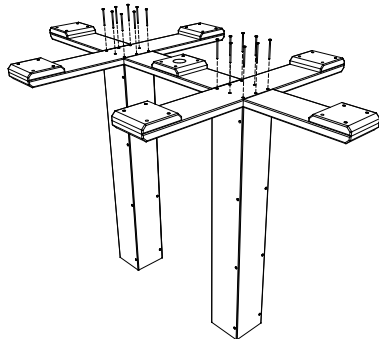


2. Align Pedestal Block in center of Pedestal Feet, Attach using 4 1 1/2" Screws per Block in predrilled holes.

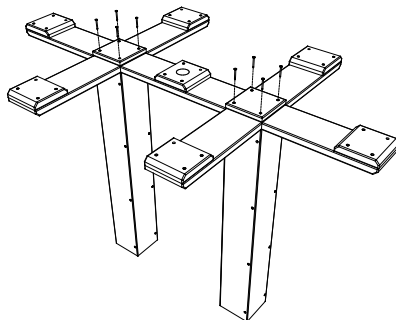

3. Attach 6 Braces to Pedestal Column using 12- 1 1/2" Screws per Brace in predrilled holes.

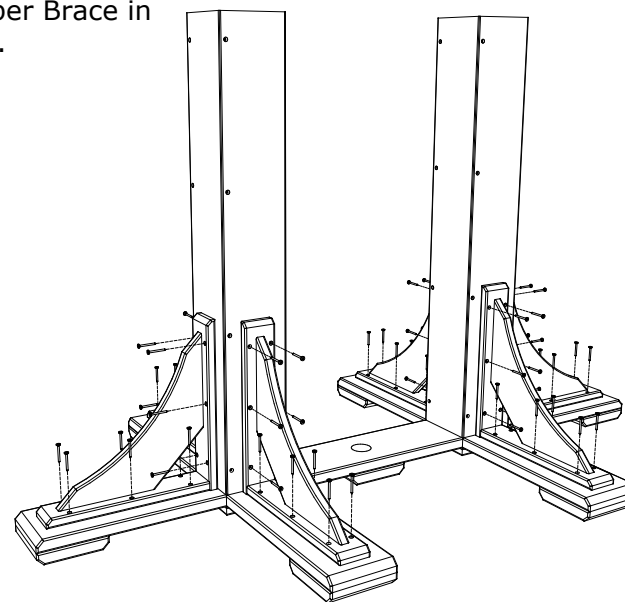

4. Attach 6 Braces to Pedestal Column using 6 - 1 1/2" Screws per Brace in predrilled holes, Be sure to center brace on Pedestal Column & keep top side flush.

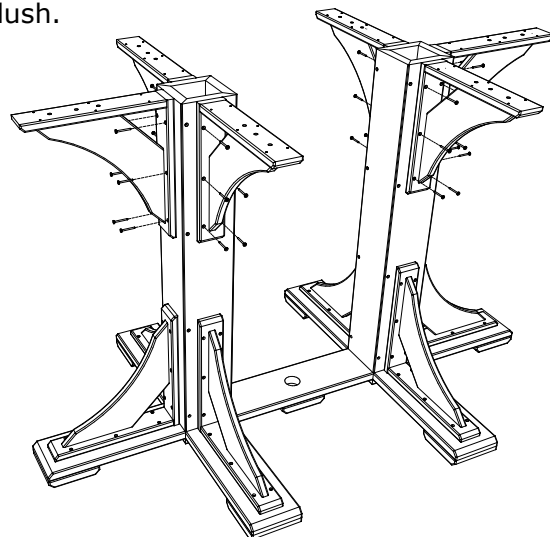

4 x 6 Oval and Rectangle Double Pedestal Table  
Assembly Instructions

02/18/ 2025



R.M.



5. Align Top Long Crosspiece with Pedestal Column & Braces, Install 8 - 2 1/2" Screws in each Pedestal Column & 6 - 1 1/2" Screws in each Top Long Crosspiece. Be sure to match all Numbers.



**\*\*Aluminum must be on top side \*\***

7. Attach Top using 24 - 2" Screws in predrilled holes.

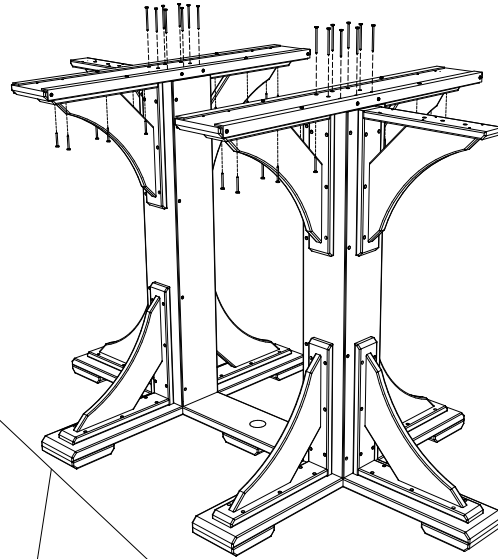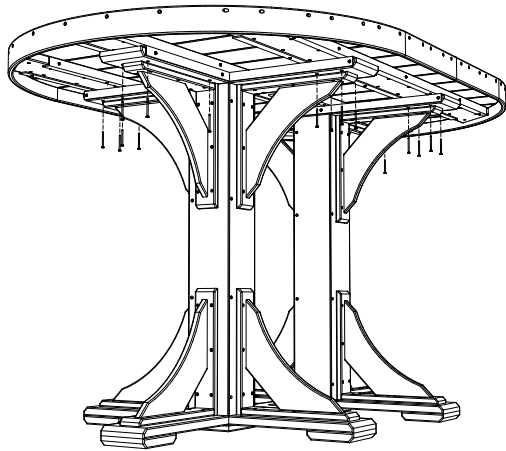

8. Align Stabilizer Block with Hole in Top, Attach Stabilizer Block using 4 - 2-1/2" Screws. Insert T Bolts used to stabilize Umbrella.

6. Attach Top Short Crosspieces centered with Braces & against Top Long Crosspiece. Install 6 - 1 1/2" Screws per Top Short Crosspiece. Be sure to match all Numbers.  
**\*\* Aluminum must be on top side\*\***

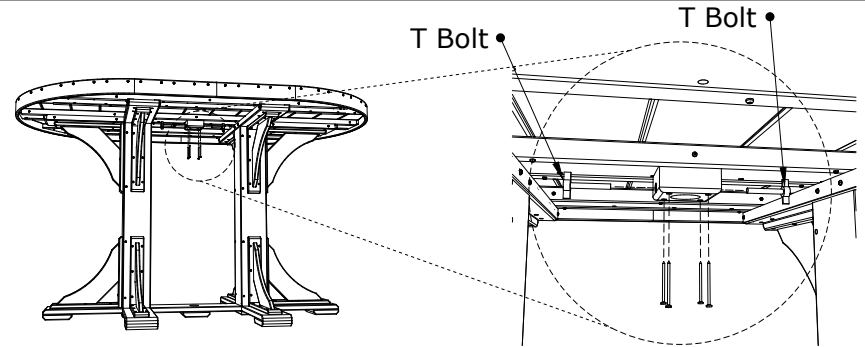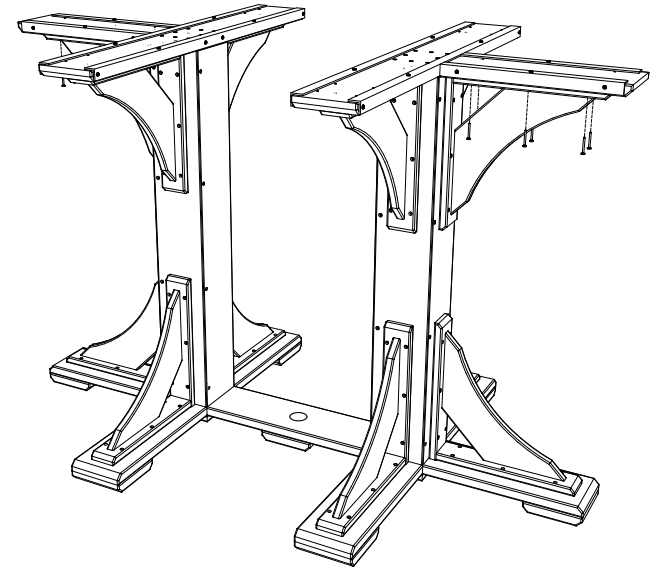

4 x 6 Oval and Rectangle Double Pedestal Table  
Assembly Instructions

02/18/ 2025

R.M.