





Hardware
6 - 2" Screws
12 - 1 1/2" Screws

Tools Required


#2 Square Drive Bit
(Not Included)



Cordless Drill
(Not Included)

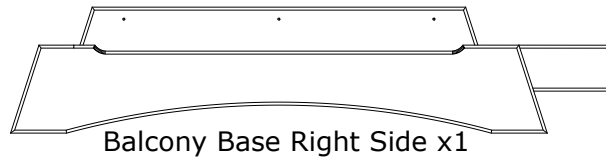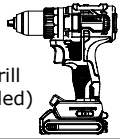


Balcony Base Right Side x1

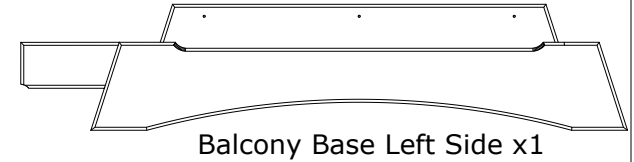

Balcony Base Left Side x1



Footrest x1





Back Cross Pc. x1



1. Attach Back Cross Pc. to
Balcony Base using
6 - 1 1/2" Screws in predrilled
Pocket Holes.

2. Attach Footrest to
Balcony Base using 6 - 2" Screws
in predrilled Holes.

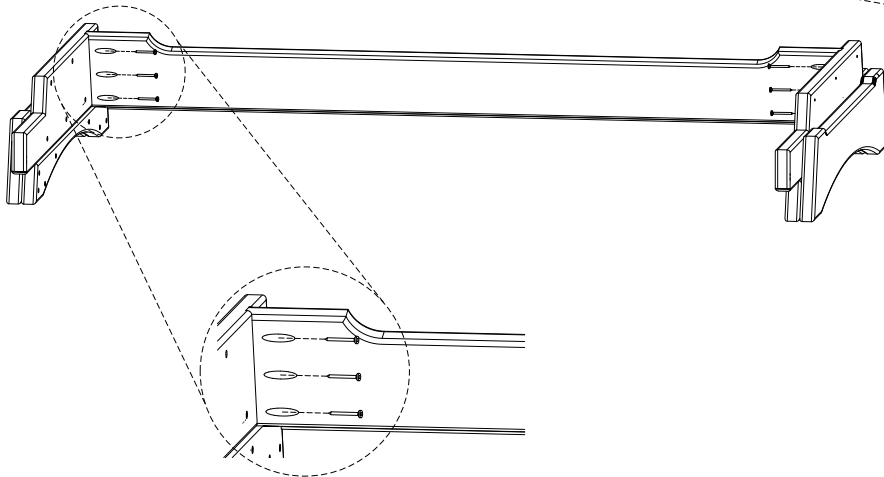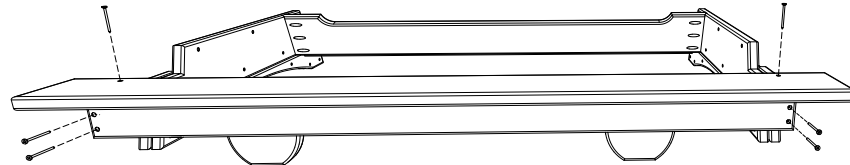




5 Balcony Base Assembly Instructions

11/25/ 2024

R.M.



3. Position Glider on Balcony Base,
Attach Balcony Base using 3 - 1 1/2"
Screws per side in predrilled Holes.

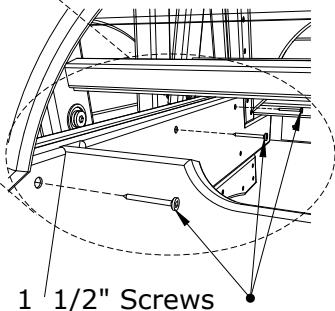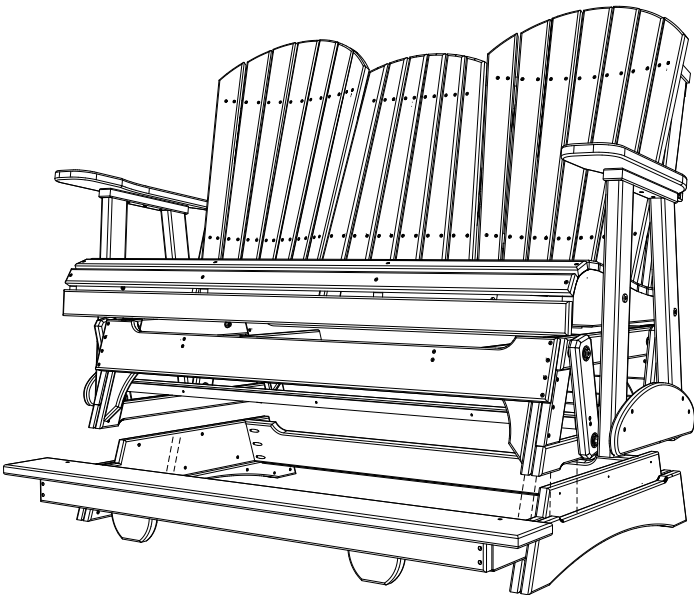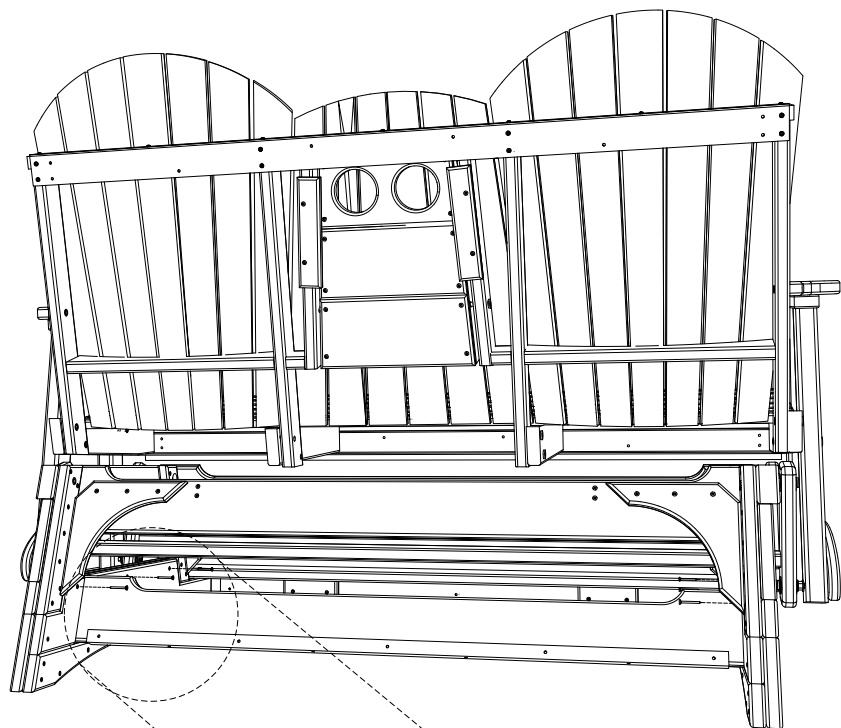

5 Balcony Base Assembly Instructions

11/25/ 2024	R.M.
-------------	------