



Tools Required


5/32 Hex Key (Included)




1/2" Wrench
(Not Included)



#2 Square Drive Bit
(Not Included)



Cordless Drill
(Not Included)



Hardware

2 - 5/16" x 3 1/2" Stainless Wafer Bolts

10 - 5/16 x 2" Stainless Wafer Bolts

6 - Nuts

10 - Washers





4 - 2" Screws

4 - 1 1/2" Screws


8 - 1/2" Screws

1 - 5/32 Hex Key


1 - Set Swing Chains

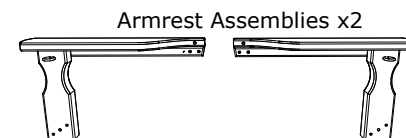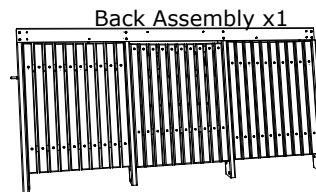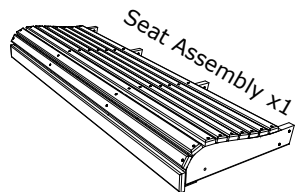

1. Attach Headboard to Back Assembly using 8 - 1/2" Screws, be sure to match all Numbers.

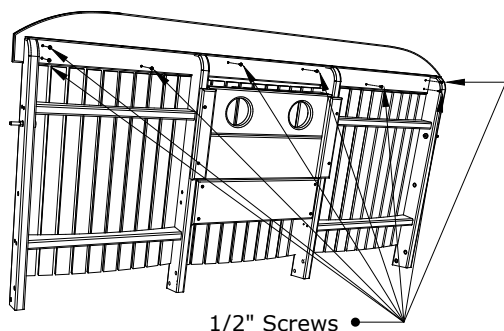

2. Attach Back Assembly to Seat Assembly using 8-2" Wafer Bolts, Be sure to match all letters, tighten Wafer Bolts with included Hex Key.

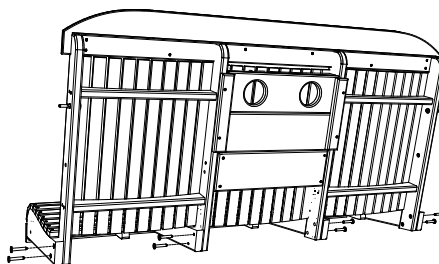


3. Attach Armrest Assemblies using 1 - 2" Wafer Bolt 1 - 3 1/2" Wafer Bolt 1 - Washer & 1- Nut per side, Be sure to match all letters, tighten Wafer Bolts with included Hex Key. insert 3 1/2" Wafer Bolt from inside out.


3 1/2" Wafer Bolt

3 1/2" Wafer Head Bolt requires Washer - between nut & - Product


2" Wafer Bolt

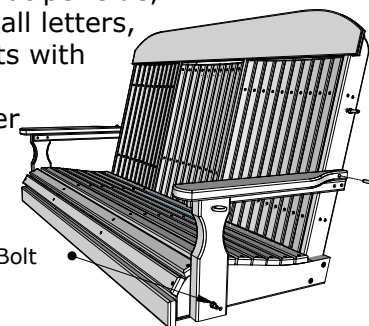

4. Install 2-2" Screws & 2-1 1/2" Screws per side.

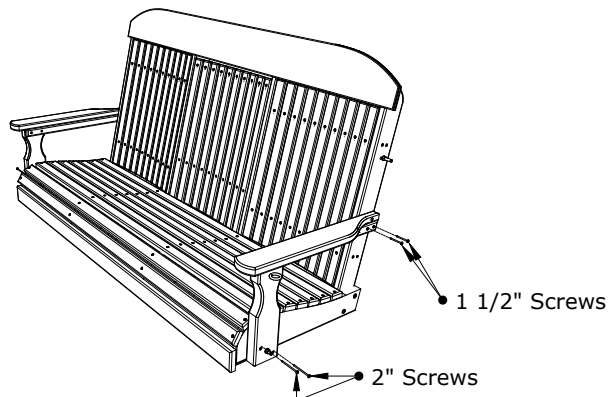

5. Attach short end of Chain to Back and long end through screw eye to bottom of front upright using 2-Nuts & 4 - Washers per side "Install Washer-Chain-Washer-Nut"

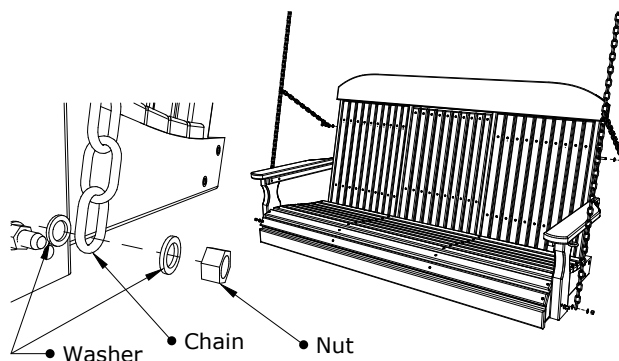

5' Classic Poly Swing Assembly Instructions

11/12/ 2024

R.M.