


# ARTIFEX


## ASSEMBLY GUIDE

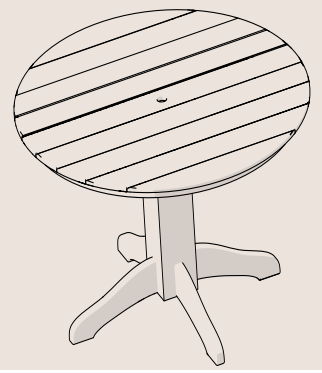

### Round Newport Table

#### WHAT'S INCLUDED:


- (4) 2 1/2" Waferhead Lags
- (4) #14 x 1 1/4" Phillips Self Tap Screws
- (6) 2" Poly buster
- (8) 5/16" Flange Nuts
- 5/32" Allen Wrench

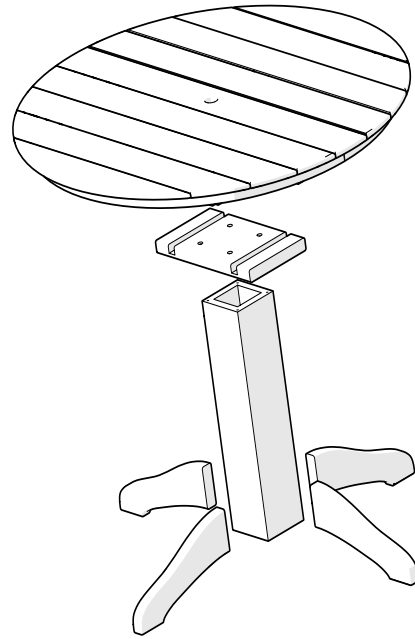

## 1 ATTACH PEDESTAL BLOCK TO PEDESTAL

NOTE: Before Installation process, remove Pedestal Block from Table Frame.


Attach Pedestal Block with provided 2 1/2" Waferhead Lags to Pedestal.

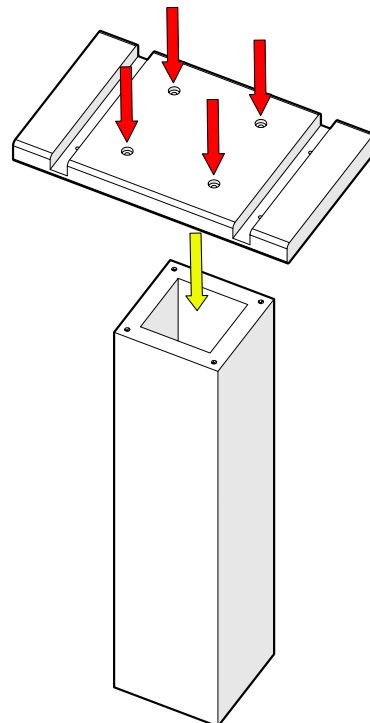

## 2

## ATTACH LEGS TO PEDESTAL

On a flat surface, place Pedestal upside down for stability, attach Pedestal Legs to Pedestal by attaching the provided 5/16" Flange Nuts, tighten securely with 1/2" Wrench.

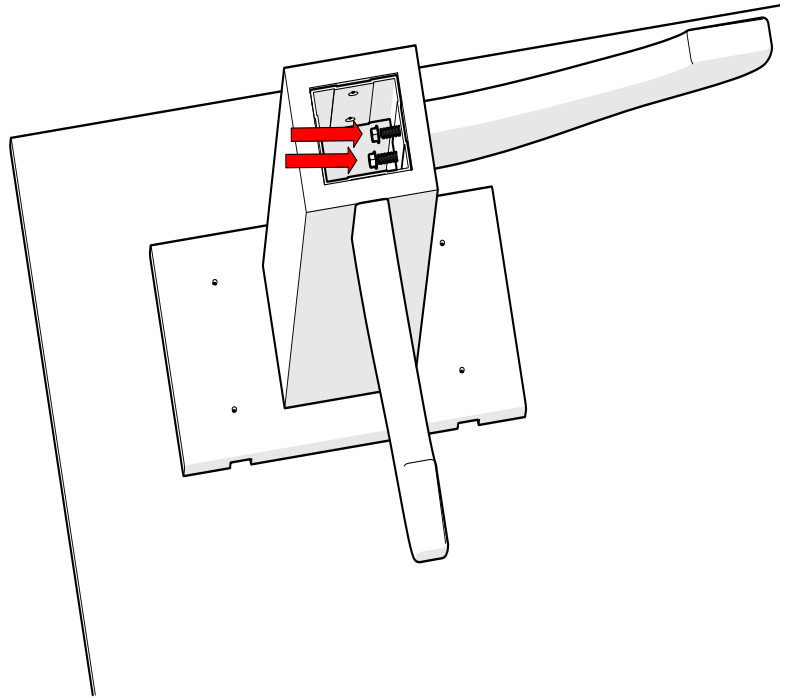

## 3

## ATTACH PEDESTAL TO TABLE FRAME

Using the provided #14 x 1 1/4" Phillips Self Tap Screws, drive the (4) screws into the underside of the Pedestal Block Assembly into the Table frame.

After securing the Pedestal Block onto Table Frame, drive in provided 2" Screws, horizontally through the poly tabletop braces into the poly block then repeat on opposite side.

