


ARTIFEX

ASSEMBLY GUIDE

CLASSIC ADIRONDACK


WHAT'S INCLUDED

- (6) 1/4" x 2-1/2" Wafer Head Bolts (**Steps 1-4**)
- (4) 1/4" x 2 1/2" Wafer Head Lags (**Step 5**)
- (6) 1/4" Flange Nuts (**Steps 1-4**)

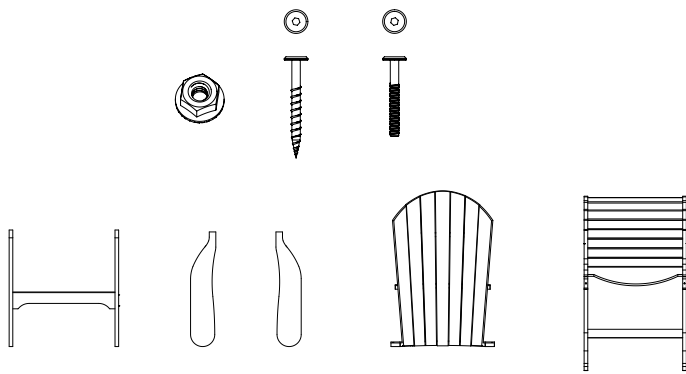


STEPS

1 INSTALL LEGS

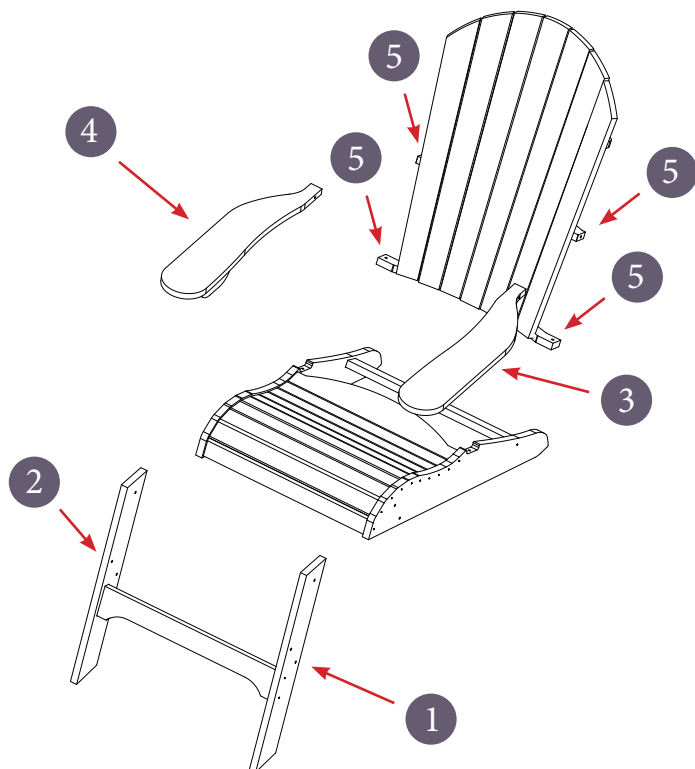


Use 2 of the 2-1/2" Wafer Head Bolts as shown utilizing the provided 5/32" Allen Bit.

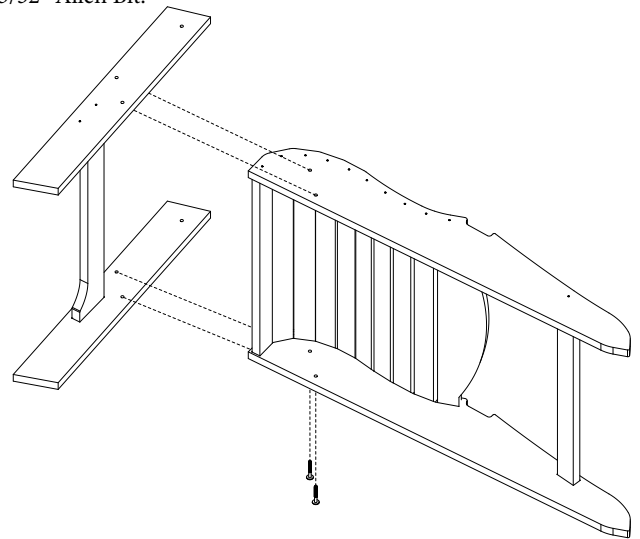


PRO TIP:

Prior to assembling this product, it is recommended to verify that all components are removed from packaging, and assemble on a furniture blanket. This cautionary step helps prevent any inadvertent damage to the flooring, or furniture during the assembly process.

2 INSTALL LEGS CONTINUED

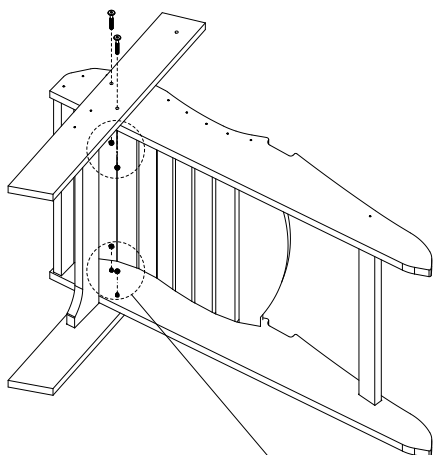


Use 2 of the 2-1/2" Wafer Head Bolts as shown utilizing the provided 5/32" Allen Bit.

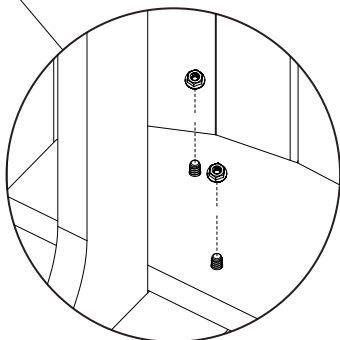


3 INSTALL ARMS

Use 1 of the 2-1/2" Wafer Head Bolts as shown utilizing the provided 5/32" Allen Bit.

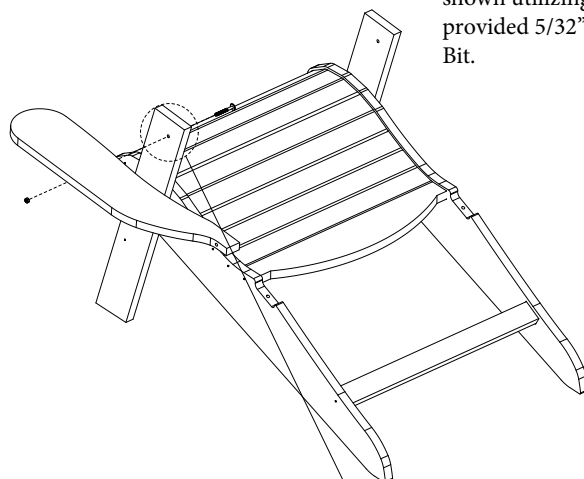


PRO TIP:


Refrain from overtightening; overtightening of hardware can cause damage to the item.

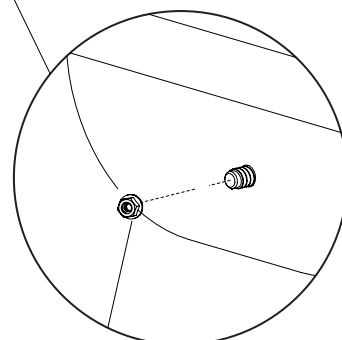


4 INSTALL ARMS CONTINUED

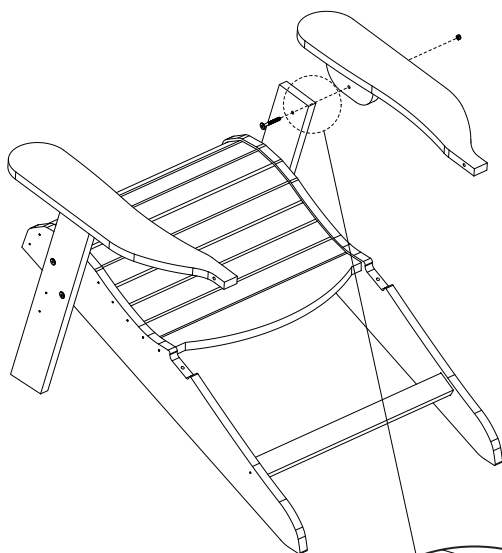

Use 1 of the 2-1/2" Wafer Head Bolts as shown utilizing the provided 5/32" Allen Bit.

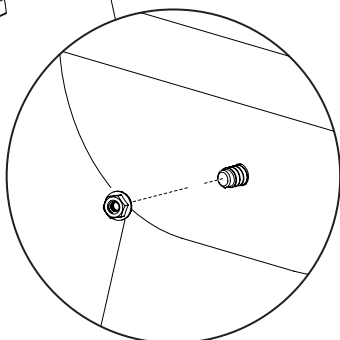

5 INSTALL BACK

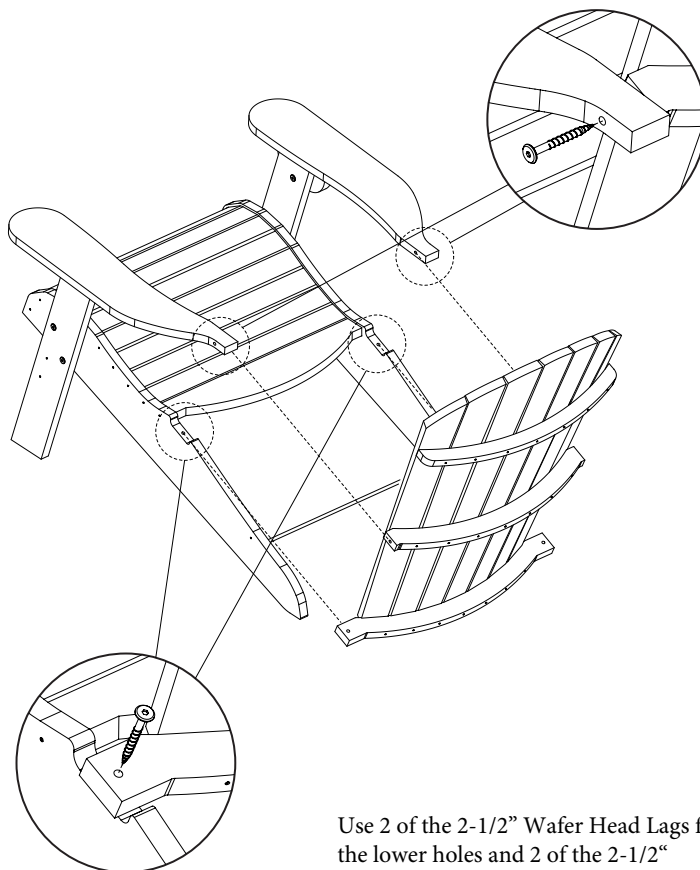

Use 2 of the 2-1/2" Wafer Head Lags for the lower holes and 2 of the 2-1/2" Wafer Head Lags for the upper holes as shown in the image above.