


ARTIFEX

ASSEMBLY GUIDE

CLASSIC OTTOMAN

WHAT'S INCLUDED

- (4) 1/4" x 1 1/2" Wafer Head Lags (Steps 1 & 2)
- 5/32" Allen Wrench

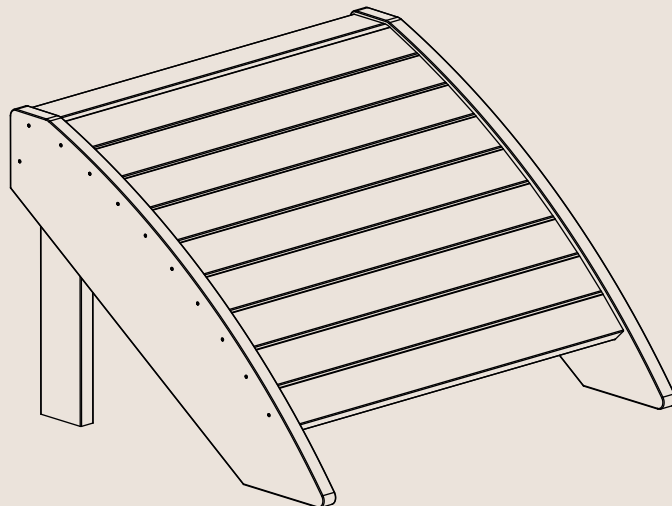

x1

Left & Right




x2



x4


STEPS

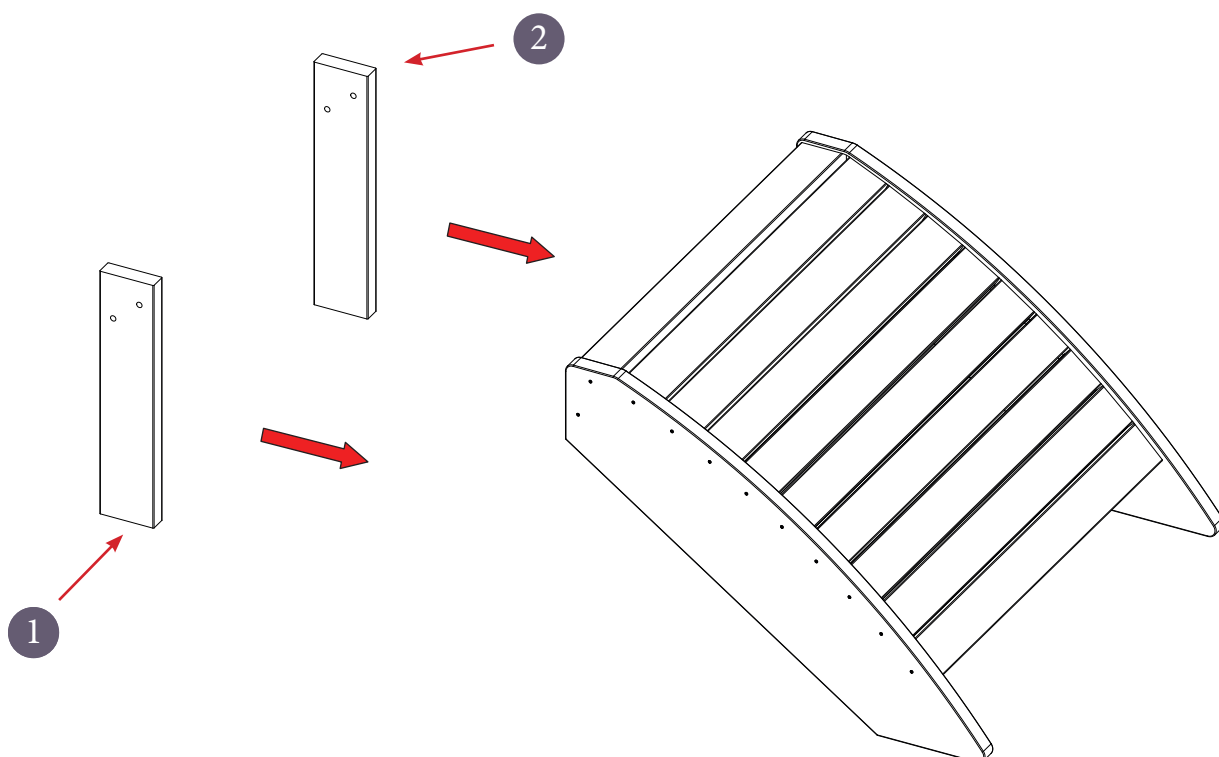

1 INSTALL LEFT LEG SUPPORT

PRO TIP:


Prior to assembling this product, it is recommended to verify that all components are removed from packaging, and assemble on a furniture blanket. This cautionary step helps prevent any inadvertent damage to the flooring, or furniture during the assembly process.

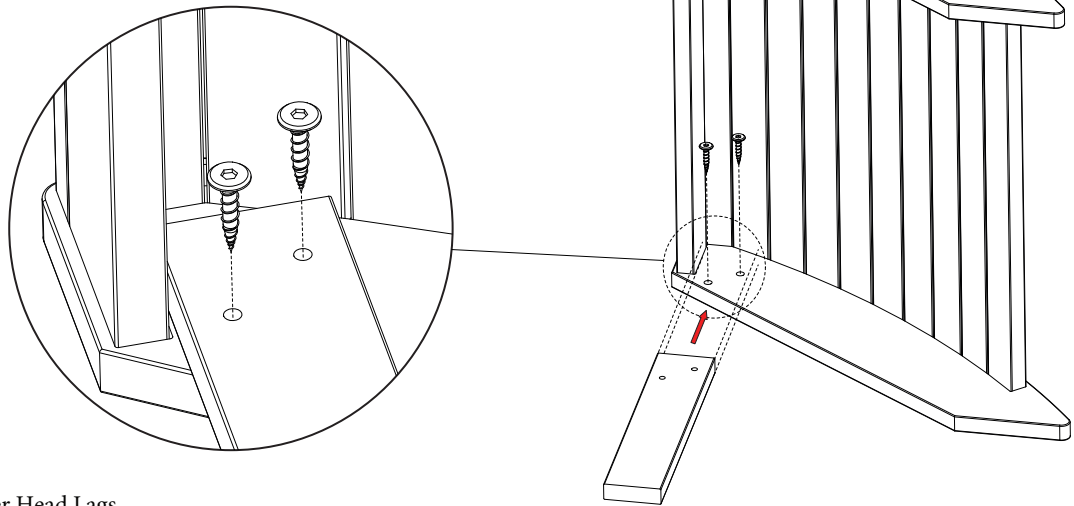

Use 2 of the 1 1/2" Wafer Head Lags as shown utilizing the provided 5/32" Allen Wrench.

2 INSTALL RIGHT LEG SUPPORT

Use 2 of the 1 1/2" Wafer Head Lags as shown utilizing the provided 5/32" Allen Wrench.

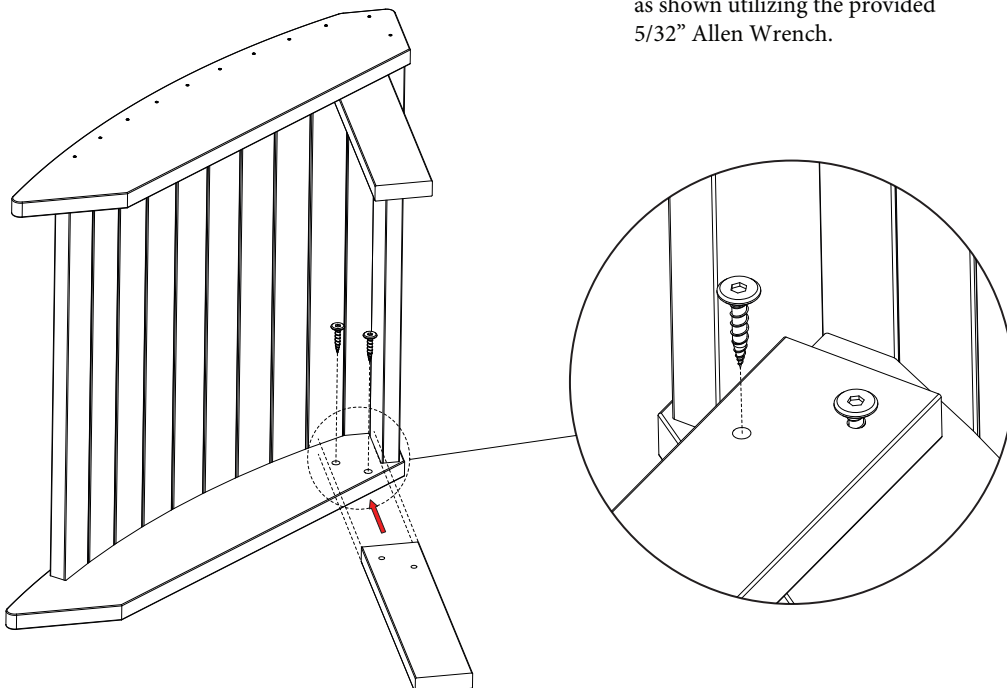

PRO TIP:

Refrain from overtightening; overtightening of hardware can cause damage to the item.