


ARTIFEX


ASSEMBLY GUIDE

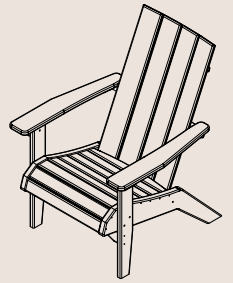

ATLAS RAISED ADIRONDACK


WHAT'S INCLUDED:

- (8) 1 1/2" Polybuster Screws
- (2) 1 1/2" Wafer Head Lags
- (2) 2" Wafer Head Lags
- (4) 1/4" x 3" Wafer Head Bolts
- (4) 1/4" Flange Nuts
- (1) 5/32" Allen Wrench
- (1) #2 Square Bit

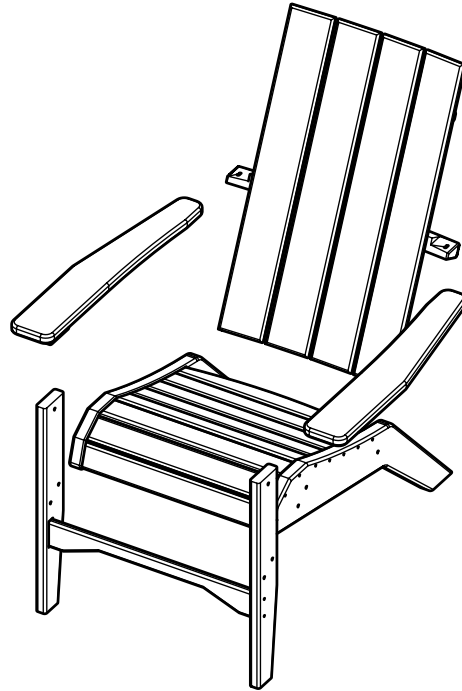


1 INSTALL LEGS

Use four 3" wafer head bolts and four 1/4" flange nuts to attach the legs to the seat. The nuts should be installed on the inside so they are hidden.

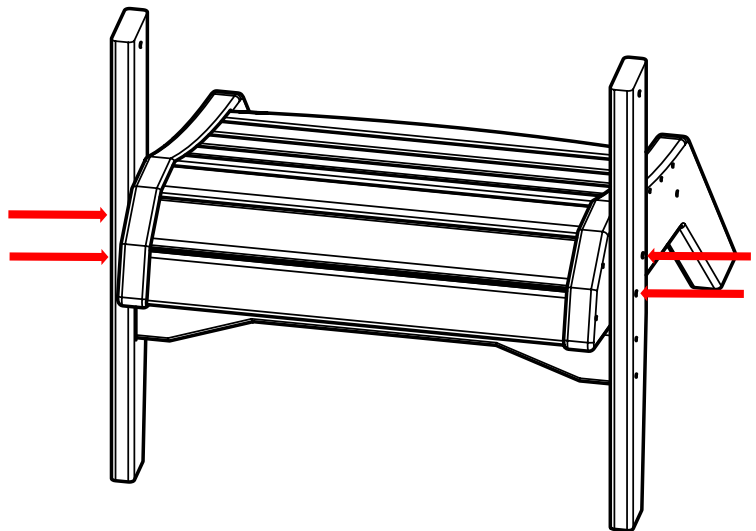

2 INSTALL ARMRESTS

Use two 2" wafer head lags to attach the armrests to the legs. If desired, install the lags only partially to allow the armrests to move while attaching the back. After the back is attached, tighten the lags fully.

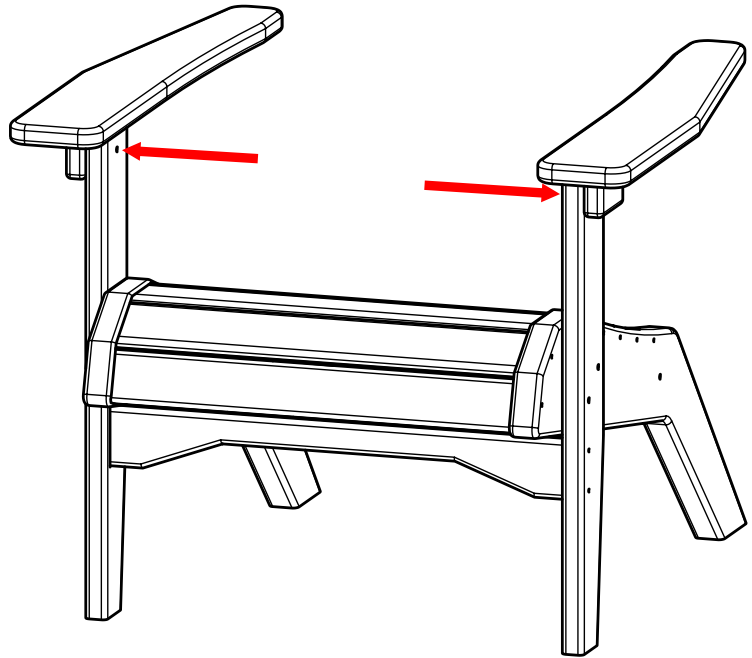

3 INSTALL BACK

Use two 1 1/2" wafer head lags (long arrows) to fasten the back to the armrests. Then use eight 1 1/2" poly buster screws (short arrows) to attach the back to the seat.

