

ARTIFEX

ASSEMBLY GUIDE



CHAISE LOUNGE


WHAT'S INCLUDED:

- (6) 3/4" Wafer Head Bolts
- (2) 2" Wafer Head Lags
- (1) 5/32 Allen Wrench




1 INSTALL LEGS

Use six 3/4" wafer head bolts to attach the legs to the seat. If necessary, use a rubber mallet to tap the legs into place.

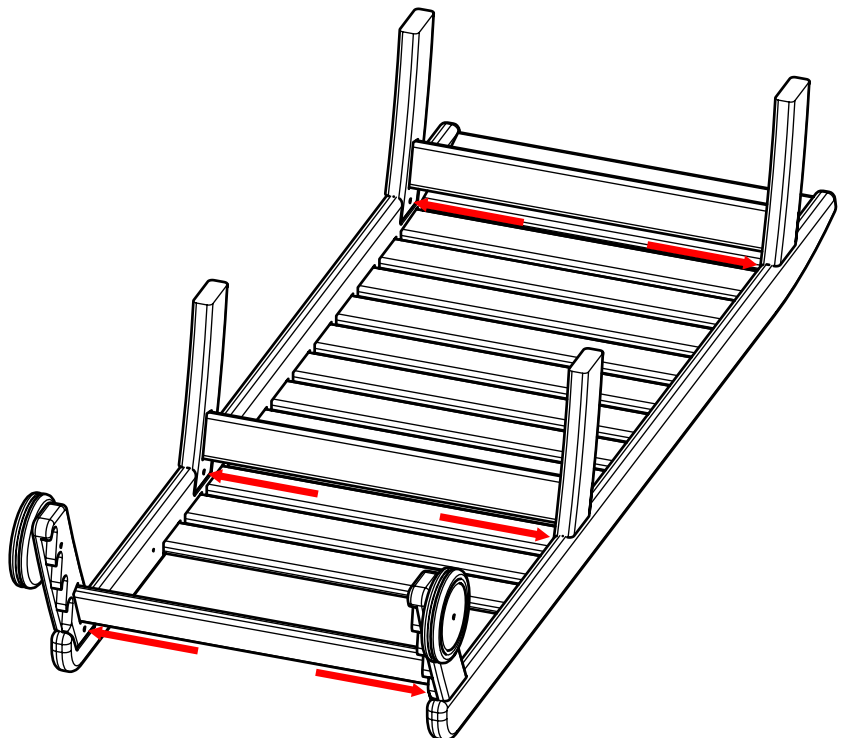

Slide the back into place. Make sure the seat is upside down on a nonmarking surface, then slide the back in until the slats are spaced evenly.

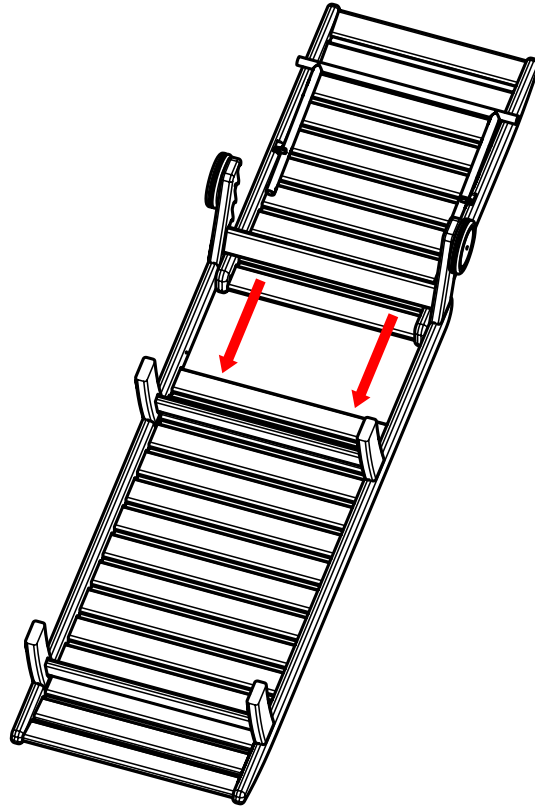

Use two 2" wafer head lags to attach the back to the seat. If the 1/8" pilot holes in the seat are hard to locate, use a slender object such as a small allen wrench or screwdriver to make sure the back is in the correct position.

