


ARTIFEX

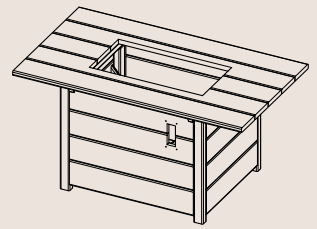


ASSEMBLY GUIDE

STANTON FIRE TABLE


WHAT'S INCLUDED:

- (2) 1 1/2" Wafer Head Lags
- (4) 2 1/2" Wafer Head Lags
- (4) 1 1/2" #2 Square Pan Head Screws (Black)
- (1) 5/32" Allen Wrench
- (1) #2 Square Bit
- (1) Crystal Fire Gas Insert
- (1) Glass Wind Guard

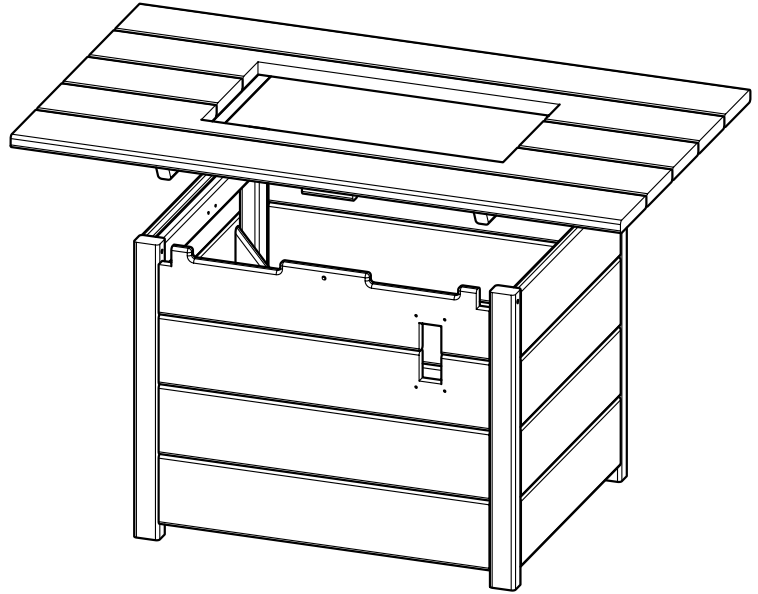


1 PLACE THE TOP

Set the fire table top into place. The cross members should fit snugly into the notches, and the circled members should fit on the inside of the fire table. The top is symmetrical so there is no front or back.

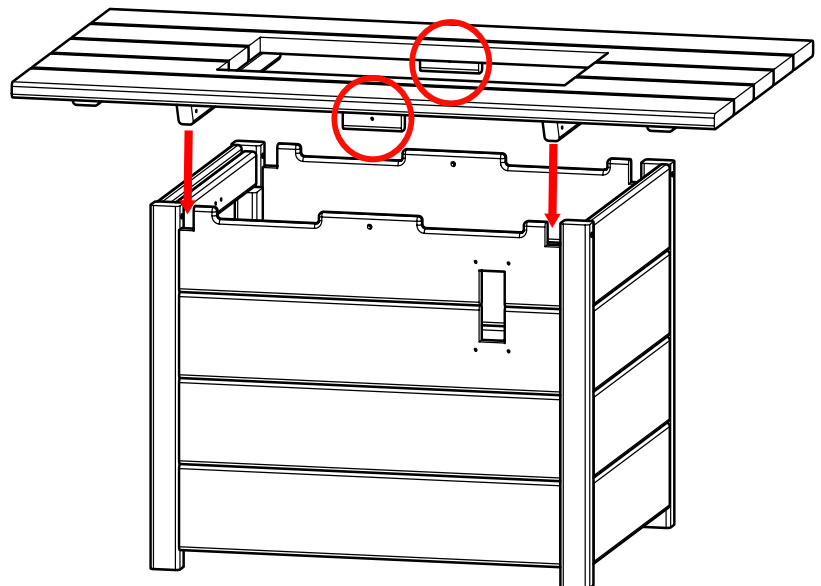

2 INSTALL SIDE LAGS

Install two 1 1/2" wafer head lags through the long side of the fire table into the fire table top members (circled in step 1).

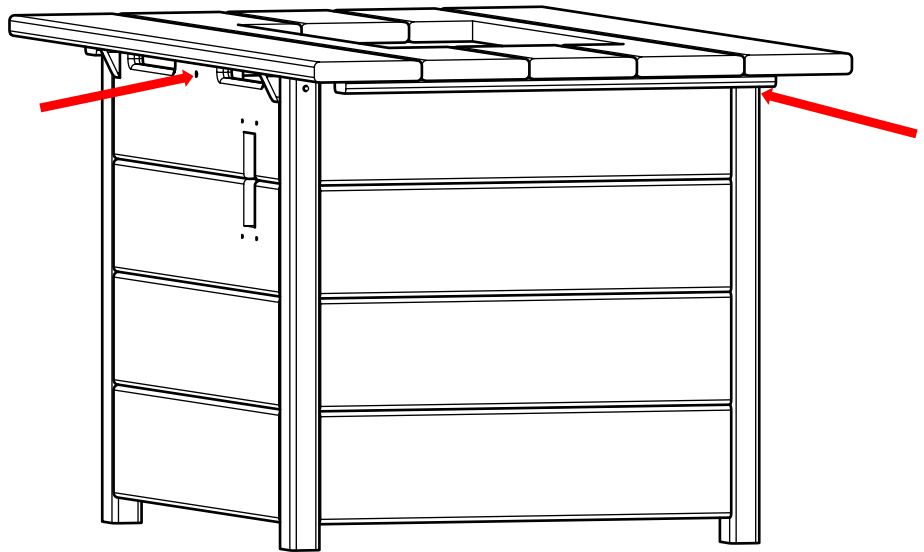

3 INSTALL END LAGS

Install four 2 1/2" wafer head lags through the end corner posts into the fire table top cross members.

Follow the instructions provided with the gas insert to install the control panel (location circled) and the gas insert. Then, follow the instructions provided with the wind guard to install it.

