



breezesta™

# AVANTI SIDE BAR CHAIR


AV-0604

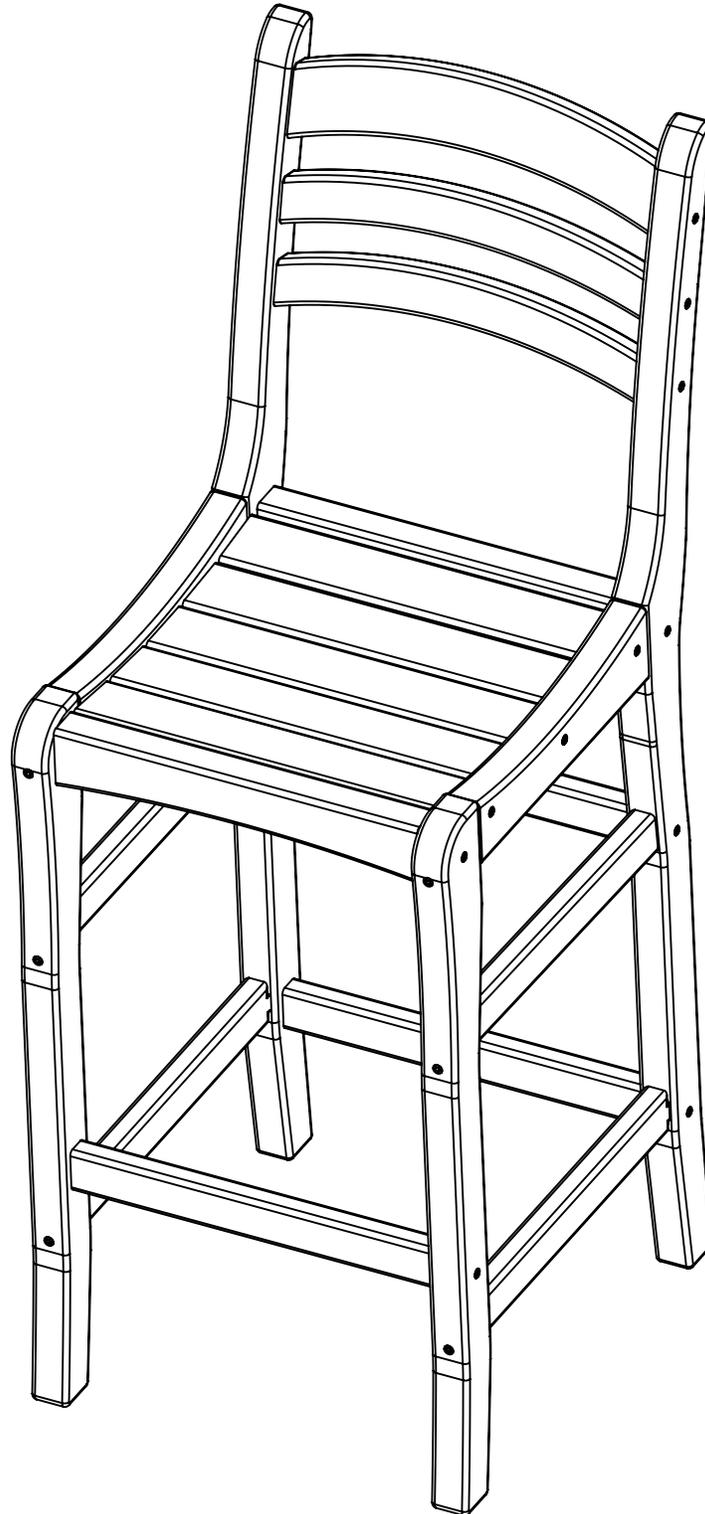

REV00-1/19

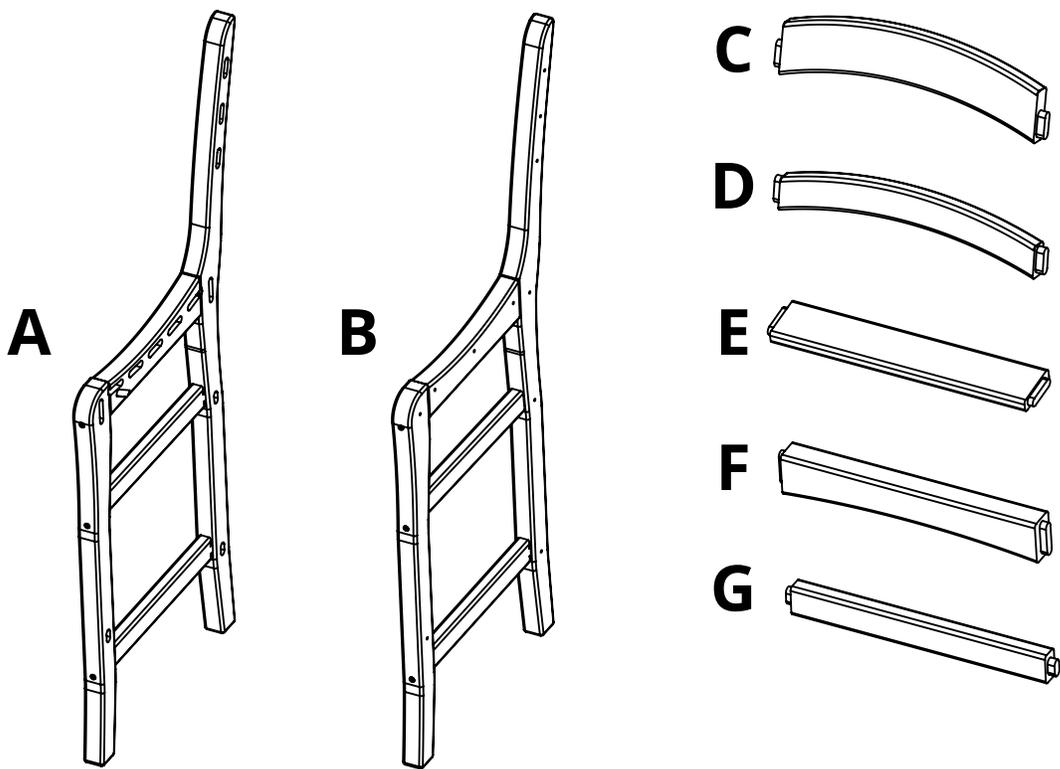


<b>PARTS</b>			
<b>PART</b>	<b>DESCRIPTION</b>	<b>PART NO.</b>	<b>QTY</b>
A	LEFT SIDE ASSEMBLY	SA-00122	1
B	RIGHT SIDE ASSEMBLY	SA-00123	1
C	TOP BACK SLAT	PRT-00220	1
D	BOTTOM BACK SLAT	PRT-00221	2
E	AVANTI SIDE CHAIR SEAT SLAT	SS-15.06	5
F	FRONT/BACK RAIL	PRT-00219	2
G	SPREADER	PRT-00218	3

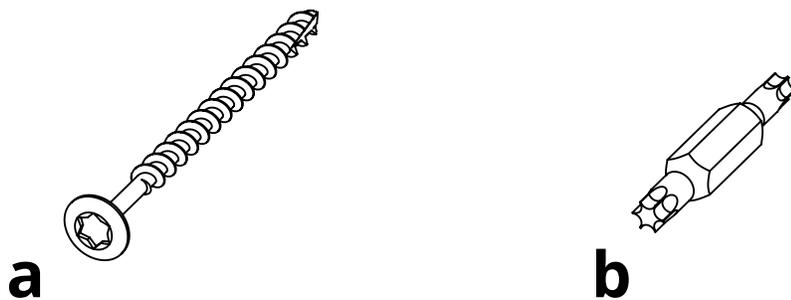

<b>HARDWARE</b>			
<b>PART</b>	<b>DESCRIPTION</b>	<b>PART NO.</b>	<b>QTY</b>
a	#8 X 2-1/2" TORX SCREW	H-0000-S825	22
b	T20 & T25 TORX BIT	H-0000-CTD	1



**Suggested Tools:** Drill, Plastic Mallet

# Please read entire instructions before beginning

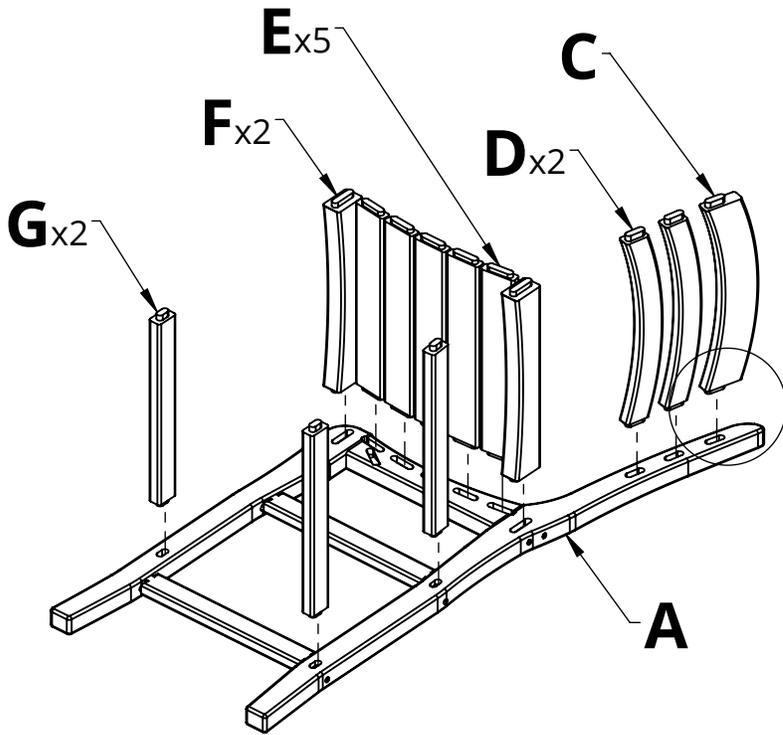

**1.** Place Part A on its side and place all Parts in as shown

**2.** Place Part B on top & connect it using the Hardware a

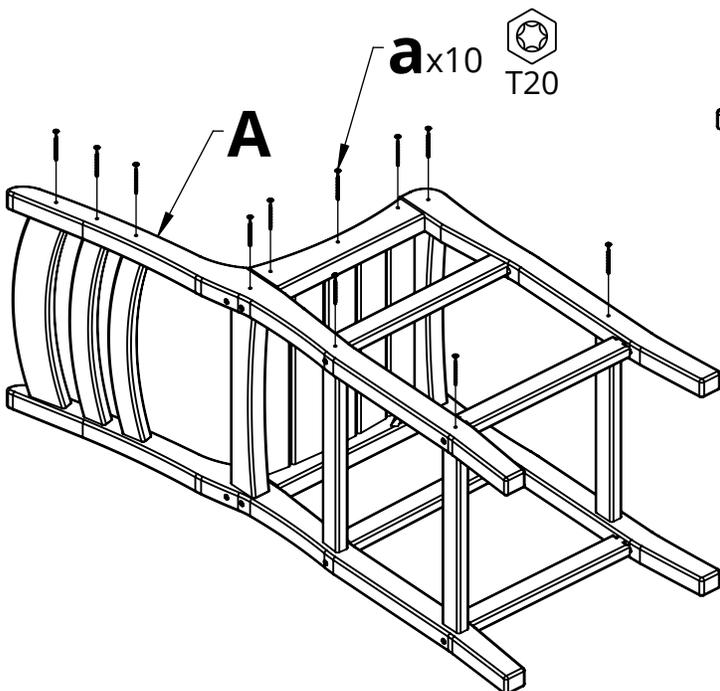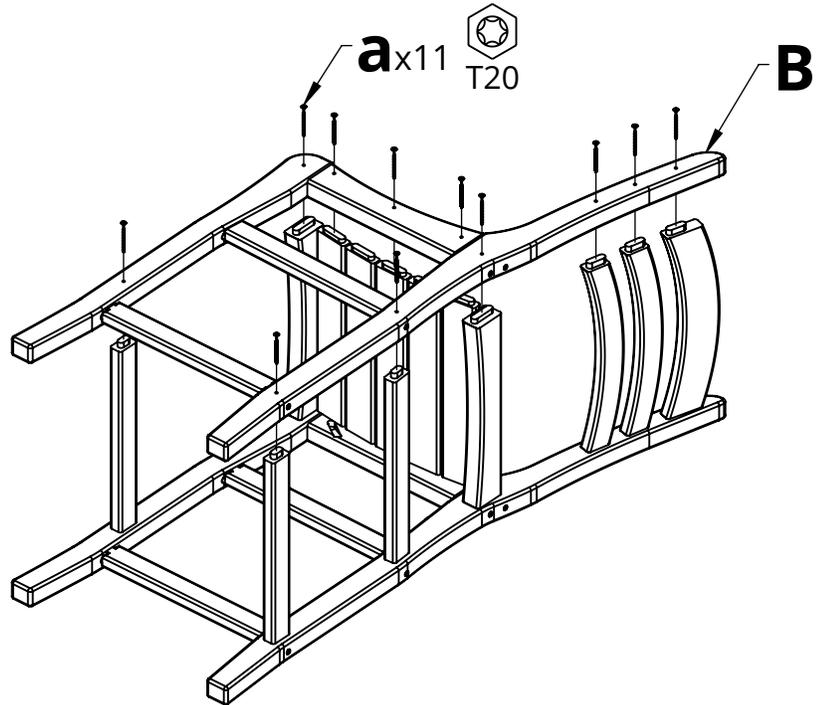

**3.** Turn the assembly over so Part A is up & connect it using Hardware a