




- Hardware**  
4 - 5/16" x 2" Stainless Wafer Bolts  
2 - 5/16" x 2 1/2" Stainless Wafer Bolts  
2 - 5/16" x 3 1/2" Stainless Wafer Bolts  
10 - 2" Screws  
1 - 5/32 Hex Key

**Tools Required**

5/32 Hex Key (Included)




#2 Square Drive Bit  
(Not Included)



Cordless Drill  
(Not Included)




Seat Assembly x1

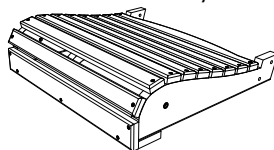

Back Assembly x1



Armrest Assembly x2

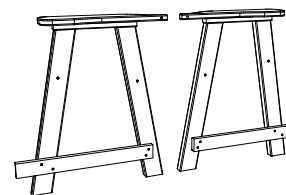


Back Cross Pc. x1



Footrest x1




**1. Attach Back Assembly to Seat Assembly using 1 - 2" Wafer Bolt per side, Tighten Wafer Bolts with included Hex Key. Be sure to match all numbers.**

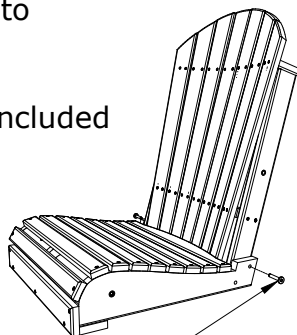

2" Wafer Bolt

**2. Attach Armrest Assemblies using 1 - 2" Wafer Bolt  
1 - 2 1/2" Wafer Bolt  
1 - 3 1/2" Wafer Bolt per side, tighten Wafer Bolts with included Hex Key. Be sure to match all numbers.**

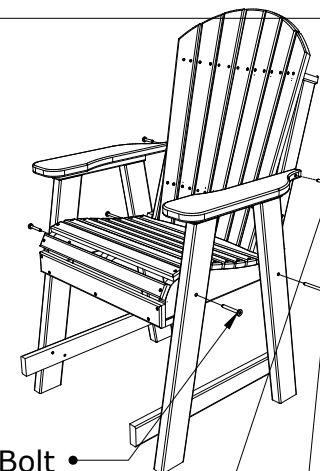


2 1/2" Wafer Bolt

2" Wafer Bolt


3 1/2" wafer Bolt

**3. Attach Back Cross Pc. using 2 - 2" Screws per side in predrilled holes. Be sure to match all numbers.**

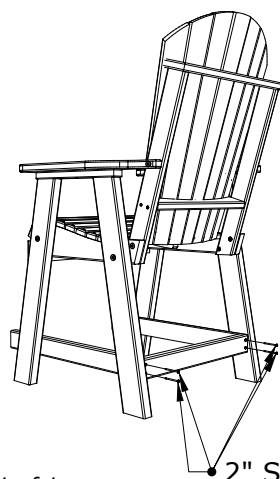

2" Screw

**4. Attach Footrest using 3 - 2" Screws per side in predrilled holes. Be sure to match all numbers.**

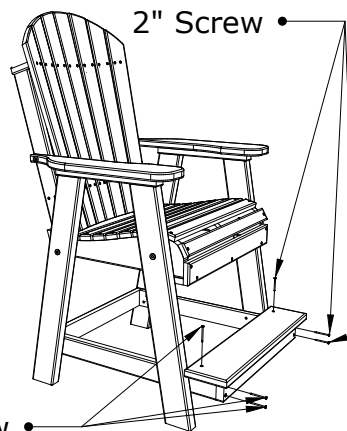

2" Screw

2" Screw



Adirondack Balcony Chair Assembly Instructions

01/20/ 2025

R.M.