


PARTS

PART	DESCRIPTION	PART NO.	QTY
A	SEAT ASSEMBLY	SA-00467	1
B	LEG ASSEMBLY	SA-00469	1
C	SEAT BACK ASSEMBLY	SA-00142	1
D	WHEEL KIT ASSEMBLY B	SA-00144	1
E	MIDDLE LEG ASSEMBLY	SA-00468	1

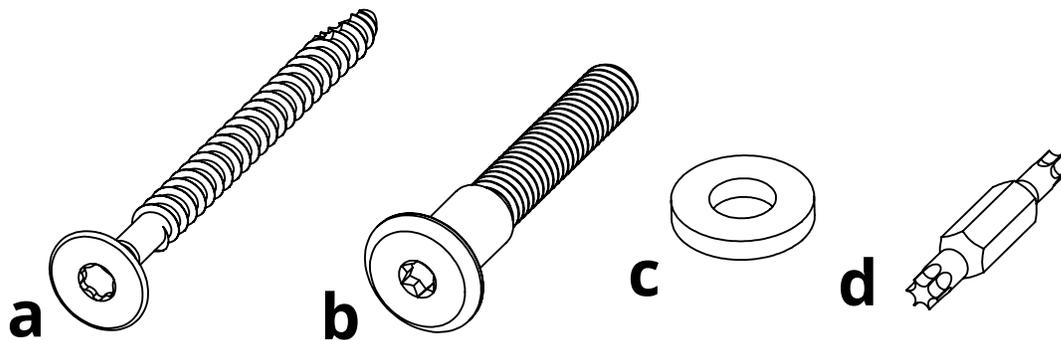

HARDWARE


PART	DESCRIPTION	PART NO.	QTY
a	1/4"-10 X 3" LAG SCREW	H-0000-S103	2
b	5/16" X 2-1/8" CHAIR BOLT	H-0000-CB516218	12
c	LARGE WHITE NYLON WASHER	H-0000-LWNW	2
d	T20 & T25 TORX BIT	H-0000-CTD	1

Suggested Tools: Drill, Plastic Mallet


Please read entire instructions before beginning

1. Place Parts B, D and E onto A and connect it using Hardware b as shown

Note-the legs on assembly B are longer than those on assembly E

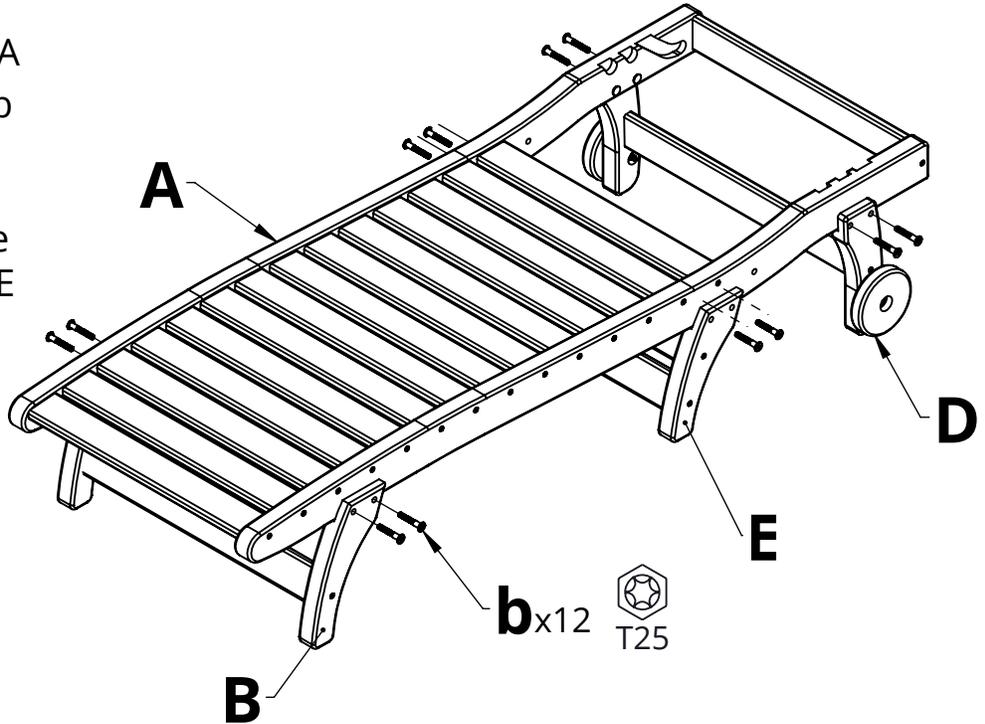


Side View

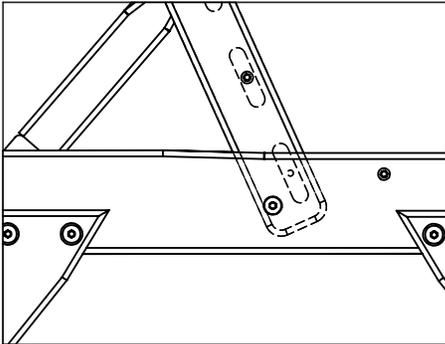

*Do not overtighten hardware 'a' this may cause adjuster bar misalignment

ax2
T25

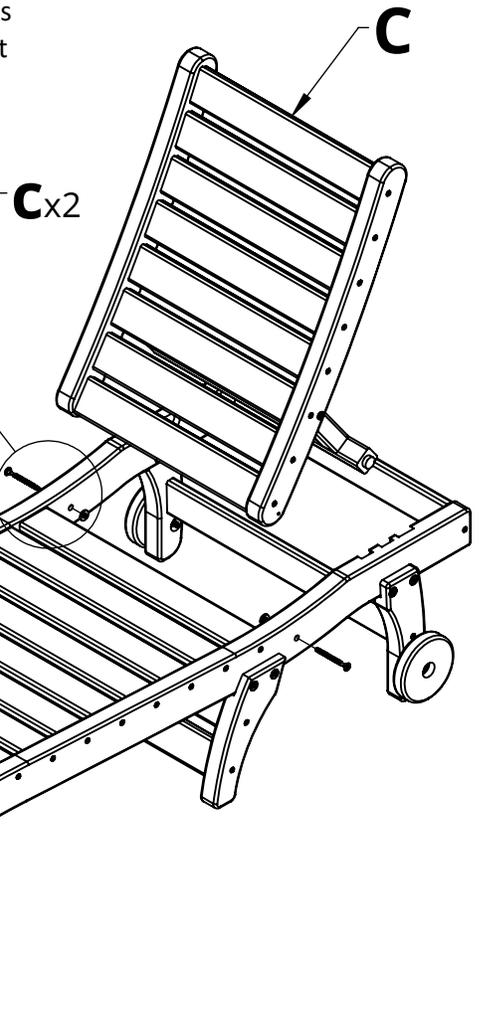

2. Drop Part C into place and connect it through the pre-drilled holes as shown