

Assembly Directions for Adirondack Chair

#PATC2400



HARDWARE PACKAGE


- 2 1/4" x 2 1/2" Lag Bolts
- 4 1/4" x 3 1/2" Allen Head Bolts
- 4 2 1/2" Screws
- 4 1/4" Flange Nuts
- 1 Allen Wrench

TOOLS NEEDED:

- 7/16" Wrench
- Cordless drill/Screwdriver
- #2 Square Drive Bit
- Allen Wrench (Included)
- Hammer


PACKAGE CONTENTS

- | | | | |
|---|------|---|------------------|
| 1 | Seat | 2 | Arm Assemblies |
| 1 | Back | 1 | Hardware Package |




Use to measure bolts




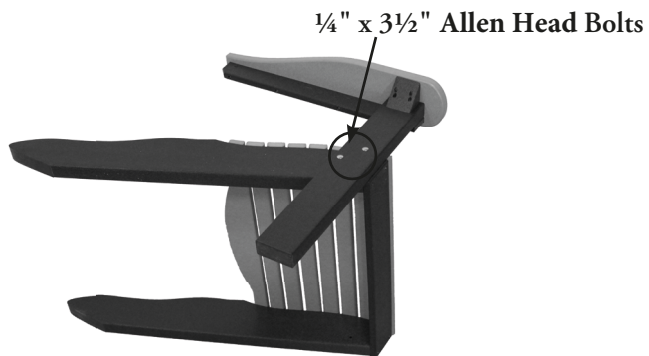

STEP #1 - Fasten the seat and the Arm Assemblies using two 1/4" x 3 1/2" Allen Head bolts.

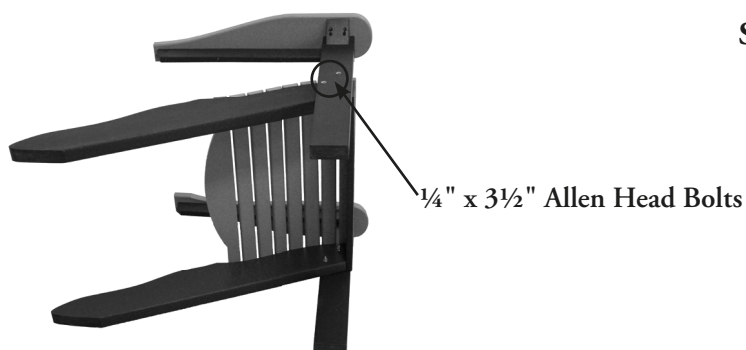

STEP #2 - Lay the chair on the other side and repeat Step 1.

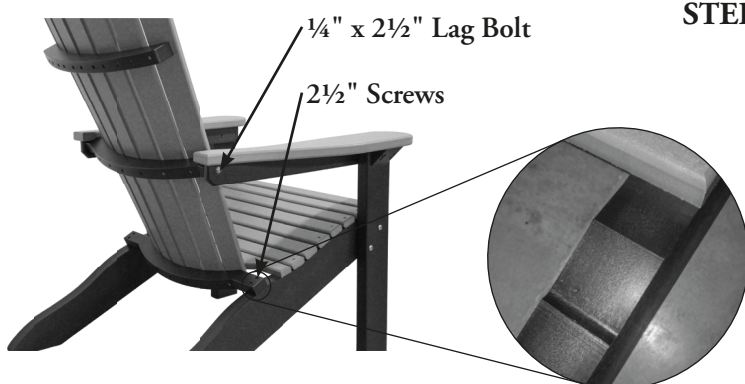

STEP #3 - A. Fasten arm assembly to the back using one 1/4" x 2 1/2" Lag Bolt.
B. Fasten Back to the Seat using two 2 1/2" Screws. Place bottom Back Support in routed slot behind last seat slat for placement. (See picture.)



STEP #4 - Your Adirondack chair is complete!