




Assembly Directions for Counter, Bar and XT Chairs

#PECC2131, #PEBC2135, #PEXTC2139, #PZCC2131, #PZBC2135, #PXXTC2139



Cozi-Back
Counter Chair

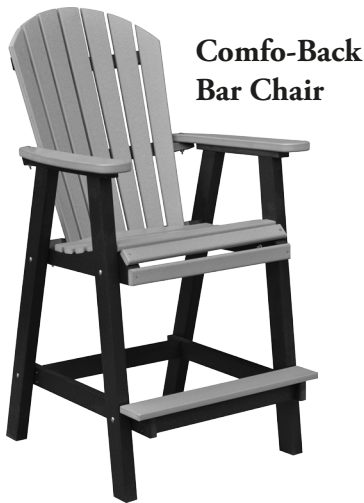

Comfo-Back
Bar Chair



PACKAGE CONTENTS


- 1 Back
- 1 Seat
- 2 Arms with Legs
- 1 Footrest
- 1 Hardware Package

HARDWARE PACKAGE


- 4 1/4" x 3" Allen Head Bolts
- 2 1/4" x 3 1/4" Allen Head Bolts
- 4 1/4" x 3 1/2" Allen Head Bolts
- 2 1/4" x 2 1/2" Allen Head Bolts
- 12 1/4" Flange Nuts
- 4 Acorn Nuts
- 1 Allen Wrench


TOOLS NEEDED:

- Hammer
- 7/16" Wrench
- Allen Wrench (Included)




Use to measure bolts

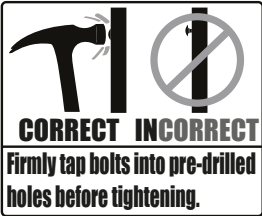


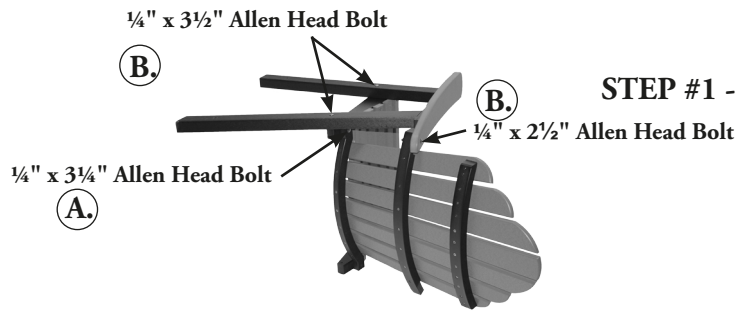


- STEP #1 -**
- A.** Attach the seat to the back using 1- 1/4" x 3 1/4" Allen Head Bolt and Flange Nuts.
- B.** Attach the arm assembly to the Seat and Back using 2- 1/4" x 3 1/2" and 1- 1/4" x 2 1/2" Allen Head Bolts and Flange Nuts.

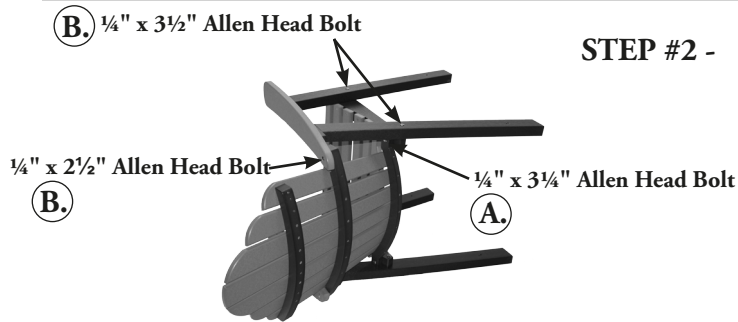

- STEP #2 -** Turn the chair on other side and repeat Step #1.

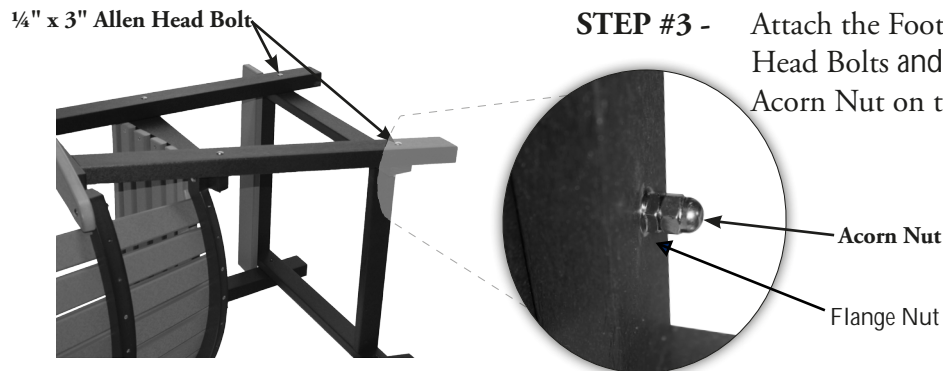

- STEP #3 -** Attach the Footrest to the Legs using 1/4" x 3" Allen Head Bolts and 1/4" Flange Nuts. Second, place Acorn Nut on the end of the Bolt.

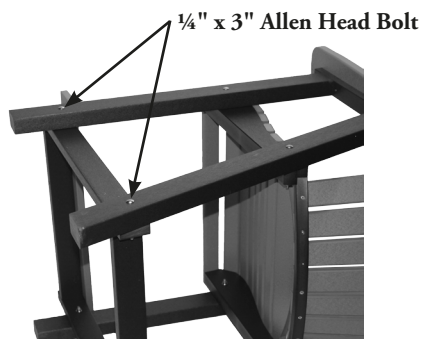

- STEP #4 -** Turn the chair on other side and repeat Step #3.



- STEP #5 -** Set the chair upright. Your chair is now complete!