


## Assembly Directions for Comfo Cozi Dining Chair

#PZDC2127, #PEDC2127

**STEP #1 - A.** Attach the seat to the back using 1- ½" x 3½" Allen Head Bolt and Flange Nuts.

**B.** Attach the arm assembly to the Seat and Back using

2-1/4" x 31/2" and 1-1/4" x 21/2" Allen Head Bolts and Flange Nuts.

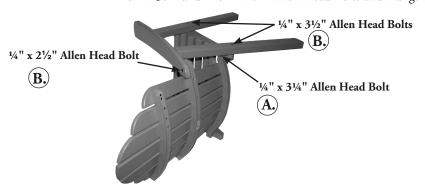

**STEP #2** - Repeat step one.



**STEP #3** - Your Chair is complete!






## PACKAGE CONTENTS

- 1 Back
- 1 Seat
- 2 Arms with Legs
- 1 Hardware Package

## HARDWARE PACKAGE

- 4 ¼" x 3½" Allen Head Bolts
- 2 ¼" x 3¼" Allen Head Bolts
- 2 ¼" x 2½" Allen Head Bolts
- 8 ¼" Flange Nuts



## **TOOLS NEEDED:**

Hammer 7/16" Wrench Allen Wrench (included)

