


Assembly Directions for Swings

#PLTS4800, #PLTS6000, #PCTS4800, # PCTS6000, #PZTS4800, # PZTS6000

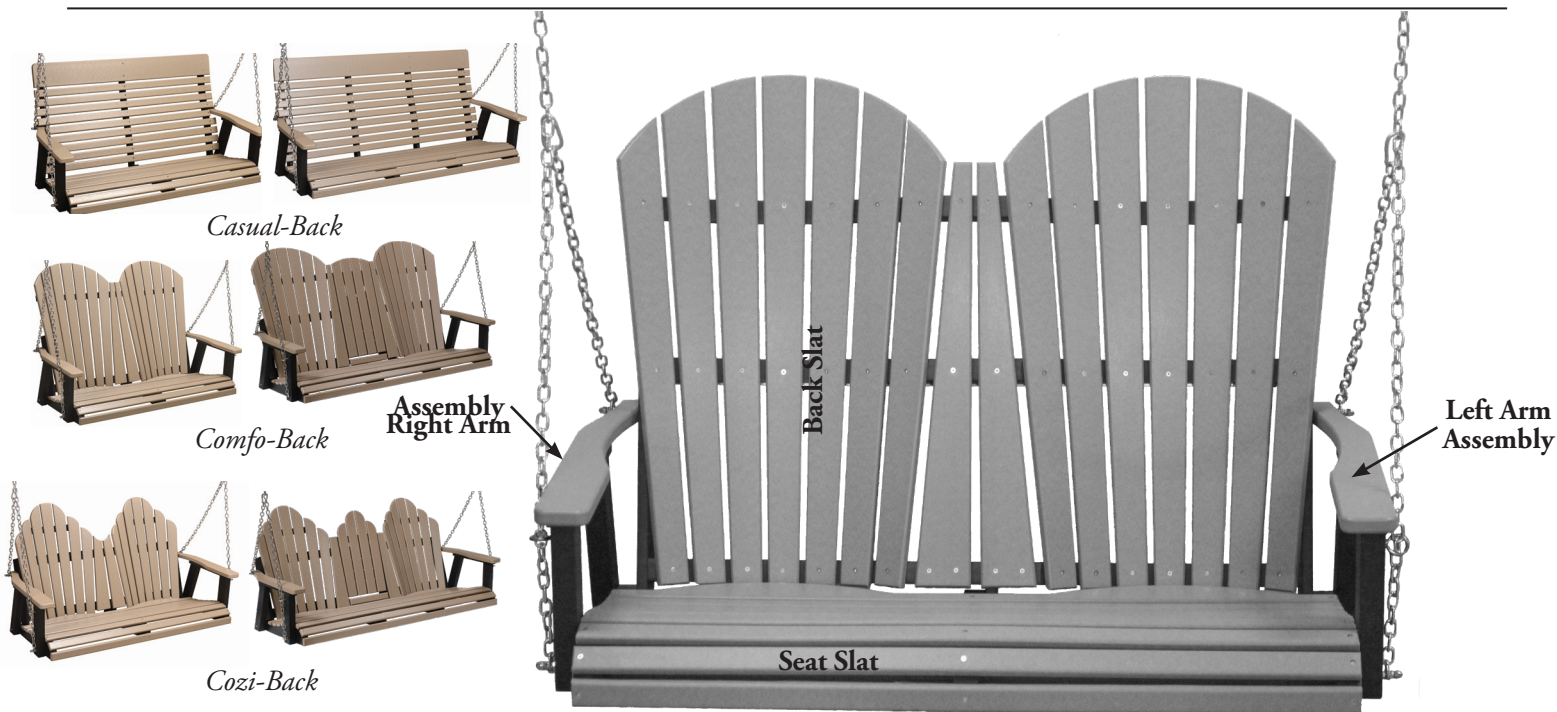

PACKAGE CONTENTS


- 1 Back
- 1 Seat
- 2 Arms
- 1 Hardware Package

HARDWARE PACKAGE

- 2 $\frac{5}{16}$ " x $3\frac{1}{2}$ " Allen Head Bolts
- 2 $\frac{5}{16}$ " x 4" Allen Head Bolts
- 2 $\frac{1}{4}$ " x $4\frac{1}{2}$ " Allen Head Bolts
- 2 $\frac{1}{4}$ " x 3" Allen Head Bolts
- 4 $\frac{5}{16}$ " Flange Nuts
- 8 $\frac{5}{16}$ " Washers
- 4 $\frac{5}{16}$ " Lock Nuts
- 3 $\frac{1}{4}$ " Flange Nuts
- 2 $\frac{5}{16}$ " x $2\frac{1}{2}$ " Eye Screws
- 4 $\frac{5}{16}$ " Acorn Nuts
- 1 Allen Wrench

TOOLS NEEDED:


- Hammer
- $\frac{7}{16}$ " Wrench
- $\frac{1}{2}$ " Wrench
- Allen Wrench (Included)



Use to measure bolts




STEP #1 - Attach the Arm Assembly to the Seat and Back using a $\frac{5}{16}$ " x 4" Allen Head Bolt at the seat, a $\frac{5}{16}$ " x $3\frac{1}{2}$ " Allen Head Bolt at the Arm and a $\frac{1}{4}$ " x $4\frac{1}{2}$ " Allen Head Bolt connecting the Arm Assembly to the Seat and Back. Attach middle back support to seat support using (1) $\frac{1}{4}$ "x3" Allen Head Bolt (**Note: for 3 seat swings, 2 bolts are required**).

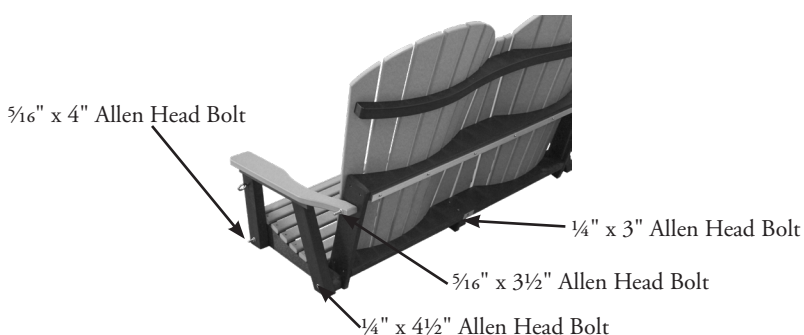


Please note: See diagram for direction of bolt.

STEP #2 - Repeat Step 1.

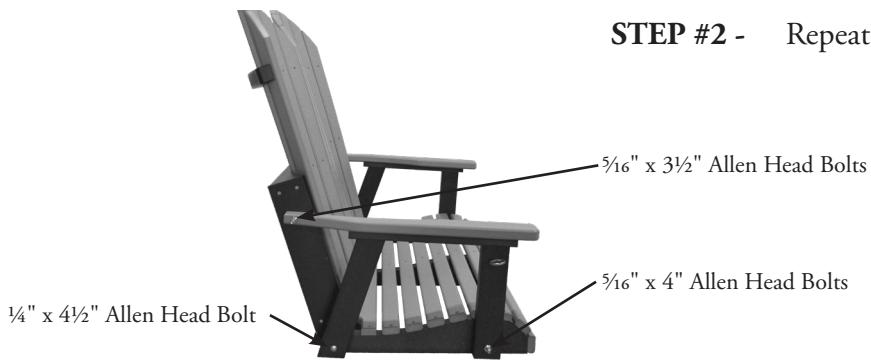

STEP #3 - Install the two Eye Screws into the pre-drilled holes (see Diagram C). Attach the chain to the Allen Head Bolts using Washers and Lock Nuts (see Diagrams A and B).

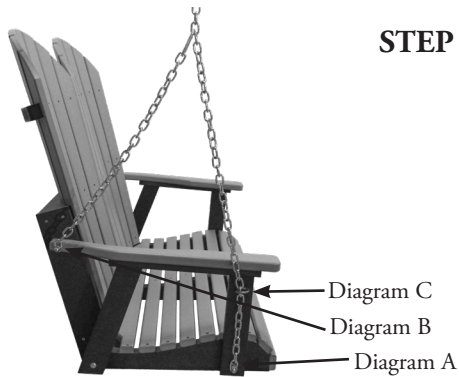

STEP #4 - Repeat Step 3.

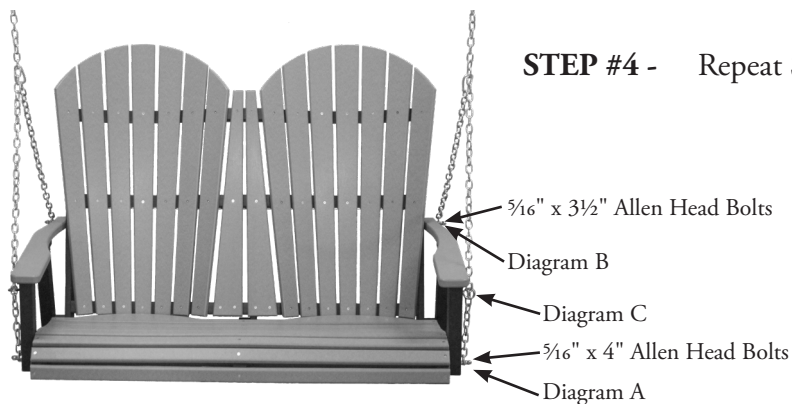


Diagram A

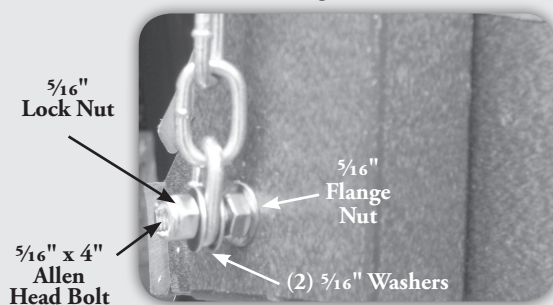


Diagram B

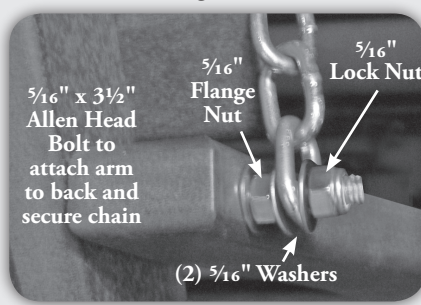


Diagram C

