


# Assembly Directions for Deck Chairs and Rockers

#PCTC2400, #PCTR2400

**STEP #1 -** Attach the Arm Assembly to the Seat and the Back using 1-  $\frac{1}{4}$ " x  $\frac{1}{2}$ ", 1-  $\frac{1}{4}$ " x  $\frac{3}{2}$ ", and 1-  $\frac{1}{4}$ " x 3" Allen Head Bolts.

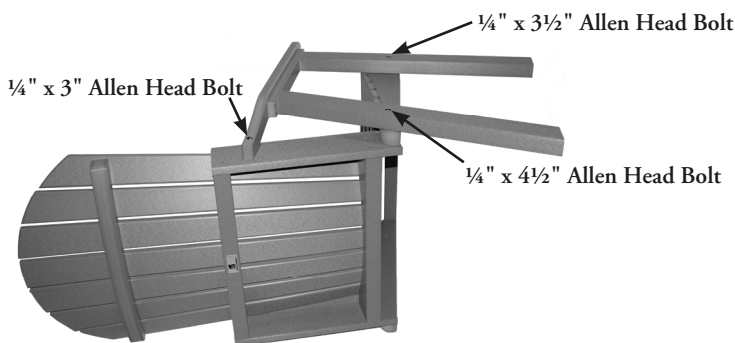

**STEP #2 -** Repeat step one.



**STEP #3 -** Your Chair is complete!



## PACKAGE CONTENTS


- 1 Back
- 1 Seat
- 2 Arms with Legs
- 1 Hardware Package

## HARDWARE PACKAGE

- 2  $\frac{1}{4}$ " x  $\frac{1}{2}$ " Allen Head Bolts
- 2  $\frac{1}{4}$ " x  $\frac{3}{2}$ " Allen Head Bolts
- 2  $\frac{1}{4}$ " x 3" Allen Head Bolts
- 6  $\frac{1}{4}$ " Flange Nuts
- 1 Allen Wrench

## TOOLS NEEDED:

- Hammer
- $\frac{7}{16}$ " Wrench
- Allen Wrench (Included)



Use to measure bolts

