




#### Tools Required


5/32 Hex Key (Included)



#2 Square Drive Bit  
(Not Included)




Cordless Drill  
(Not Included)




#### Hardware

- 4 - 5/16" x 3" Stainless Wafer Bolts
- 2 - 5/16" x 2 1/2" Stainless Wafer Bolts
- 2 - 5/16" x 2" Stainless Wafer Bolts
- 10 - 2" Screws
- 1 - 5/32" Hex Key


#### Armrest Assemblies x2

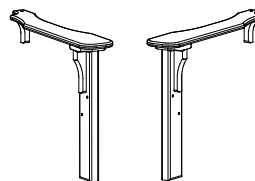


#### Seat Assembly x1

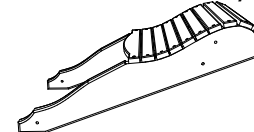

#### Back Legs x2




#### Back Assembly x1

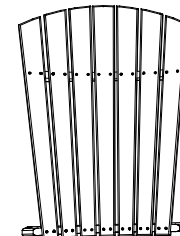


1. Attach Armrest Assembly to Seat Assembly Using 2 - 3" Wafer Bolts per side, Tighten Wafer Bolts with included Hex Key, Be sure to match all numbers.

3" Wafer Bolt

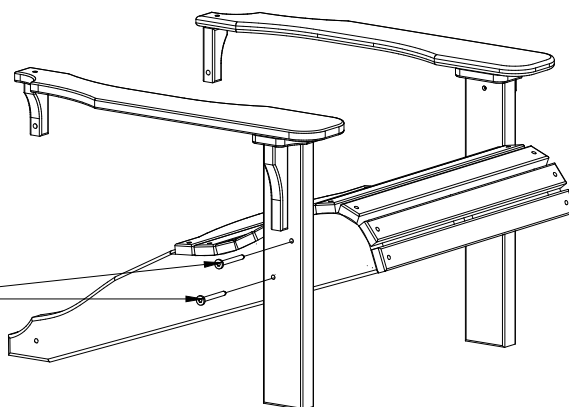


3. Attach Back Assembly to Back Legs & Seat Assembly using 4 - 2" Screws per side, be sure to match all numbers.

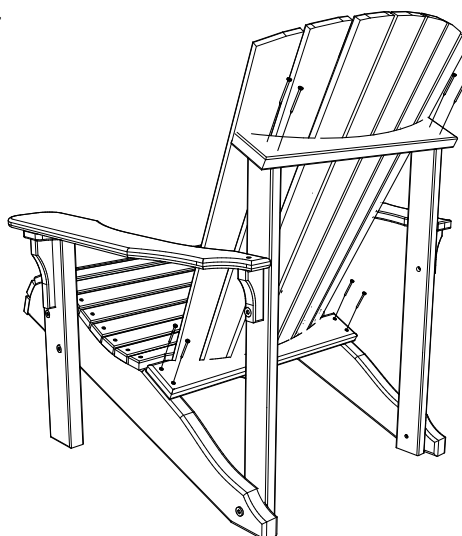

2. Attach Back Legs using 1 - 2-1/2" Wafer Bolt 1 - 2" Wafer Bolt & 1 - 2" Screw per side Tighten Wafer Bolts with included Hex Key, be sure to match all numbers.

2" Screw

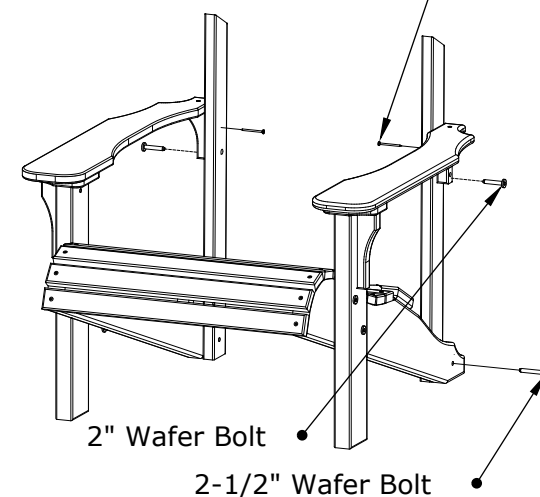

2" Wafer Bolt

2-1/2" Wafer Bolt



Deluxe Adirondack Chair Assembly Instructions

11/25/ 2024

R.M.