





Tools Required
5/32 Hex Key (Included)



#2 Square Drive Bit
(Not Included)




Cordless Drill
(Not Included)




Hardware
4 - 2 " Screws
2- 5/16" x 1 3/4" Stainless Wafer Bolts
4- 5/16" x 2" Stainless Wafer Bolts
1- 5/32" Hex Key


Seat Assembly x1

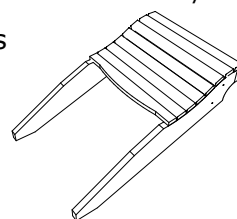


Armrest Assemblies x2

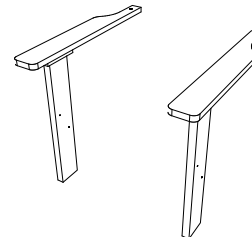

Back Assembly x1

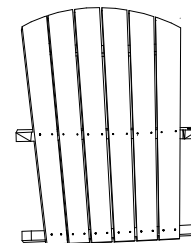


1. Attach Armrests Assembly to Seat Assembly using 2 -5/16" x 2" Wafer Bolts for each Armrest. Be sure to match all numbers. tighten Wafer Bolts with included Hex Key.

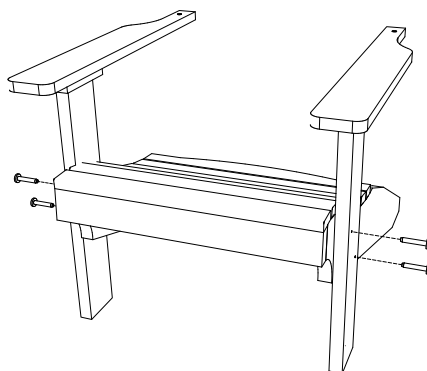


2. Attach Back Assembly to Seat & Armrest's using 2- 2" Screws for Seat Assembly & 1- 1 3/4" Wafer Bolt for Armrest for each side. be sure to match all numbers. tighten Wafer Bolts with included Hex Key.

1 3/4" Wafer Bolt •

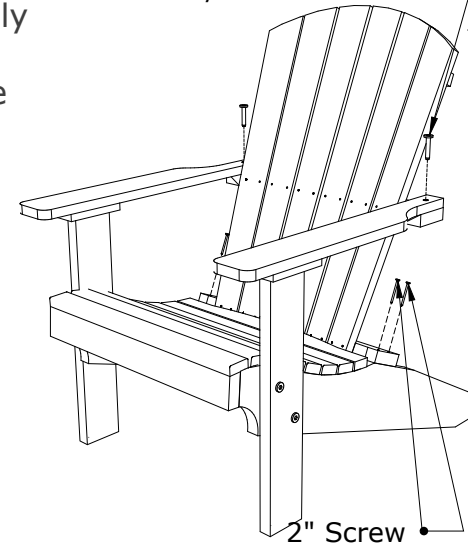

2" Screw •

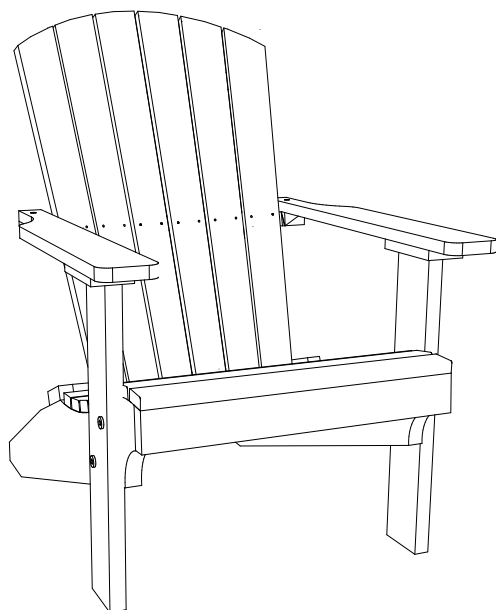

Lakeside Adirondack Chair Assembly Instructions

01/9/ 2025

R.M.