




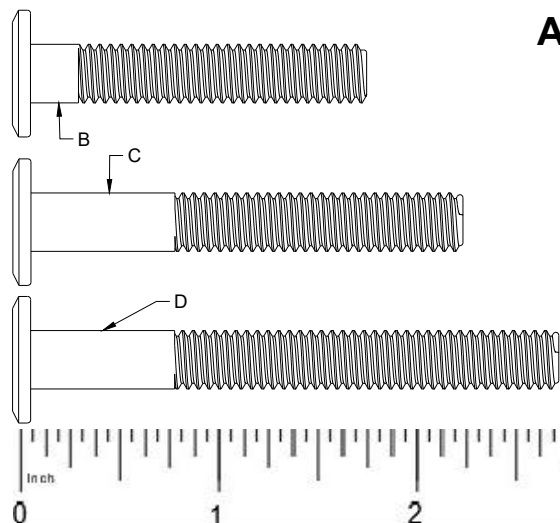

Assembly Instructions

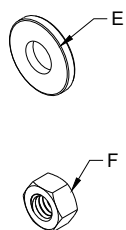


Lanai Deep Seating Center Support		
1	A	Center Support
4	B	$\frac{5}{16}$ "X1 $\frac{3}{4}$ " Stainless Steel Wafer Bolt
4	C	$\frac{5}{16}$ "X2 $\frac{1}{4}$ " Stainless Steel Wafer Bolt
3	D	$\frac{5}{16}$ "X2 $\frac{3}{4}$ " Stainless Steel Wafer Bolt
3	E	$\frac{5}{16}$ " Stainless Steel Washer
3	F	$\frac{5}{16}$ " Stainless Steel Hex Nut
Tools Required		
$\frac{5}{32}$ " Allen Key (Included with the Seat Section)		
$\frac{1}{2}$ " Wrench (Not included)		

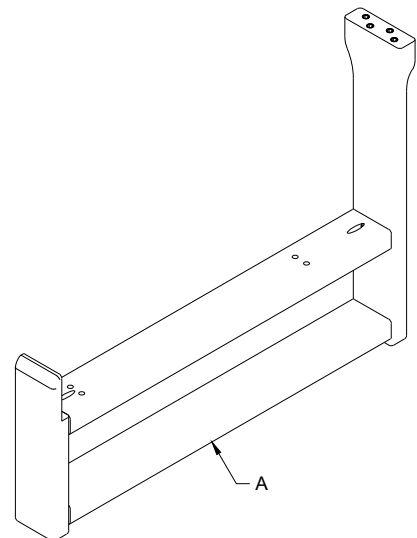


1. When assembling your furniture, choose a flat, clean, soft surface like a carpet, blanket or the flattened cardboard box and remove the staples, to avoid damaging furniture.
2. Attach (A) Center Support to your assembled Seat section using 2-(C) 2 $\frac{1}{4}$ " Wafer Bolts

Tip: Wait to tighten the bolts all the way, till all the fasteners are installed to ease the assembly.

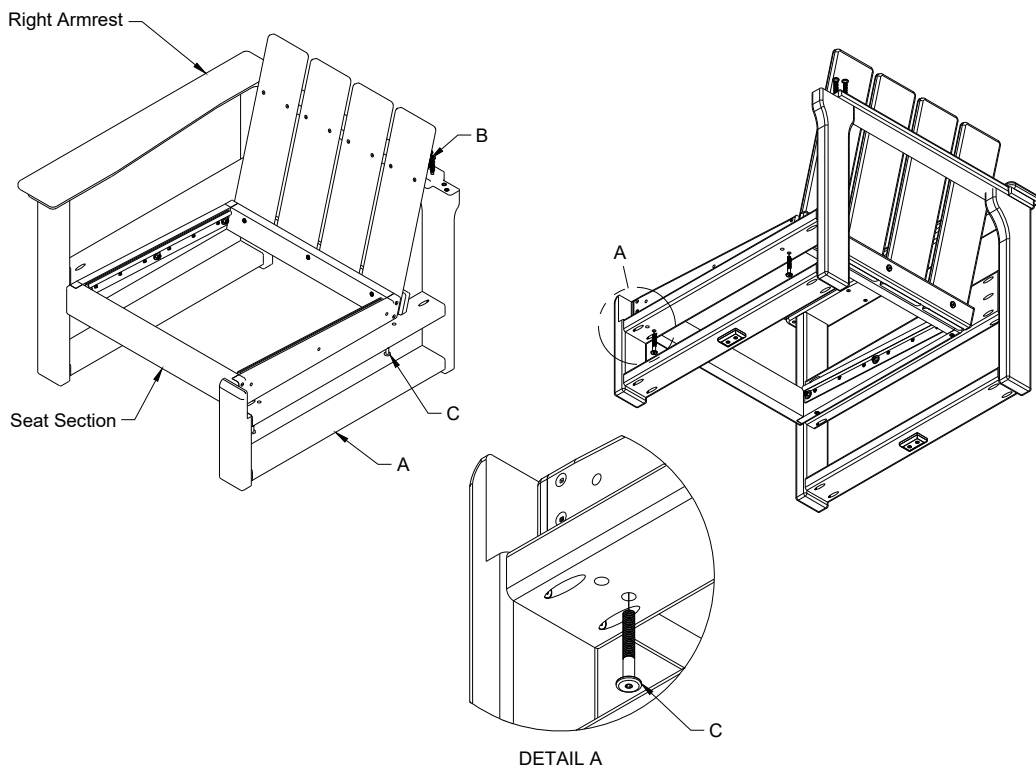


3. Attach the seat back using 2-(B) 1 $\frac{3}{4}$ " Wafer Bolts in the top of Back.

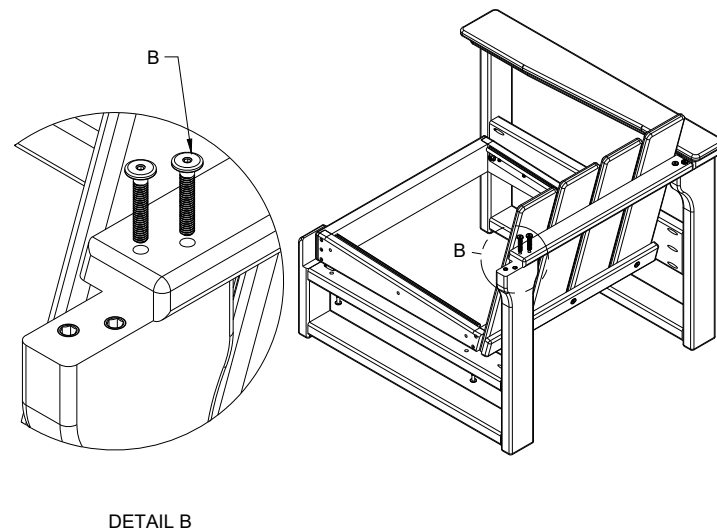




4. Attach another assembled Seat section to current Seat section using 3-(D) 2 $\frac{3}{4}$ " Wafer Bolts, (E) $\frac{5}{16}$ " Washers, (F) $\frac{5}{16}$ " Hex Nuts, in the predrilled holes on the side of the seat sections.

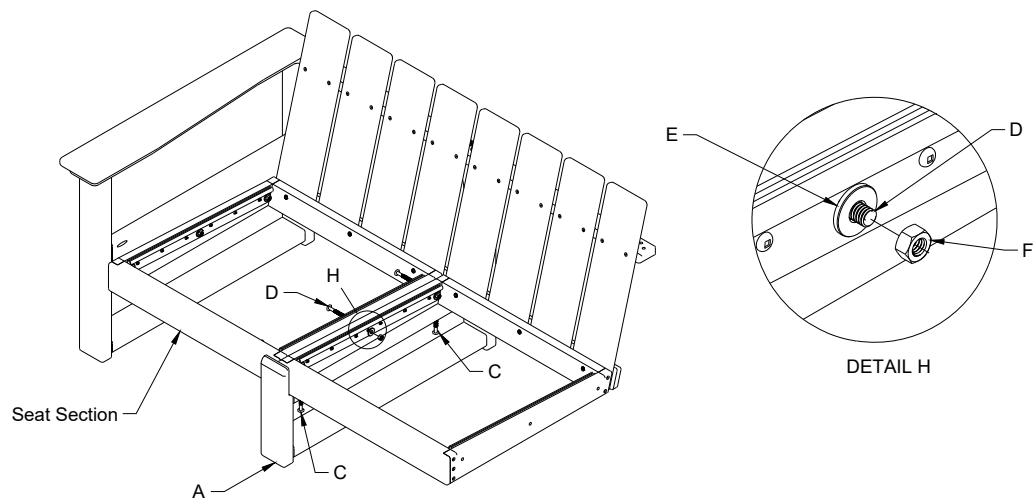

5. Attach the 2nd. seat back using 2-(B) 1 $\frac{3}{4}$ " Wafer Bolts in the top of Back.

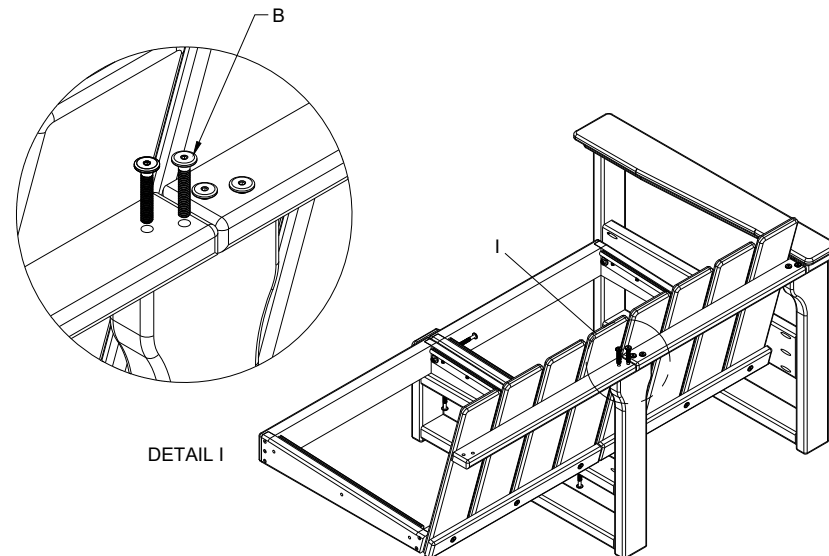

6. Install 2-(C) 2 $\frac{1}{4}$ " Wafer Bolts up through the Center Support into the Seat frame.

