



Lumin Fire Pit 46" Round Parts List		
1	Α	Left End Panel with Control Panel
1	В	Door Panel
1	С	Backside Panel
1	D	Right End Panel
1	Е	Floor
2	F	Door Stop Block
1	G	Тор
4	Н	3" Stainless Steel Screws
4	1	1 ½" Stainless Steel Screws
12	J	1 3/4 " Stainless Steel Screws
10	K	2" Stainless Steel Screws


## **Assembly Instructions**













Tools Required #2 Square Drive Bit (not Included)

For Burner Asssembly Tools. See page 8 in the burner Manual




- 1. Choose a flat non-marking surface to assemble your
- 2. Attach (F) Door Stop Block to (A) &(D) End Panels using 4 (K) 2" screws in the predrilled holes. Position in notch flush against side panel.

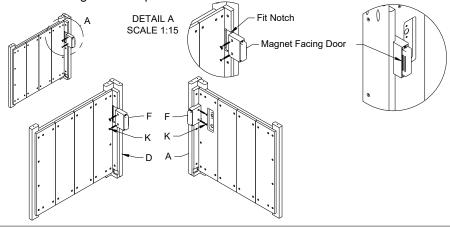


3. Attach (C) Backside Panel to (E) Floor using 4 (I)  $1\frac{1}{2}$ " Screws in


predrilled holes. Note: Set floor on Stop and keep

ends flush with Stop.

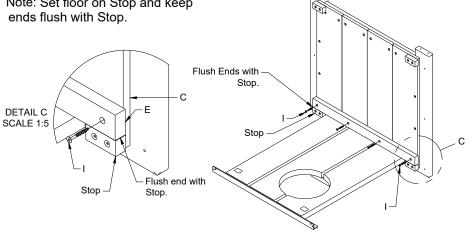


4. Position Aluminum Angle (E) into Notch of (A) Left End. Note: Push (A) Left End against Notch and Stops before attaching, using 2 (H)  $\frac{3}{4}$ " Screws. Attach (A) End Panel to (C) Back Panel using 3 (K) 2" screws in predrilled holes.

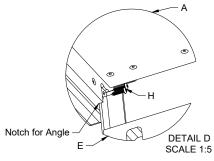

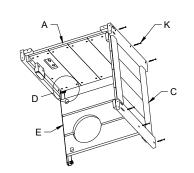

5. Repeat step 4 to Attach (D) Right End.  $_{\text{E}}$   $_{\neg}$ 

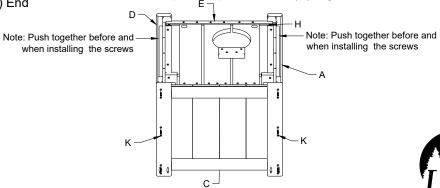





## Lux Craft


## **Assembly Instructions**


6. . Install door, verify about one-eighth inch clearance between door and side post, before installing top.

7.Position (G) Top on assembled Base, align with Pockets in Top. Attach Top using 12 (J)  $1\frac{3}{4}$ " Screws in predrilled holes.

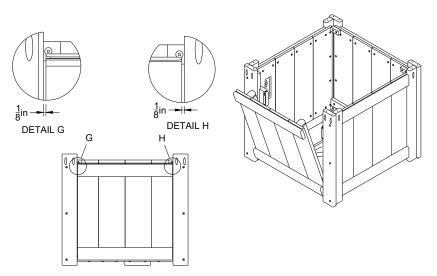

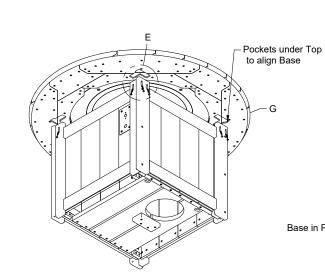

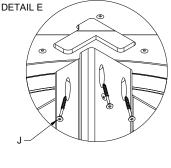

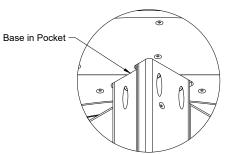

- 8.Read, Understand and follow "Burner Instruction Manual" for safe operation.
- 9. Follow instructions in "Burner Installation Section" starting on page 6 in the manual. Attach Igniter, and Burner Control, to the Control Plate.
- 10. Assemble Wind Guard. "Always keep Wind Guard in place with lighted burner"!!!!!!

