

MHSAC3039  
Mayhew Stationary Adirondack Chair

# Assembly Guide



## Hardware Included

A  
x4




1/4" x 2 1/4" Bolt

B  
x4




1/4" Flange Nut

C  
x2



1/4" x 2 1/2" Lag

D  
x4



2" Sq. Drive Screw

## Tools Needed



7/16" Wrench



Allen Wrench (Included)



Hammer




Cordless Drill

+



#2 Square Drive Bit

# Step 1

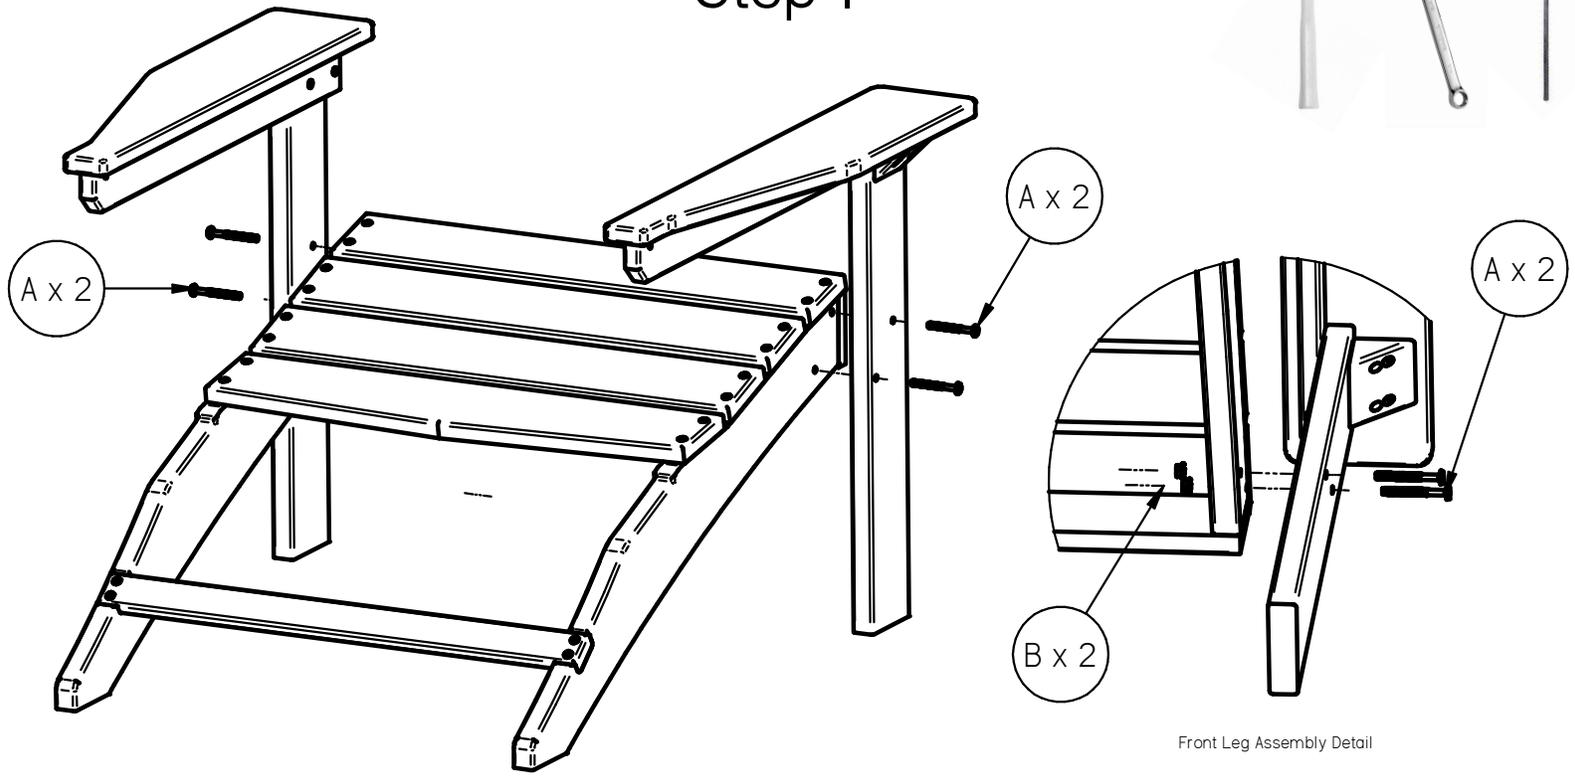

# Step 2

