





## Tools Required

#2 Square Drive Bit  
(Not Included)




Cordless Drill  
(Not Included)




Hardware  
40 - 1-1/2" Screws


Top x1

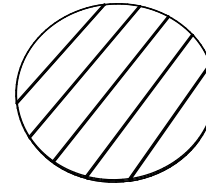

Shelf x1

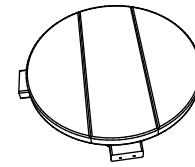


Braces x4

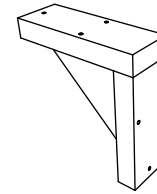


Legs x4




1. Lay Top on Soft Blanket to prevent Scratches.  
Attach Legs in notch with 1-1/2" Screws in pocket holes. Keep mark on leg aligned with outside edge of crosspiece.

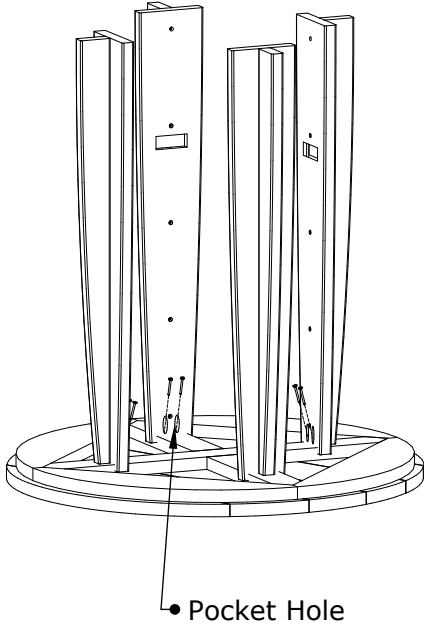

2. Attach Shelf into notches in legs using 1-1/2" Screws in pocket holes.

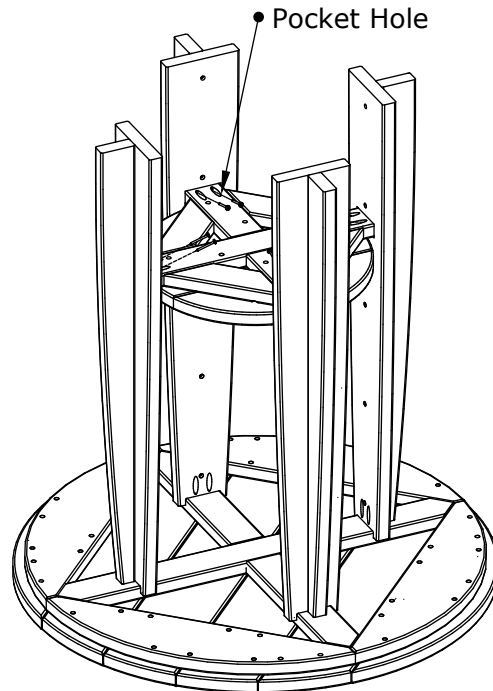

3. Attach Braces using 1-1/2" Screws in predrilled holes. Keep Braces centered with legs & Crosspiece.

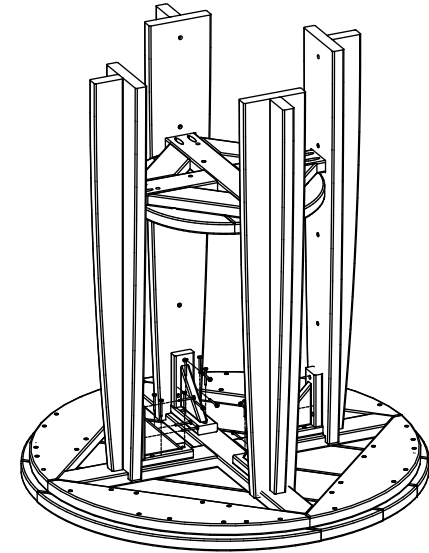

Poly Balcony Table Assembly Instructions

02/14/ 2025

R.M.