



breezesta™

**SKYLINE CAPTAINS DINING CHAIR**  
**SK-0408**

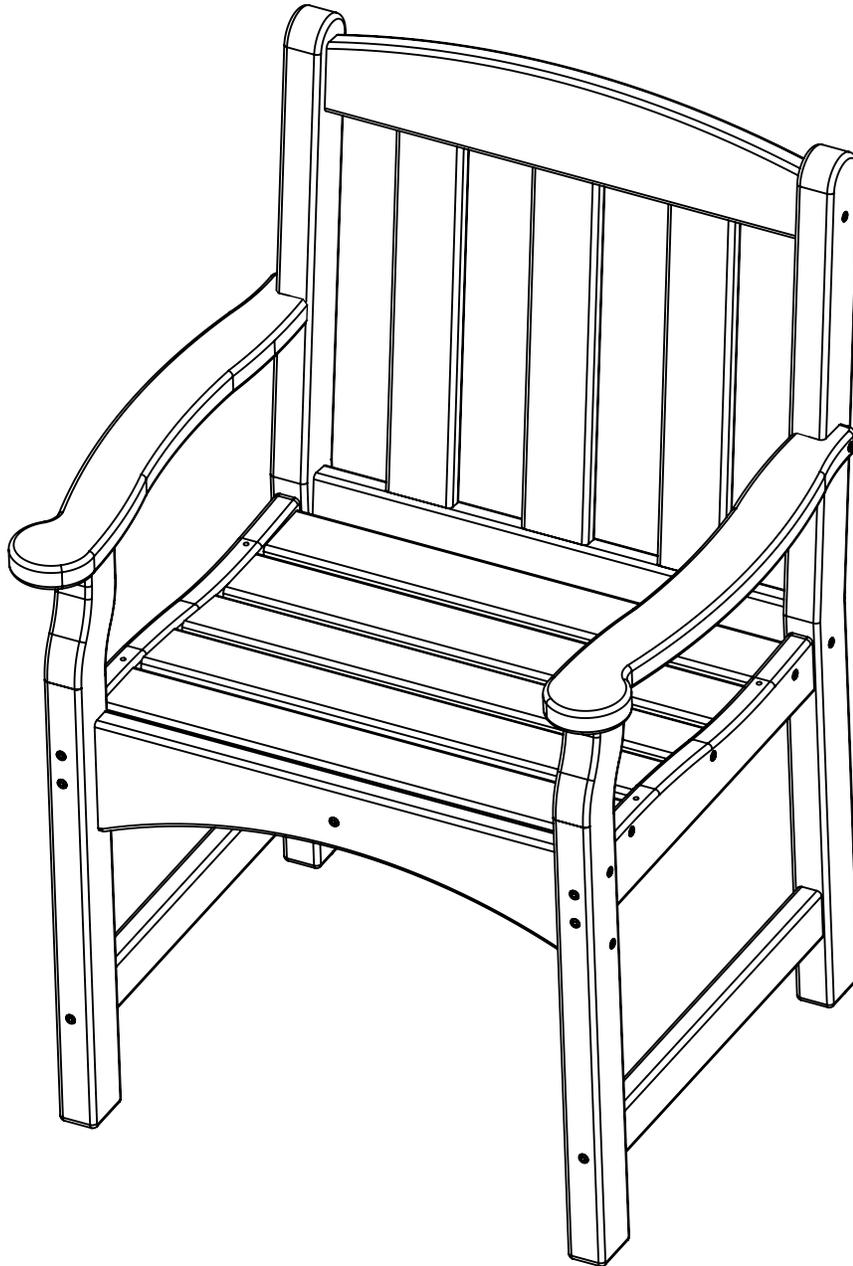


REV00-1/19

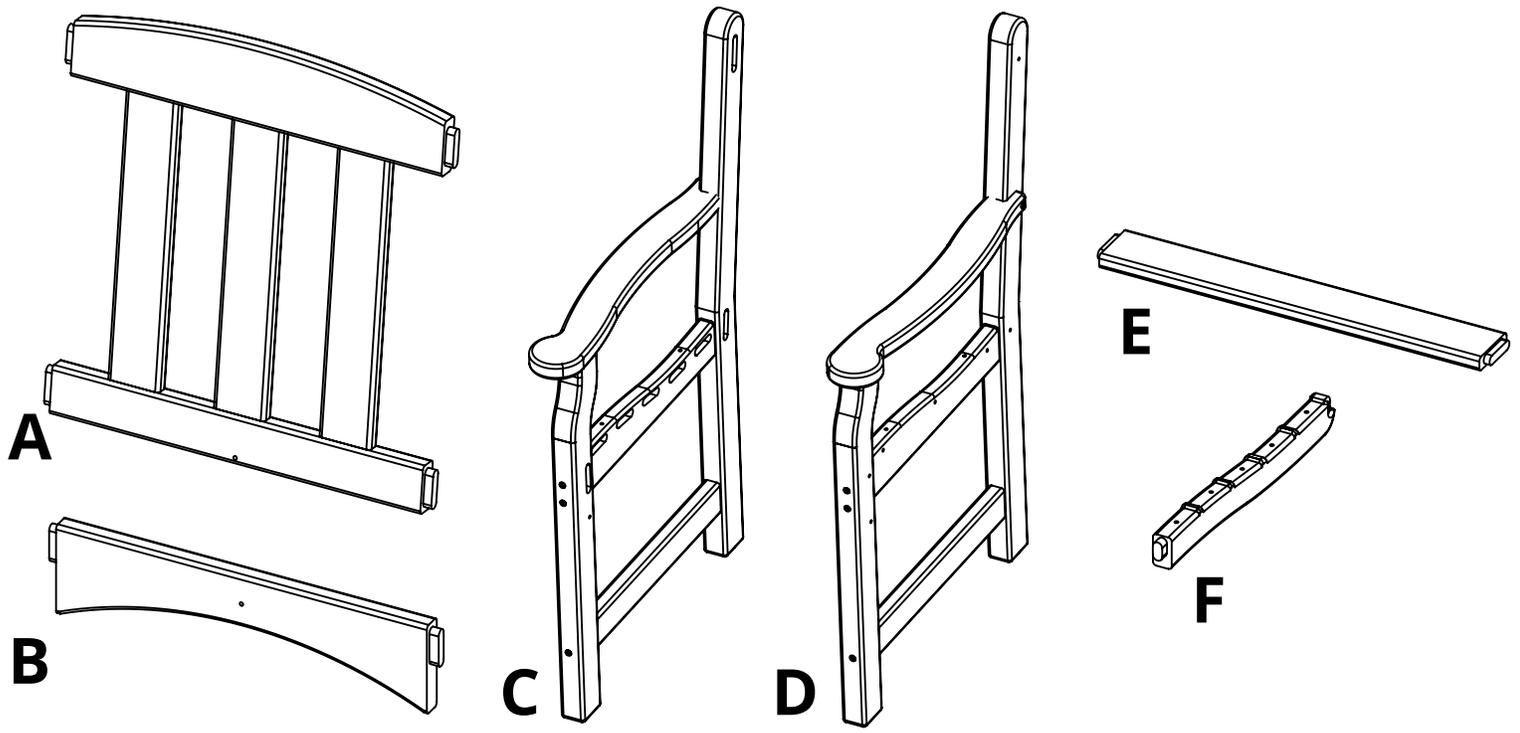

## PARTS

PART	DESCRIPTION	PART NO.	QTY
A	BACK ASSEMBLY	SA-00157	1
B	FRONT RAIL	PRT-00293	1
C	LEFT SIDE ASSEMBLY	SA-00159	1
D	RIGHT SIDE ASSEMBLY	SA-00160	1
E	STANDARD SEAT SLAT 21.25	SS-20.25	5
F	SEAT SUPPORT	PRT-00294	1

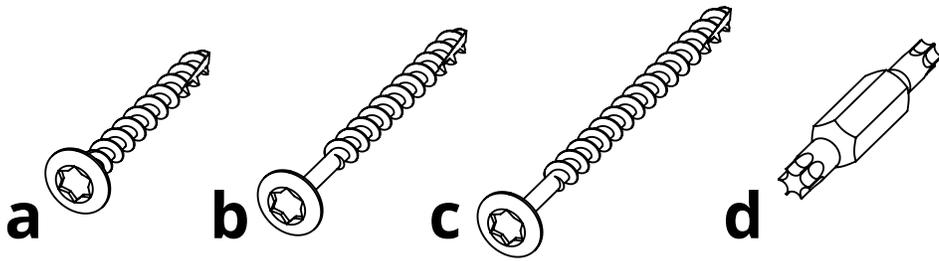


## HARDWARE

PART	DESCRIPTION	PART NO.	QTY
a	#8 X 1-1/2" TORX SCREW	H-0000-S815	7
b	#8 X 2" TORX SCREW	H-0000-S82	5
c	#8 X 2-1/2" TORX SCREW	H-0000-S825	9
d	T20 & T25 TORX BIT	H-0000-CTD	1


**Suggested Tools:** Drill, Plastic Mallet

# Please read entire instructions before beginning

**1.** Attach Parts A, E, & B to Part C using Hardware a on Parts E and Hardware c everywhere else

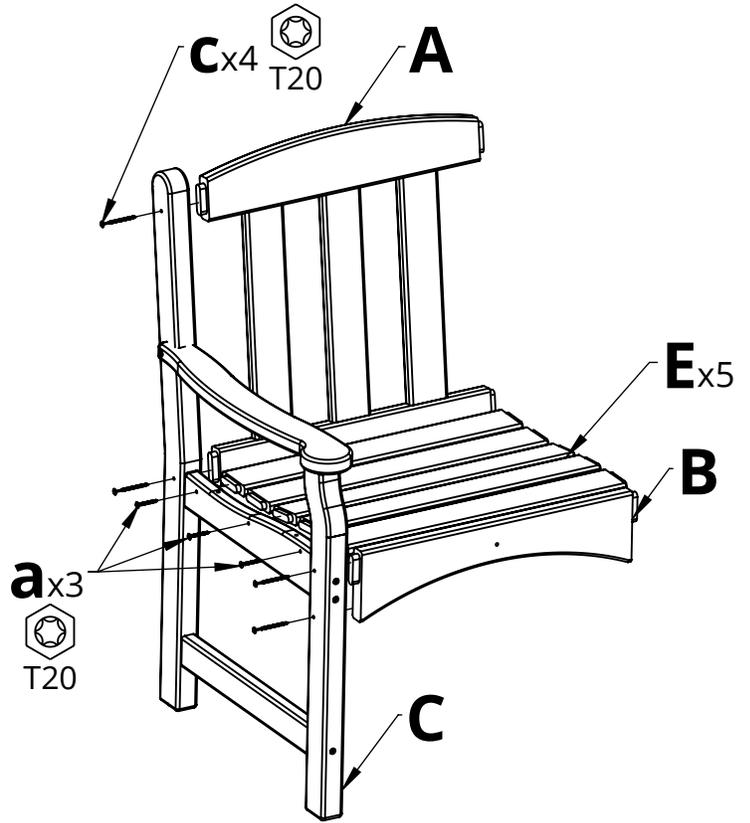

**2.** Attach Part D using the same hardware as Step 1

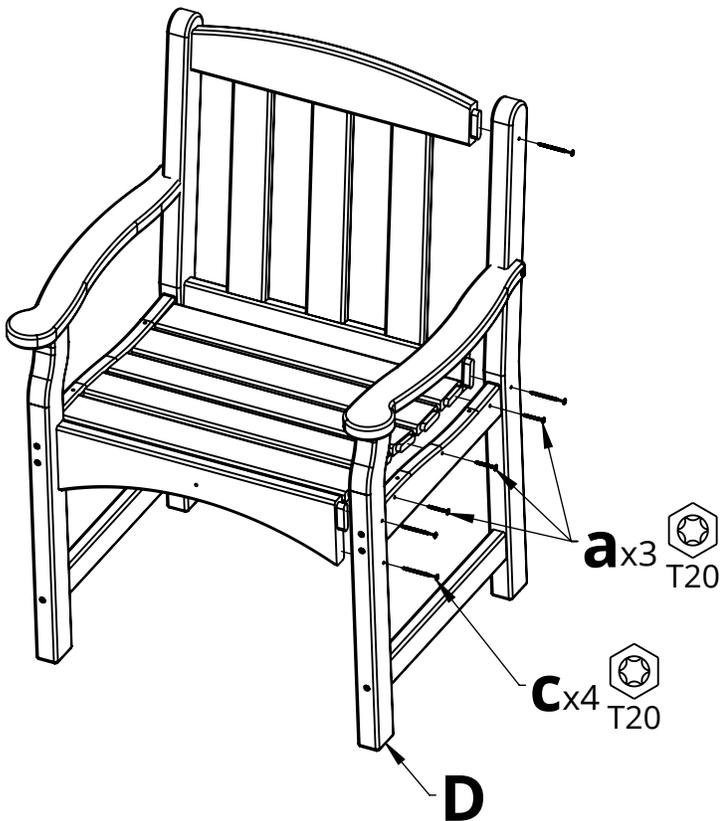

**3.** Attach Part F using the hardware shown

