





Hardware  
4 - 2" Screws

Tools Required


#2 Square Drive Bit  
(Not Included)




Cordless Drill  
(Not Included)




Cup Holder x1




Support Blocks x2





1. Remove 1 Screw from backside of  
Cup Holder & swing block to one side.

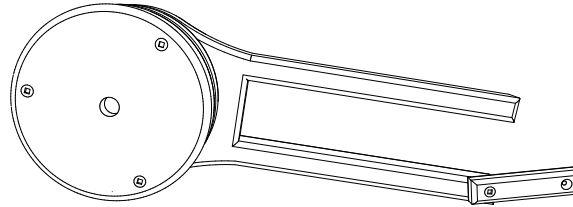

2. Slide Cup Holder over Front  
Leg & Reinstall Screw removed  
in step 1.

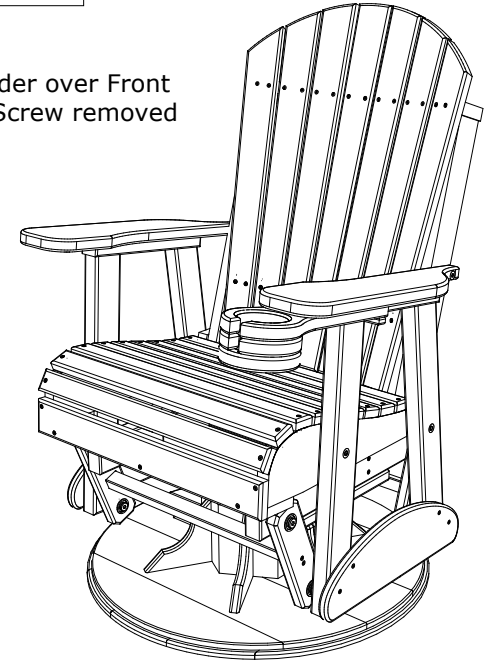

3. Attach Support Blocks to each side  
of Leg using 2 - 2" Screws per Block..... See Note Below.

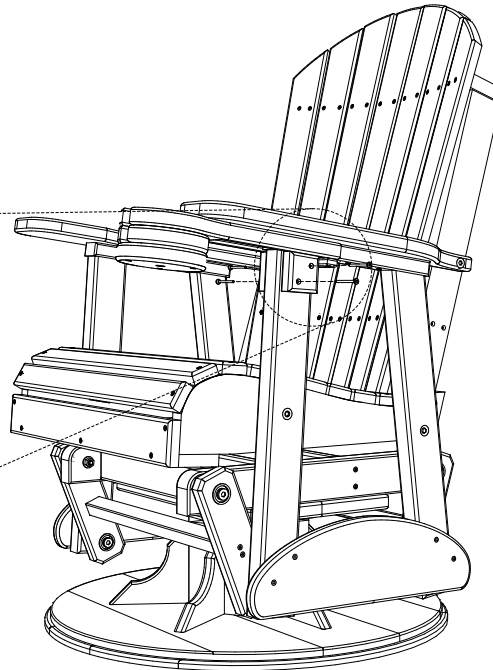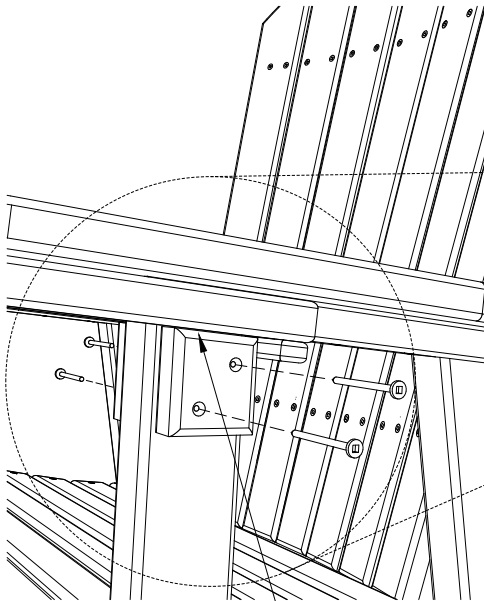

Important: Make Sure Block Is  
• Positioned With Angle cut along Top  
and Long side towards front.



Slide Out Poly Cup Holder Assembly Instructions

11/21/ 2024

R.M.