



Parts List


- 1 - (A) Seat Assembly
- 1 - (B) Back Assembly
- 1 - (C) Right Armrest Assembly
- 1 - (D) Left Armrest Assembly

Hardware


- 4 - 3" Stainless Wafer Bolts
- 2 - 1-3/4" Stainless Wafer Bolts
- 4 - 2-1/2" Stainless Steel Screws
- 4 - 2" Stainless Steel Screws
- 1 - 5/32" Hex Key

Tools Required


- 5/32 Hex Key (Included)
- #2 Square Drive Bit (Not Included)

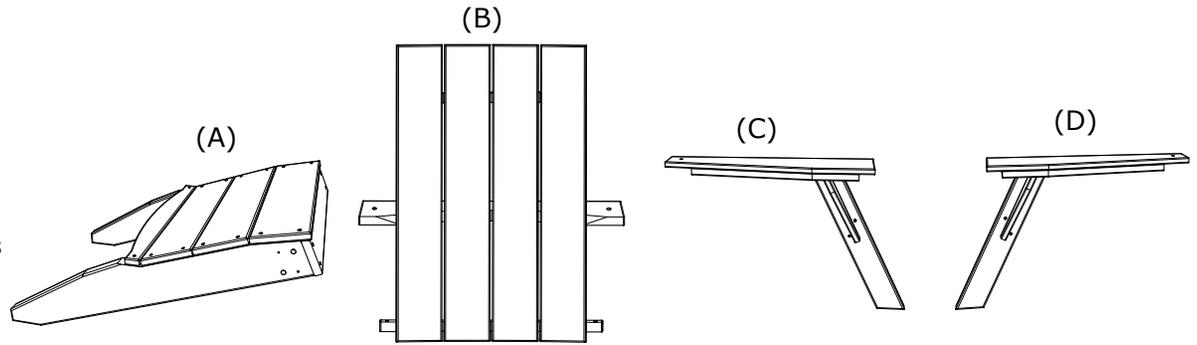


1. Attach (C) and (D) Armrest Assemblies to (A) Seat Assembly using 2 - 3" Stainless Wafer Bolts per Side, Be sure to match all numbers and or letters.

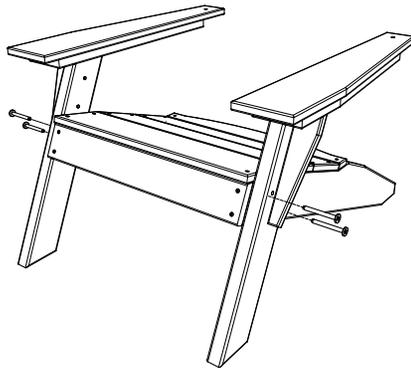

2. Assemble 2 - 2-1/2" Screws per side of Seat Support in pre Drilled Holes.

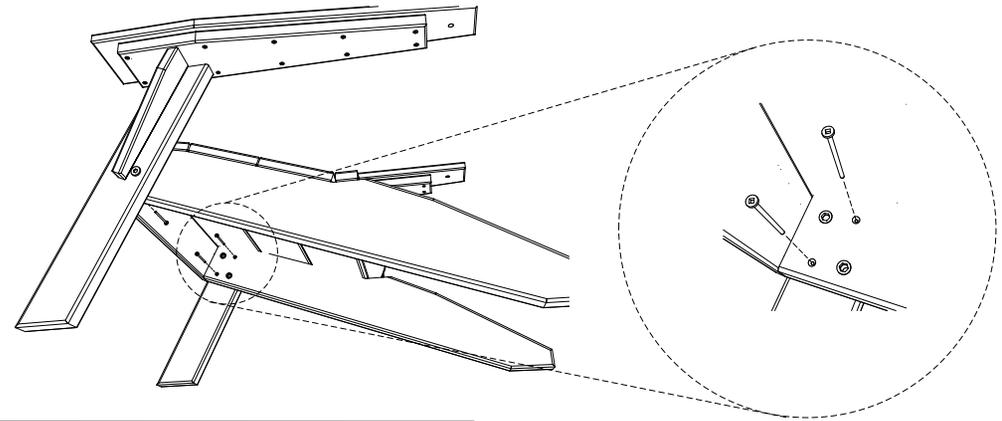

3. Attach (B) Back Assembly using 1 - 1-3/4" Stainless Wafer Bolt and 2 - 2" Stainless Steel Screws per side, Be Sure to match all numbers and or letters.

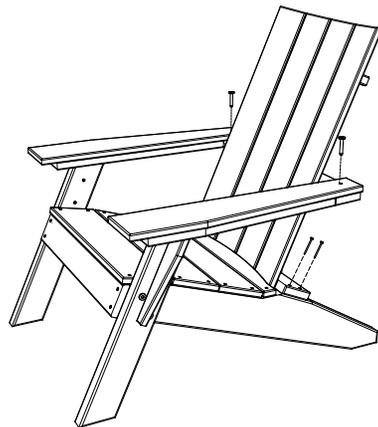

Urban Adirondack Chair Assembly Instructions

11/20/ 2018

R.M.