



Urban Dining Table Assembly Instructions

Tools Required

$\frac{5}{32}$ " Hex Key (Included)

$\frac{1}{2}$ " wrench (Not Included)



28 - $\frac{5}{16}$ " x 1 1/2"

Stainless Steel Wafer Bolt

18 - $\frac{5}{16}$ " x 2 1/2" Stainless Steel Wafer Bolt


2 x Leg

2 x Leg Cover


1 x Leg Truss

1 x Top


1. Choose a flat surface. Lay Top on a blanket to prevent scratches..
2. Remove and discard Poly Shipping Stabilizer pieces.

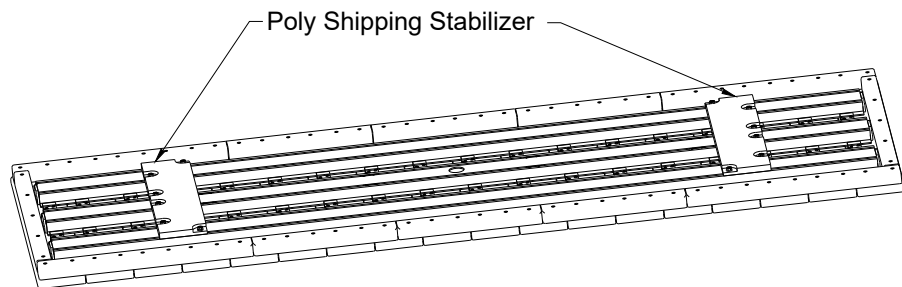


3. Attach Leg Truss to Top using 8- 1 1/2" wafer bolts. Align umbrella hole, then insert bolts through Leg Truss into nuts in aluminum rail. Thread bolts in four turns; fully tighten later.

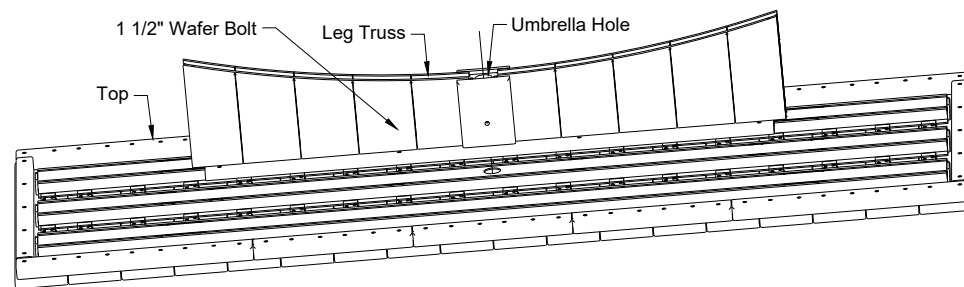

4. Attach Legs to Leg Truss with 3- 2 1/2" wafer bolts per leg. Thread bolts in four turns; fully tighten later.

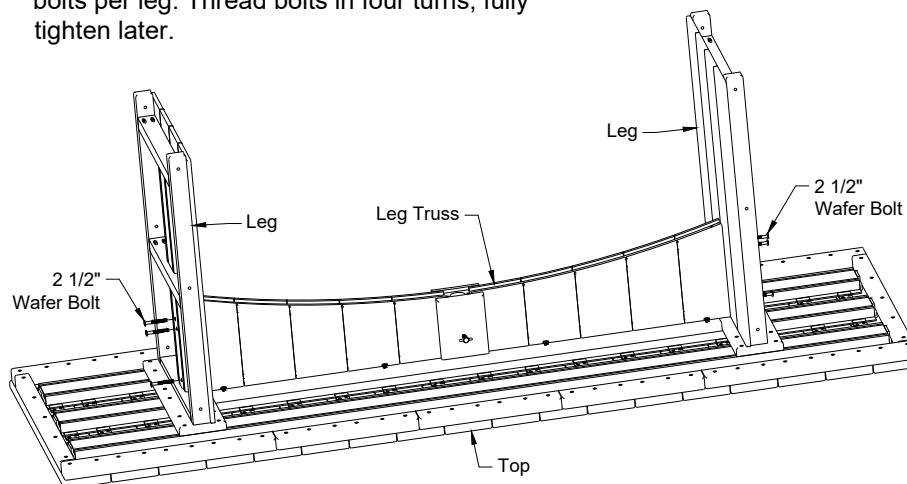


5. Attach Legs to Top with 10- 1 1/2" wafer bolts per leg. Thread bolts in four turns; fully tighten later.

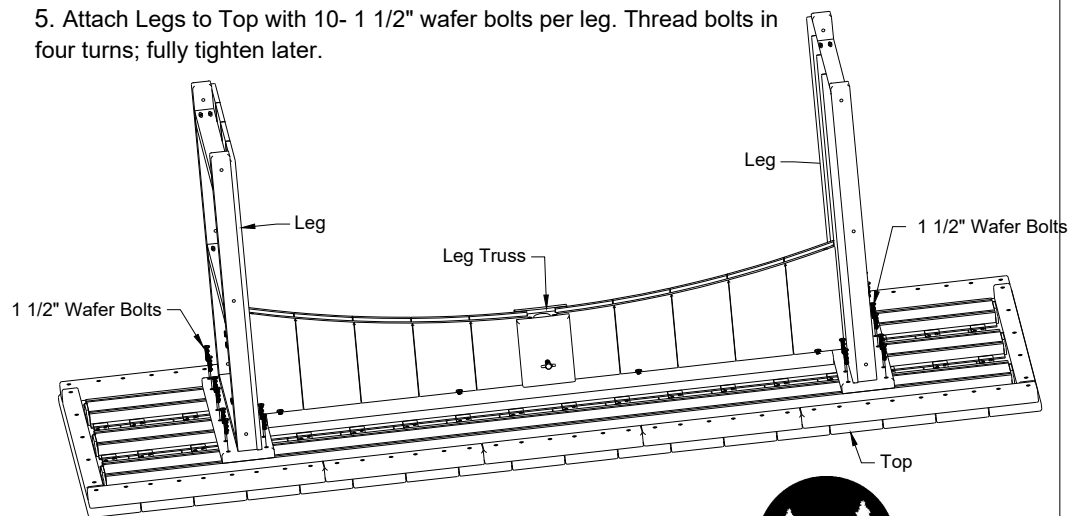

Urban Dining Table



6. Fully tighten bolts securing Legs to Leg Truss first, then tighten bolts securing Legs and Leg Truss to Top.

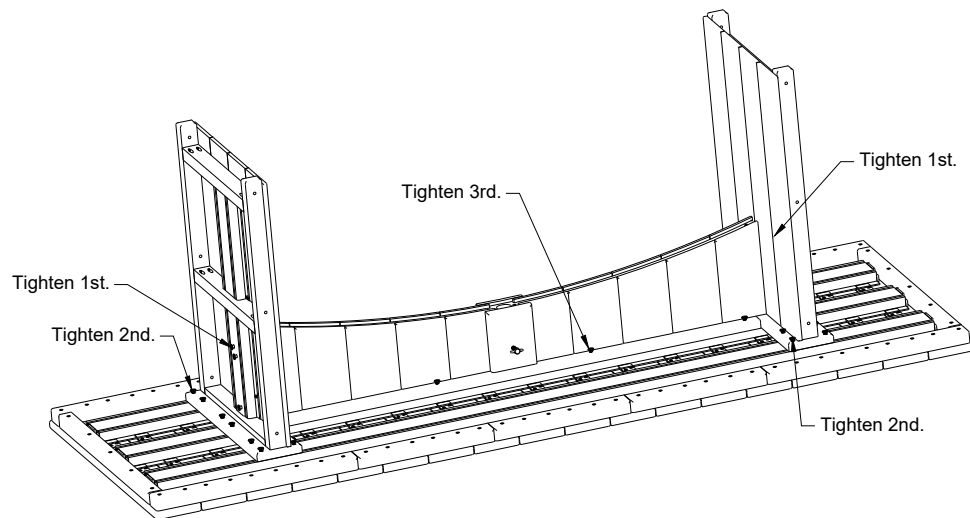

7. Attach Leg Cover to Leg with 6- 2 1/2" wafer bolts per leg.

