

LuxCraft™
FINE OUTDOOR FURNITURE

Tools Required

5/32 Hex Key (Included)

#2 Square Drive Bit (Not Included)

9/16" Wrench (Not Included)

Hardware

2 - 3/8" x 9" Hex Head Bolts

2 - 3/8" x 8" Hex Head Bolts

8 - 5/16" x 6" Hex Head Bolts

24 - 3/8" Washers

4 - 3/8" Nuts

8 - 5/16" Nuts

16 - 2" Screws

Beam x1

Legs x4

End Cap x2


Top Brace x4

Side Brace x2


0 1 2 3 4 5 6 7 8 9 10

Inch


1. Place Beam on ground with Swing Hooks facing up.




2. Attach 2 Legs to Beam using 1 - 3/8" x 8" Bolt 2 - Washers & 1 - 3/8" Nut, Attach 1 - Side Brace to Legs using 2 - 5/16 x 6" Bolts 4 - Washers & 2 - 5/16" Nuts. Be sure to match all numbers.

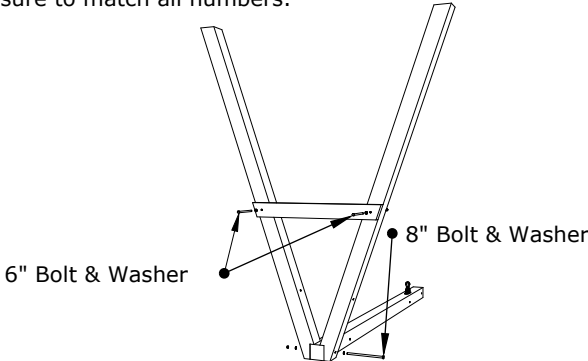


3. Attach 2 Top Braces to Beam & Legs using 2 - 5/16 x 6" Bolts 4 Washers & 2 - 5/16" Nuts for Legs. Install 1 - 3/8" x 9" Bolt 2 Washers & 1 - 3/8" Nut for Beam. Be sure to match all numbers.

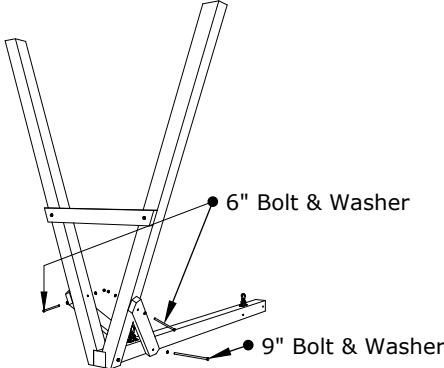


4. Repeat step 2 & 3 for opposite side.

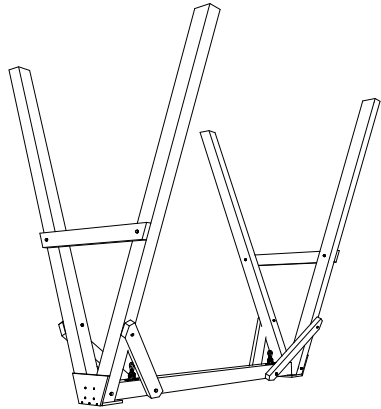

5. Attach End Caps using 8 - 2" Screws per End Cap in predrilled holes. Be sure to match all numbers.

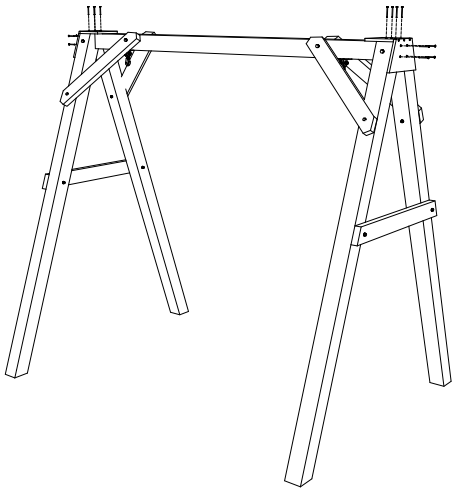



LuxCraft™
FINE OUTDOOR FURNITURE

Vinyl A Frame Assembly Instructions

11/25/ 2024

R.M.

Page 1 of 1