

Portsmouth 30" Table

(Dining 055)

(Balcony 080)

(Bar 057)



SEASIDE CASUAL



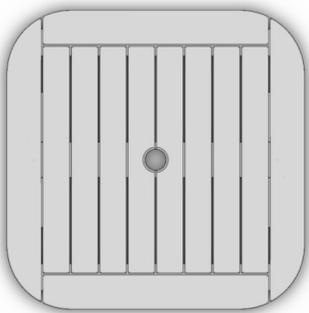
ASSEMBLY INSTRUCTIONS

1

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.
Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.

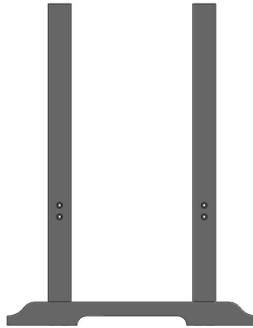
Tools Required: 4mm Allen Wrench (included); #2 Phillips Head Screwdriver; Rubber Mallet

Table Top Assembly



x 1

Leg Assembly



x 2

Long Apron Assembly



x 2

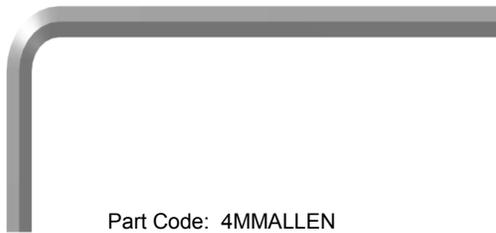
Short Apron



x 2

4mm Allen Wrench

Actual Size



Part Code: 4MMALLEN

x 1

Leg Stretcher



Dining and Balcony

x 2

Bar Height

x 4

80mm Hex Lag

Actual Size



Part Code: 316-1/4-10-80HL

Dining and Balcony

x 16

Bar Height

x 24

1-1/4" Phillips Head Screw

Actual Size



Part Code: 316-8X1-1/4PFDS

x 48

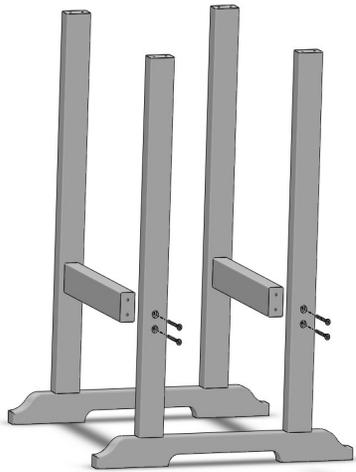
5/8" Bung

Actual Size

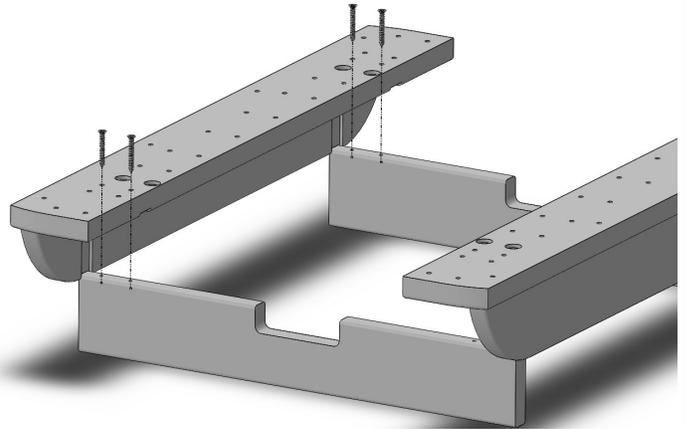


x 16

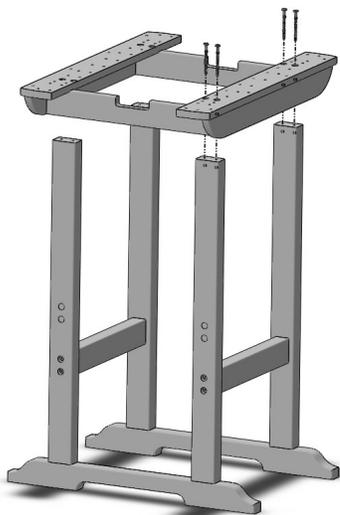
WARRANTY QUESTIONS OR COMMENTS PLEASE CALL TOLL FREE AT 1-800-809-3114

2**ATTACH STRETCHERS TO LEG ASSEMBLIES**

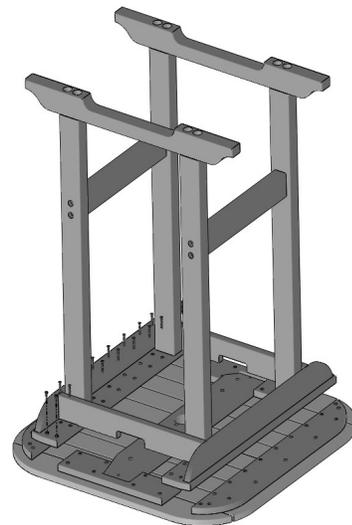
Attach Stretchers to Leg Assemblies using (8) 80mm Hex Lags (16 for Bar Height) as shown. Plug holes with 5/8" Bungs using Rubber Mallet.

3**ATTACH SHORT APRONS TO LONG APRON ASSEMBLY**

Align slots in long apron assembly with short apron. Secure using (8) 1-1/4" Phillips Head Screws through pilot holes in short aprons.

4**ATTACH APRON ASSEMBLY TO BASE ASSEMBLY**

Align counter-bored holes in long apron assembly with Predrilled holes on Legs as shown. Secure using (8) 80mm Hex Lags.

5**ATTACH BASE ASSEMBLY TO TABLE TOP ASSEMBLY**

Flip over Base Assembly and align cleats on apron assembly with table top cleats. Secure using (40) 1-1/4" Phillips Head Screws.