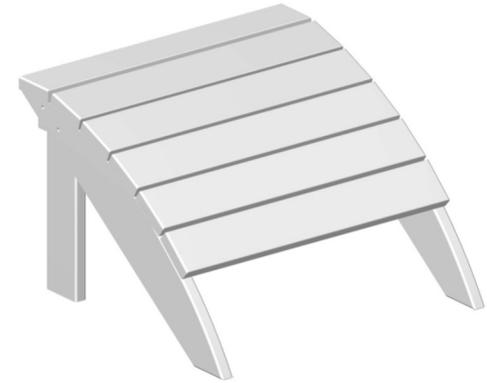


HARBOR VIEW FOOT STOOL

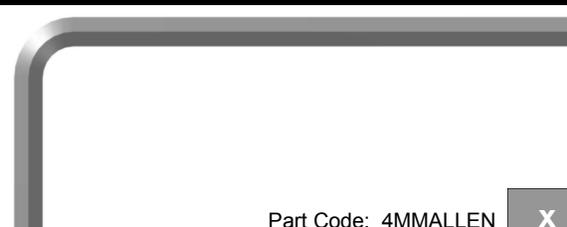
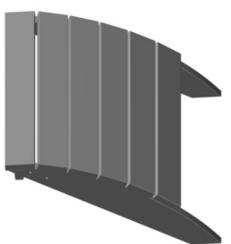
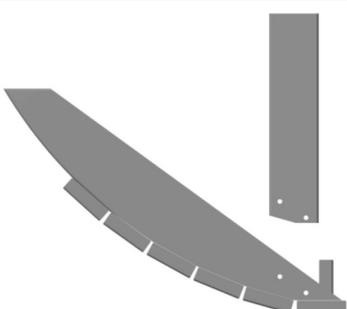
341

COASTLINE CASUAL
11 Industrial Drive
Coventry, Rhode Island 02816



ASSEMBLY INSTRUCTIONS

1 PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING. Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.

<p>Leg Set</p>  <p>x 1</p>	<p>4mm Allen Wrench (Actual Size)</p>  <p>Part Code: 4MMALLEN x 1</p>	<p>1/4 Lock Washer (Actual Size)</p>  <p>Part Code: 18/8-1/4LW x 4</p>	<p>1/4 Nut (Actual Size)</p>  <p>Part Code: 18/8-1/4-20N x 4</p>
<p>Foot Rest Assembly</p>  <p>x 1</p>	<p>50mm Connector Bolt (Actual Size)</p>  <p>Part Code: 125080 x 4</p>	<p>2 ATTACH LEGS TO FOOT REST ASSEMBLY</p>  <p>Place foot rest assembly upside down on a flat clean surface. Place leg inside foot rest assembly, aligning (2) pre-drilled holes. Install (2) 50mm connector bolts through the outside of the foot rest assembly, pre-drilled holes and through the pre-drilled holes in the leg. Tighten bolts with flat washers, lock washers and nuts. Repeat this process for the other leg.</p>	